

WIRELESS GEAR® MAGNETIC SPEAKER



Thank you for purchasing **WIRELESS GEAR®**. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

Contents of the Package

Magnetic mini speaker
USB-C cable
User manual



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

Thank you for purchasing our product. This manual contains instructions for the effective and safe use of the device. Please read the manual carefully before use and keep it safe for future reference. If you pass the product on to anyone, you should include this manual.

1. Safety Instructions

For indoor use only.

Inspect the device and its components before use.

Do not use if it is damaged.

Do not use outdoors or in

places where aerosol products (sprays) are used.

Do not use near heat sources such as radiators, stoves, etc.

Keep away from sources of ignition.

Do not immerse in water.

Do not place, store, or use the product near water.


Do not allow moisture to come into contact with electrical parts.

Do not attempt to repair, disassemble, or modify the product yourself.

To avoid hearing damage, you should limit the time you use this sound source at high volume and set it to a safe level. Prolonged exposure to high volume levels can cause hearing damage.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.

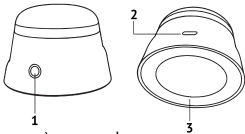

Connecting the Speaker

Note: Fully charge the battery before first use. This process takes about 1-2 hours. Connect the speaker to a suitable power source using the supplied USB-C cable. Press and hold the power button to turn the speaker on or off.

The speaker will automatically switch to Bluetooth mode.

Check that the smart device and the speaker are within range of each other (<10 m). Open Bluetooth settings on your smart device and select "**WG-BT-SP**" to connect. Control your music via the speaker or your device.

Note: The speaker will automatically reconnect after the first pairing.

4. Connect the two speakers you want to use together.

• Press the same power button twice on each speaker to start pairing.

5. Open the Bluetooth settings on your device.

• Press once to establish a connection.

• Start pairing the speakers over both speakers at the same time.

Note: After the first pairing, the speakers will automatically reconnect as soon as they are switched on.

Maintenance


Always unplug the speaker from the socket and switch off the speaker before storing it for a long period of time.

Store the speaker in a dry, cool place, away from direct sunlight.

Clean the speaker with a slightly dampened cloth and wipe it with a soft cloth.

Avoid completely discharging the battery to prolong its life.

Charge the speaker regularly.

Active Output power	5W
Operating time	2 Hours
Loading time	1-2 Hours
Charging cycles	150 Mal
Bluetooth-Version	5.3
Bluetooth-Reach	< 10 m
Frequency range	50Hz - 10KHz
Operating frequency	2 402 - 2 480MHz
EIRP	8 dBm
Sensitivity	13 dBm
Impedance	4 Ω
 Not suitable for Fast charging. Charger not included	

Disclaimer

All information, design, and specifications contained in this manual were correct at the time of this publication. As the product undergoes continuous upgrades and changes, however, the final device may have slight differences. The contents of this manual are subject to change without prior notice, and WIRELESS GEAR® will not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15C and 25C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Disclaimer

All information, design, and specifications contained in this manual were correct at the time of this publication. As the product undergoes continuous upgrades and changes, however, the final device may have slight differences. The contents of this manual are subject to change without prior notice, and WIRELESS GEAR® will not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

FCC Information

FCC ID:2AML6KR0622A

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter..

LIMITED WARRANTY

With receipt for proof of purchase, ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when purchased from an authorized retailer and sold in its original packaging, will be free from defective workmanship and materials for one year from the date of purchase (90-days for batteries) and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts and/or labor for the time period described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:
ESI Cases & Accessories
One Gateway Center, Suite 2600 Newark, NJ 07102
TechSupport@ESICellular.com