

105mm

A10

INSTRUCTION MANUAL


PORTABLE SPEAKER FOR OUTDOOR ACTIVITIES AND HOME USE.

MODEL:A10



145mm

REMOTE INSTRUCTION:

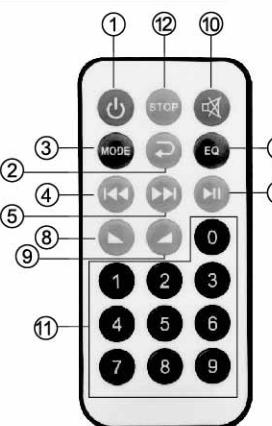

1. Stand-by.
2. Songs repeating mode.
3. Mode shift: you can shift the mode from bluetooth, aux, FM, USB/TF, etc.
4. CH-: previous radio channel.
5. CH+: next radio channel.
6. EQ: select EQ modes: Normal/Bass/Pop/Rock/Jazz. Etc.
7. Previous Song.
8. Next Song.
9. Play Music/ Pause.
10. Volume decrease
11. Volume increase
12. Number key 0-9: Press the number combination to quick select the song number or radio channel number to play.

DEAR CUSTOMERS

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.


SPECIFICATIONS:

RMS	5W+2.5W*2(10W)
Frequence Response	80Hz-20KHz
Input Impedance	10KΩ
S/N Ratio	80db
Speaker unit	3"+2"×2
Product Dimension	120*190*155
Input Voltage	DC 5V
Input Port	stereo 3.5mm Line In
Control:	volume/bass/usb/bluetooth

ACCESSORIES:

1. User manual: 1 pcs.
2. USB charge cable: 1 pcs
3. Remote: 1 pcs
4. 3.5mm Audio cable: 1 pcs

FUNCTIONS:

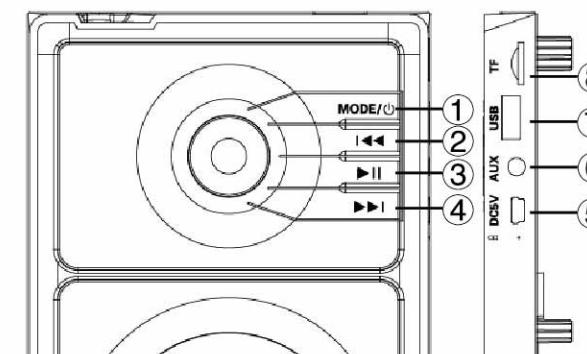

1.MODE : Long Press is power on-off function. Short press is mode shift (USB/TF, Bluetooth, LINE, FM etc.)

2.: Previous song or FM channel in USB/TF/BT/LINE or FM mode with short press. Long press in FM mode is searching the radio channel. Stop pressing is stop searching.

3.: Play/pause function when short pressing it in Bluetooth/USB/TF mode; Mute function when in Aux mode. Searching and save radio channel when long pressing it in FM mode.

4.: Next song or radio channel in USB/TF/BT/LINE or FM mode with short press. Long press in FM mode is searching the FM channel. Stop pressing is stop searching.

5.: DC 5V USB charge sockets.

6.: Aux input. Connect MP3 or mobile etc with 3.5 mm audio cable. Then you can play music in the MP3 or mobile.

7.: USB reader. Insert the USB disk. The product will read and play the MP3/WMA music in it.

8.: TF (Micro SD) card reader. Insert the TF card. The product will read and play the MP3/WMA music in it.

PROCEDURES FOR BLUETOOTH:

1. Long press the Power button to turn on the speaker. The speaker will produce sound "Ding dong ding" to indicate it is in bluetooth searching status.

2. Turn on the BT in your mobile. Search the "A10" and connect. When the bluetooth is connected successfully, the speaker will produce sound "Du du".

3. Play music in the mobile.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

版本：

德兴璞电子(深圳)有限公司
DAM PSONIC ELECTRONIC(SHEN ZHEN)CO.,LTD

订单号:

名称:A10 (说明书英文通用)

尺寸:105*145mm

料号:040-EA14528-001

材质、要求:105g铜板纸,正反面单黑印刷,对折

设计制图: 陈爱武

文件编号:

审核:

生效日期: 2015. 10. 12