

K61 Operating Instruction

Dear user:

Thank you for choosing our company's professional active audio products, the speaker is specifically design and produce for exercise, fitness, dance, opera, music, shopping guide, which are widely used in schools, shopping malls, indoor and outdoor activities, The sound is clear and in good quality,the entire outward appearance,designs succinctly naturally,.It has many advantages such as long working time, stable performance, convenient operation and so on, which is a good partner of your work and life.

Inflammable and explosive area:

In flammable and explosive areas, do not use the speaker, and comply with the relevant warning instructions, so as not to cause explosion or fire.

Inflammable and explosive areas include:

Gas station

The fuel area (such as: the deck of the ship under the cabin).

Transportation and storage facilities for flammable or chemical products.

Area with explosion danger signs.

Area with "turning off the two-way wireless device" sign.

Product features

- 1, Use imported high-power amplifier chip and advanced circuit design technology.
- 2, Use strong magnetic high performance frequency horn, sound loud and clear, covering a wide range of transmission.
- 3, external audio sound excellent, strong sense of sound level.

Contents

1.Product Feature	-----1
2.Using Instructions	-----2
3.Function Operational Specification	-----3,
4.Technical Parameters	-----5
5Package Contents	-----6


Instructions:

1. Play music u disk, SD card, regulating host the volume knob on the volume is adjusted to a proper sound effect, pay attention to avoid the maximum in volume for a long time, so that people feel upset and acceleration components of aging.
2. Don't put the speaker in a damp, high temperature, oil and other harsh environments, avoid direct exposure of sunlight and rain.
3. Don't put the speaker close to the bare fire, to avoid dangerous.
4. Don't put the volume of liquid in the speaker..
5. Equipment suitable for use in non tropical climate conditions.
6. Equipment suitable for the use of 2000 meters above sea level and the following areas.

Functional operation instructions:

1.Panel description


function operational specification :

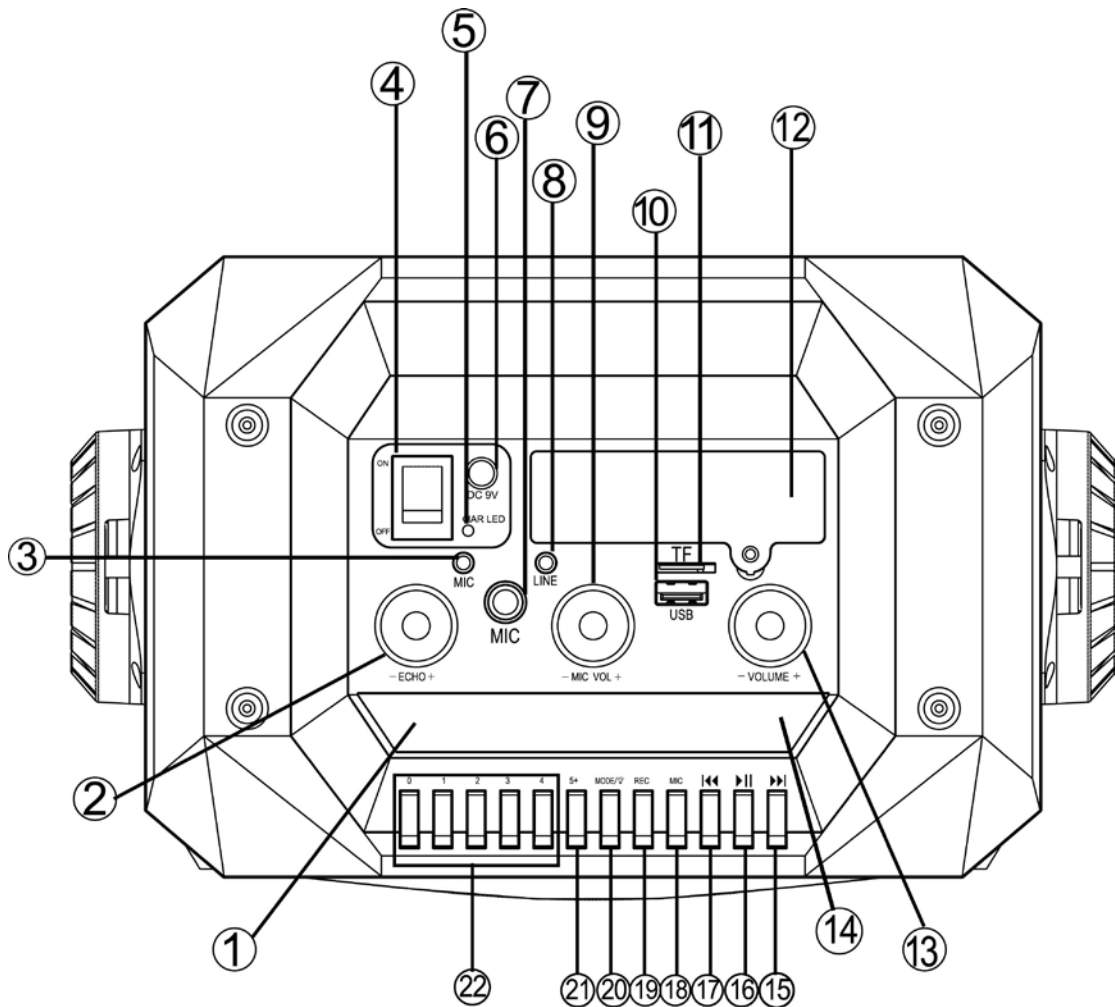

- 1, Digital display window;
- 2, Microphone Echo Volume knob
- 3, 3.5mm Microphone input port
- 4, Power switch
- 5, Charge indicator: When device charging, the light will be red; After full of charging, red light goes out;
- 6, DC input: input DC9V/1A ;
- 7, Microphone input port
- 8, line in input port
- 9, Microphone volume knob
- 10, USB interface: Insert U disk below 32G, Can play MP3 music files in the U disk
- 11, TF interface: Insert U disk below 32G, Can play MP3 music files in the TF card.
- 12, Battery packs
- 13, Volume knob
- 14, Infrared remote receiver module;

- 17/15,Prev/Next: when you play the U disk and TF card, short press to choose Prev/Next music, long press to manuloperation forwarder requence adjustment .
- in FM, a short press for existing radio, under a selected, long press for manual step frequency adjustment, the BT status to up/down a song music, When AUX input without this function;
- 16,Play/Pause:when play U disk and TF card,short press to play/pause.
- In the state of FM,short press is mute,long press is autiomatical search channel and store.
- In the state of BT, short press is play/pause, long press is disconnecting bluetooth.
- When at AUX state is mute.
- 18,Karaoke priority button: press this button, the digital tube MIC on light, into the microphone priority mode, then press this button again, the MIC die out, at this point, cancel the karaoke priority mode;
- 19,Record button:Long press to enter record state,then short press again to play record,long press to delete record.
- 20,Mode:Short press to switch BT,USB/TF,FM,AUX input state,long press to switch LED light.
- 21, 5 + button: U disk and TF card first play songs fast forward 5;
- 22, 0-4 number keys: Quick select songs for U disk ,TF card and Select the existed FM; It's no use for AUX and BT.
- 3>REMOTE INSTRUCTION:

The Remote instructions

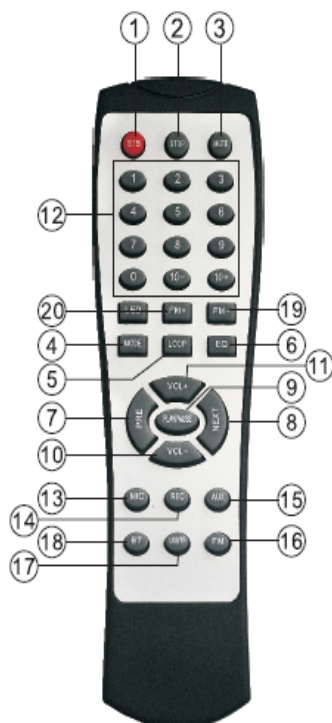

1. Stand-by
2. Stop
3. Mute
4. Mode shift
5. Recycle
6. EQ:select EQ modes:Normal/Bass/Pop/Jazz Etc.
7. Previous Soung/Radio Channel
8. Next Sound/Radio Channel
9. Pause/Play
10. Volume Decrease
11. Volume Increase
12. Number Keys 0-9:press the number combination to quick select the song number or radio channel number to play.
13. Karaoke priority:Press this button ,the Mic LED will be light,it marked enter into Mic priority mode, press this button again ,the Mic Priority closed,
14. Record/playback:Press this button to enter the record state, press again to play the recording.
15. AUX line Mode
16. FM Mode
17. USB/TF shift
18. Bluetooth Mode
19. FM trimming decrease
20. FM trimming increase

technical parameters:

1. Power Maximum.....600W
2. Frequency Response.....100Hz-20KHz
3. S/N Ratio..... ≥ 70 dB
4. Output Impedance.....4 ohm
5. Input voltage.....DC9V/1A

Package Contents-

1. Host.....1PC
2. User Manual.....1PC
3. Adaptor.....1PC
4. 3.5mm Audio cable.....1PC
5. Remote Control.....1PC
6. Wired microphone1PC

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.