

ANDROID SMARTPHONE

Sample; Palmo 1

Model No; PALMO 1

Brand; PALMO, MELROSE

USER GUIDE ANDROID 5.1

PRECAUTIONS

On the Road

Using a device while driving is illegal in many countries. Please refrain from using your mobile while driving.

Near Sensitive Electronics or Medical Equipment

Don't use your device near sensitive electronic equipment - particularly medical devices such as pacemakers - as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

While Flying

Your device can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

At a Petrol Station

Don't use your device at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

Making Repairs

Never take your device apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty. Don't use your device if the antenna is damaged, as it could cause injury.

Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

Near Explosives

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.

Emergency Calls

To make an emergency call your device must be turned on and in an area where there's network coverage. Dial the national emergency number and press "Send". Explain exactly where you are and don't hang up until help has arrived.

Working Temperature

The working temperature for the device is between 0 and 40 degree Celsius. Please don't use

the device outside the range. Using the device under too high or too low temperature might cause problems.

At very high volume, prolonged listening to a mobile device can damage your hearing.

1. TOUCH BUTTONS

The  button moves back one step to the previous menu/page.

The  button returns immediately to the main screen.

The  button will launch the applications and settings menu.



2. GETTING STARTED

Installing the Nano-SIM Card

Switch off your phone before installing or replacing the Nano-SIM card.

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.


3. HOME SCREEN

The home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display. The home screen contains shortcuts to your most-used applications and widgets.

The status bar displays system information, such as current time, wireless connectivity and battery charge status.

4. QUICK NOTIFICATION PANEL

When you receive a notification you can quickly view it by following the below instructions. Slide your finger from the top of the screen down to the center to access Notification Panel to see your notifications.

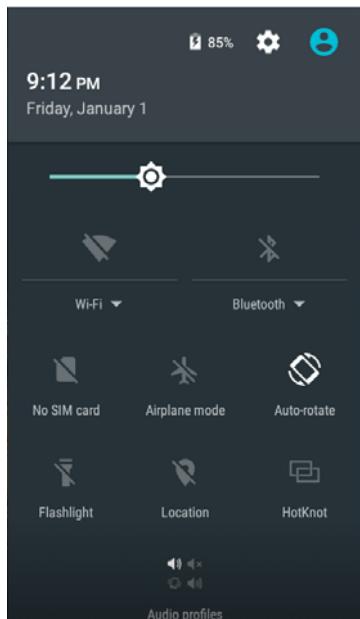

Through this menu, it is possible to modify the functions such as brightness, auto rotation, Wi-Fi, Bluetooth and more.

5. SETTINGS MENU

The settings menu allows you to adjust Tablet **cellphone** System Configuration.

To Change Settings:

1. Touch the “Settings” menu icon on the Application menu. The

Settings menu will open.

2. Touch a category title to view further options on the right side of the screen.

- Wi-Fi - Connect to/disconnect from wireless networks, view connection status
- Data usage - Enable/disable mobile data, view current usage, set mobile data limit
- Bluetooth - Connect or disconnect Bluetooth devices
- Display - Adjust display settings
- Audio Profiles - Adjust the different audio settings such as ringtones
- Prompts and notifications - Adjust different notification settings
- Storage - View your phone's internal and external storage settings
- Battery - View the status of your battery and make adjustments to power consumption
- Apps - A list of all apps downloaded and running
- Location services - Change approximate location detection, improve search results, GPS satellites
- Security - Adjust phone's security settings
- Accounts - Add or remove email and Google accounts such as Gmail, Google
- Language and input Select language - add to the dictionary, edit on-screen keyboard settings, vocal search, etc.
- Backup and reset - Backup and restore data, perform factory reset, etc.
- Date and time - Set date, time zone, time, clock format etc.
- About Phone - Displays information about your phone

7. MAKING AND RECEIVING CALLS

Once your SIM cards are installed turn on your phone and wait a few minutes for your phone to find a network.

Then select the Call  icon. Here you can dial a number or select

a contact from your stored contacts list to call. You can also view outgoing and incoming calls that have been made, as well as adding or removing contacts.

8. ANSWERING AND REJECTING CALLS

To answer a call - Slide your finger to the blue Call Answer key.

To reject a Call - Slide your finger to the Red Call End key.

To message - touch the message icon.

9. SOFTWARE KEYBOARD

then simply start typing.

Touchscreen

The touchscreen responds to finger touch.

Note:

- Don't place any object on the touchscreen for it may damage or crush the screen.

Single Click: Single click one icon to choose the icon or option you want.

Long Press: Press and hold an icon to delete or move an icon or app.

Drag: Press the icon and drag it to a different screen.

10. HOW TO CONNECT TO A COMPUTER

Note:

- Turn on your phone before connecting the phone to a PC by USB cable.

1. Use a USB cable to connect the phone with a computer. The phone will

automatically detect a USB connection.

2. A notification will pop up on the screen displaying USB connected, select the desired USB operation.
3. The USB connection has been successful.

11. CONNECTION TO INTERNET

Wireless:

1. Select “Settings” .
2. Select “Wi-Fi” and slide OFF to ON status.
3. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
4. Enter network key if necessary.
5. Once connected to a wireless network, settings will be saved.
6. Wireless icon will appear on the taskbar when connected successfully.

Note:

- When the phone detects the same wireless network in the future, the device will connect to the network automatically with the same password record.

12. MOBILE DATA AND INTERNET

Please Note: Cell Data may be turned “OFF” as a factory setting, to allow data to flow through your network provider please turn Cell Data “ON” either from your quick drop down menu or in > Settings > Cell Data, you will not be able to access the Internet when Cell Data is “OFF” and not connected to Wi-Fi.

NB: Mobile Data charges apply when this setting is “ON” - Data will be passed through your network provider.

Web Browsing

Connect to the Internet and launch the browser.

Type in the desired browsing URL.

13. BLUETOOTH

Select “Settings”, select Bluetooth from “OFF” to “ON”.

Search for the device you would like to pair with and select “PAIR”.

You will see a message “Connected Successfully”.

14. CAMERA

Touch the icon to enter camera mode and the interface is shown as follows:

1. Touch the icon to take a photo.
2. Touch the icon to start camera recording.
3. Touch the icon on the top right to see the previous picture and to delete, share or set it as a wallpaper. Click the return button to exit camera interface.

15. TROUBLE SHOOTING

How to Close Applications

When an application is not responding you can manually shut the app down

in “Running Services” menu. This will ensure the system responds as desired. Please shut down all **idle applications** to release memory and get the system speed back to normal. To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the **Application**  **Running** and the interface is Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

Power “OFF” / Restart / Reset the Phone

1. Press and hold the power button for 5 seconds and the device will be powered down.
2. Press and hold the power button for 20 seconds and the device will be forced to restart.

Restore Default Setting: If you want to reset the phone to factory settings and erase all materials, please press **Settings** **Backup and reset** **Factory data reset**.

WARNING:

factory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

Only can use adapter as below: SHENZHEN DINGLIXUN ELECTRONIC CO, . LTD.

Adapter model: DLX-F051000 : 100-240V, 50/60Hz, O/P 5V, 1000mA

Charging environment; -10°C-40°C

charging voltage; max DC 5V

SPECIFICATIONS	
CPU/PCB SOLUTION:	Quad-core MTK 6580
DISPLAY:	2. 45’’ (240*432)
SIM CARD SUPPORT:	Nano SIM

RAM:	512M
ROM:	8G
2G:	850/900/1800/1900
3G:	B2/B5
WI-FI:	YES
REAR CAMERA:	0. 3MP
FM RADIO:	YES
BLUETOOTH:	4. 0
GPS:	YES
CHARGER:	DC 5V-1000mA
USB:	5PIN Micro USB
AUDIO JACK:	3. 5mm 4eds; support iphone headset
BATTERY CAPACITY (mAh) :	720mAh
OS:	ANDROID 5. 1

Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.