

Celebration Series

Projection Light

Instructions

GST123



**ONLY USE SUPPLIED
TRANSFORMER**

IMPORTANT SAFEGUARDS

To reduce the risk of fire, electric shock, or injury when using any electric appliance precautions should be made. These precautions include but are not limited to:

Read all instructions

CAUTION! - Use only as directed.

This product has a polarized plug to reduce the risk of electric shock. It will therefore only fit into a polarized outlet one way. If the plug does not fit, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

DO NOT attempt to open the protective housing or operate the device if the aperture windows are damaged. If the unit requires service that involves removing the protective housing, contact the manufacturer. Opening the protective housing voids the warranty.

Use only three-wire outdoor extension cords that have three-prong grounding plugs, plugged into grounded outlets.

Before You Begin

Carefully unpack package contents to make sure all parts are presented. Some assembly is required.


Note: For your convenience ,one slide is inside of the projector .




Slide



Power Supply

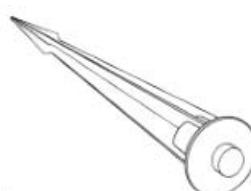

Ground Spike

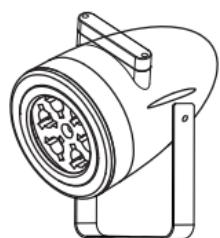

Light Projector

Transformer




Remote Controller



Fixed Screw

Installation

1. To attach ground stake, remove the hex screw, locking washer, and washer from the stake with the included Allen wrench.
2. Use the same hex screw, locking washer, and washer to attach the stake to the pivot mount.(See assembly diagram labeled "2" in the image of the above)
3. Position the projection by changing the angle of projector light

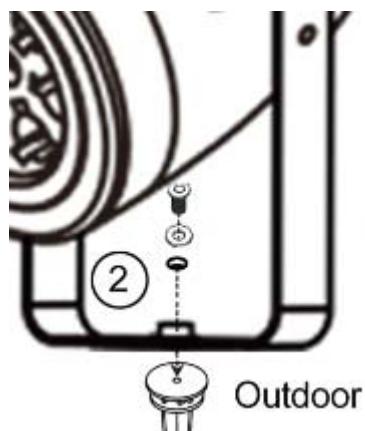


Installing Pattern Lens

Unscrew and remove the two screw holding the pattern lens in the projection light casing. Remove the pattern lens. One slide is already put in light projector.

Reinsert different pattern lens into the projection light casing, being careful to orient the pattern lens correctly with the arrow on the frame facing the front of the projection light. Finally, locking the two screws.

Remote Controller:

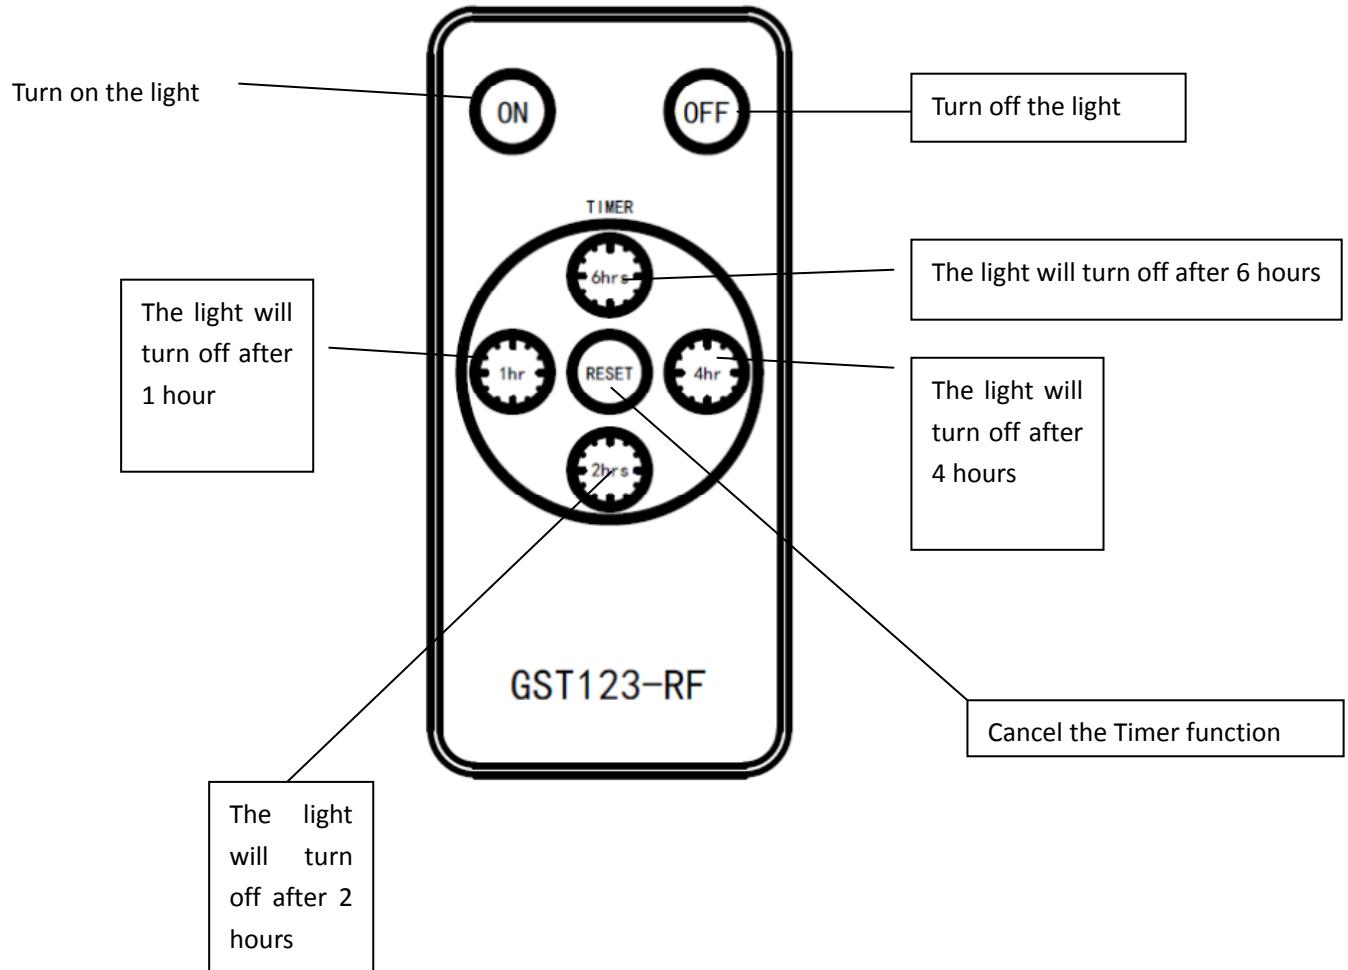

Product Specifications

LED	1.5W*4PCS
Input	100-277V~, 50/60Hz
Output	12V 500mA
Operation	Indoor/Outdoor
LED	4pcs*white(1W/pc)
Waterproof rate	IP44
Material	Housing: ABS , Bracket: Metal
Cable length	1M
Product size	76*113*295mm(With ground spike),76*113mm(Without ground spike)
Net Weight	0.315kg (With ground spike),0.295kg(Without ground spike)

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.