

# User Manual

**Product:** 8 inch tablet pc

**Trade Mark:** MTAB

**Model No.:** MTAB-ET8404G

## Contents

|  |    |
|--|----|
| Contents .....                                     | 1  |
| 1 Safety instructions .....                        | 2  |
| 1 Brief introduction for tablet product .....      | 7  |
| 1.1 Diagram for complete machine .....             | 7  |
| 1.2 Introduction to accessories of the tablet..... | 7  |
| 2 Quick start .....                                | 8  |
| 2.1 Key function.....                              | 8  |
| 2.2 Homepage interface .....                       | 8  |
| 2.3 Access to application program .....            | 9  |
| 2.4 Character input.....                           | 9  |
| 3 <b>Connection Establishment</b> .....            | 11 |
| 3.1 WIFI Connection .....                          | 11 |
| 4.2 Bluetooth Connection .....                     | 11 |
| 4.3 Troubleshooting .....                          | 12 |

# 1 Safety instructions

## Safety Precautions

Read these safety instructions before using your device and store them for possible future reference. Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

### BATTERY, CHARGER, AND OTHER ACCESSORIES

If the charger cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.

The power supply must be replaced by a new one in case of malfunction, because this power supply is not repairable.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

The charger is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.

Children should be monitored to ensure that they do not play with the charger.

The charger should always be readily accessible.

The device should not be exposed to dripping or splashing water.

No objects filled with liquids such as vases shall be placed on the device.

Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.

Naked flame sources, such as candles, should not be placed on top of the device.

The device is intended for use only in a temperate climate.

**CAUTION:** Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.

The battery should not be exposed to excessive heat such as sunshine, fire or similar.

Different types of batteries, new and used batteries should not be mixed.

The battery must be installed according to the polarity.

If the battery is worn, it must be removed from the product.

The battery must be disposed off safely. Always use the collection bins provided (check with your dealer) to protect the environment.

At full volume, prolonged listening to the portable audio device may damage the user's hearing and cause hearing troubles (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis).

So we recommend not to listen the portable audio device at high audio volume and no more than one hour per day at medium audio volume.

#### **SWITCH OFF IN RESTRICTED AREAS**

Switch the mobile device off where the use of mobile devices is not allowed or where there is a risk of causing interference or danger, for example on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

#### **ROAD SAFETY COMES FIRST**

Check the current laws and regulations regarding the use of mobile devices in the areas where you drive.

- Do not handle the mobile device when driving.
- Concentrate fully on the driving

- Use a hands-free kit whenever possible
- Leave the road and park up before making or receiving a call, if the driving conditions allow.
- Radio signals could affect some of the car's electronic systems such as the audio stereo and alarm systems.
- If the car is equipped with an airbag, do not hinder its deployment with fixed or wireless equipment. This could result in serious injury due to inadequate performance.

## INTERFERENCE

All wireless devices are susceptible to interference which may affect their performance.

## AUTHORISED PERSONNEL

Only qualified people are authorized to install or repair this product

## ACCESSORIES

Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products.

## KEEP THE EQUIPMENT DRY

This equipment is not water proof. Keep it dry.

## CHILDREN

Keep your mobile device in a safe place, out of the reach of young children. The mobile device contains small parts that may present a choking hazard.

## Precautions for use

This mobile device meets guidelines concerning the exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It was designed to meet the limits recommended by international guidelines to limit the exposure to radio waves. These guidelines were developed by and independent scientific organization, The ICNIRP; and include safety margins designed to ensure the protection of all, regardless of age and health.

The recommendations on exposure guidelines for mobile devices employ a unit of measure known as the Specific absorption rate or SAR. The SAR limit defined in the ICNIRP recommendations is 2.0 watts/kilogramme (W/kg) averaged over 10 grams of tissue. In tests to determine the SAR, the equipment is used in standard usage positions at its highest certified power level in all tested frequency bands. The actual SAR level of a device in use may be lower than the maximum value because the equipment is designed to only use the necessary power required reaching the network. That amount changes depending on a number of factors such as the distance from a network base station.

## Radio frequency interference

Radio frequency output from electronic devices can interfere with other electronic equipment

and cause malfunctions. Although this mobile device has been designed in accordance with EU regulations on radio frequency emission, mobile device wireless transmitters and electrical circuits can cause interference with other electronic equipment. We therefore recommend taking the following precautions:

Aircraft: Wireless equipment can cause interference in aircraft.

- Turn off your mobile device before boarding the aircraft
- Do not use on the ground until allowed to do so by the flight crew.

Vehicles: mobile device radio frequency emissions can affect the electronic systems of motor vehicles. In relation to your vehicle, check with the manufacturer or dealer.

Medical implants :

Medical equipment manufacturers recommend a minimum distance of 15 centimeters between a wireless device and an implanted medical device such as a pacemaker or defibrillator to avoid any interference with the medical device. It is recommended that people fitted with such devices :

- Always keep wireless equipment more than 15cm away from the medical device.
- Never carry wireless equipment in a breast pocket.
- Place such equipment at the opposite ear to the medical device.
- Turn off the wireless equipment if they think it is interfering with their device
- Follow the instructions provided by the medical implant manufacturer.

If you are fitted with a medical implant and have any questions related to the use of your mobile/wireless equipment, you should consult your doctor

Hearing :

Warning: Using a headset risks not be able to correctly hear outside sounds. Do not use a headset when it could endanger your safety. Some mobile devices can interfere with the proper operation of hearing aids.

Other medical devices: Radio transmitting equipment including mobile devices may interfere with the proper operation of insufficiently protected medical equipment. Consult a doctor or the medical equipment manufacturer to find out whether the equipment is sufficiently protected from external radio wave signals. Turn off your device where required by regulations, particularly in hospitals.

Health facilities: Hospitals and health facilities may be using equipment which is particularly sensitive to external radio frequency emissions. Turn off the mobile device when staff or notices tell you to.

Blasting sites and marked areas :

Turn off your device in potentially explosive areas. Follow all official instructions. Sparks in such areas can cause an explosion or a fire, resulting in serious injury or death. Turn off your

equipment in petrol/gas stations, especially when near the fuel pumps. Strictly follow usage restrictions in fuel depots, chemical plants or in places using explosives.

Potentially explosive areas are often, but not always, clearly signed. These include areas where it is normally considered advisable to turn off vehicle engines, the area below deck on ships, chemical storage or transfer plants, and areas where the air contains chemical products or particles, such as grain, dust and metal powder. Check with the makers of LPG (such as propane or butane) vehicles that the device can be used safely in their vicinity.

All our mobile devices conform to international standards and regulations, and if need be national ones, with a view to limiting user exposure to electromagnetic fields. These standards and regulations were adopted after the completion of extensive scientific research. This research established no link between the use of the mobile device and any adverse effects on health if the device is used in accordance with standard practices.

However if you would like to reduce the level of exposure to radio frequency radiation you can limit your use of wireless, because the time in contact with is a factor of exposure for a person, and you can move away the device from you, because the exposure level decreases with a smaller distance.

# 1 Brief introduction for tablet product

## 1.1 Diagram for complete machine



## 1.2 Introduction to accessories of the tablet

### **Packing list**

The following articles are included in your packing box of the tablet:

- Complete machine of tablet
- Power adaptor
- USB connecting line
- User's manual

## 2 Quick start


### 2.1 Key function

#### Descriptions for key function:

|            |  |
|------------|--|
| Power key  | <ul style="list-style-type: none"><li>● Press this key for a long time to start up</li><li>● Under starting up state, press this key for a long time to pop up shutdown option</li><li>● Under starting up state, press this key to close the screen</li></ul> |
| Volume key | <ul style="list-style-type: none"><li>● Press it can increase or decrease machine volume</li></ul>   |

### 2.2 Homepage interface

All application programs on the machine will be displayed on the main menu screen. You may use application program, shortcut and user-defined mode to set wallpaper of your homepage interface.

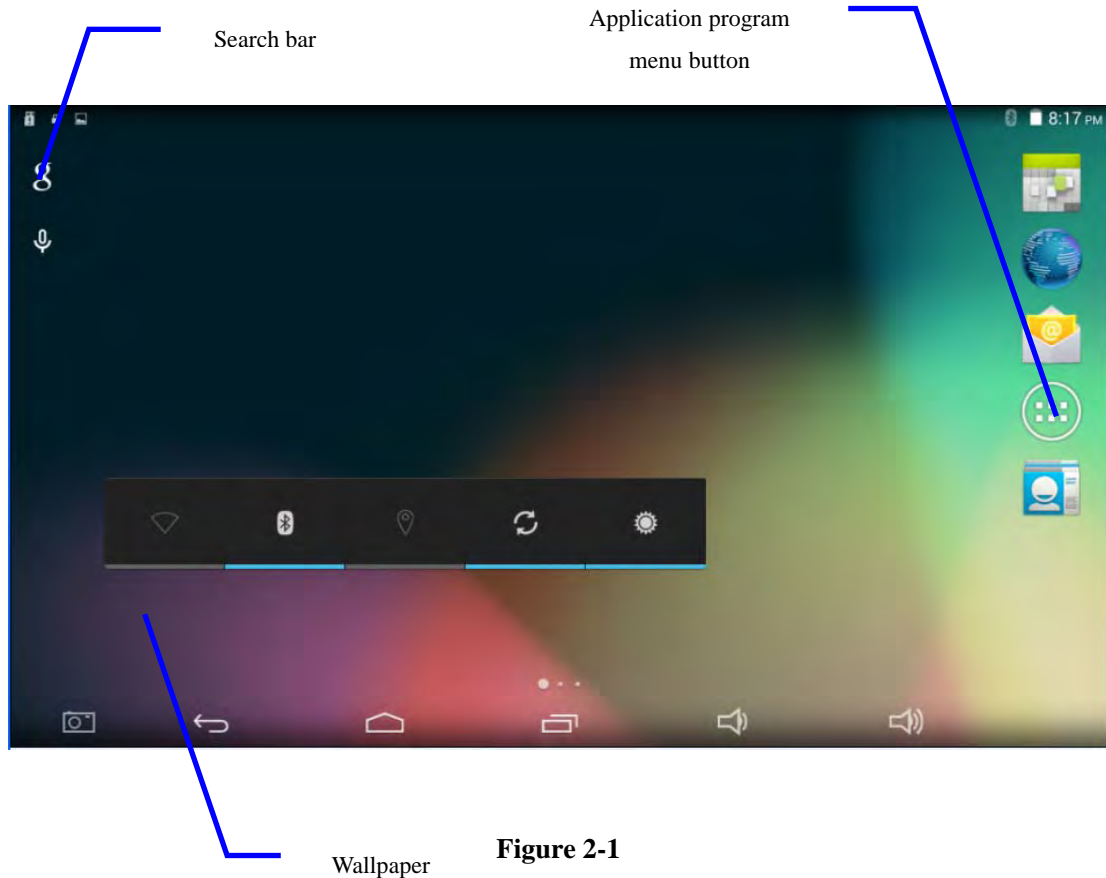 

**Figure 2-1**



## 2.3 Access to application program

### How to visit application program of the tablet:

1. Please click application program menu. As shown in Figure 2-2.
2. Select the application program you want to visit.
1. If you want to exit the program interface, press the return key to the last interface, or press the homepage key to return homepage interface directly.



Figure 2-2

## 2.4 Character input

### Use screen keyboard

When you start the program or select text edit box needing to input characters or numbers, screen keyboard will show. The following input methods are provided for the keyboard to select.

1. Android keyboard
2. Input method of a third party (user can install them by himself)

### Select the input method you need to use

 
According to presetting, the tablet will display Android keyboard when you want to input characters.

3. Press menu key in homepage interface, then click **setting**.

4. **Click language and keyboard.**
5. All of the input methods already installed on your tablet will be listed in the text setting region.
6. Select the input method you want..

### Use and switch input method

1. In the character input interface, click keyboard icon under the status bar, until popping up of editing text menu.
2. Select input method you need.

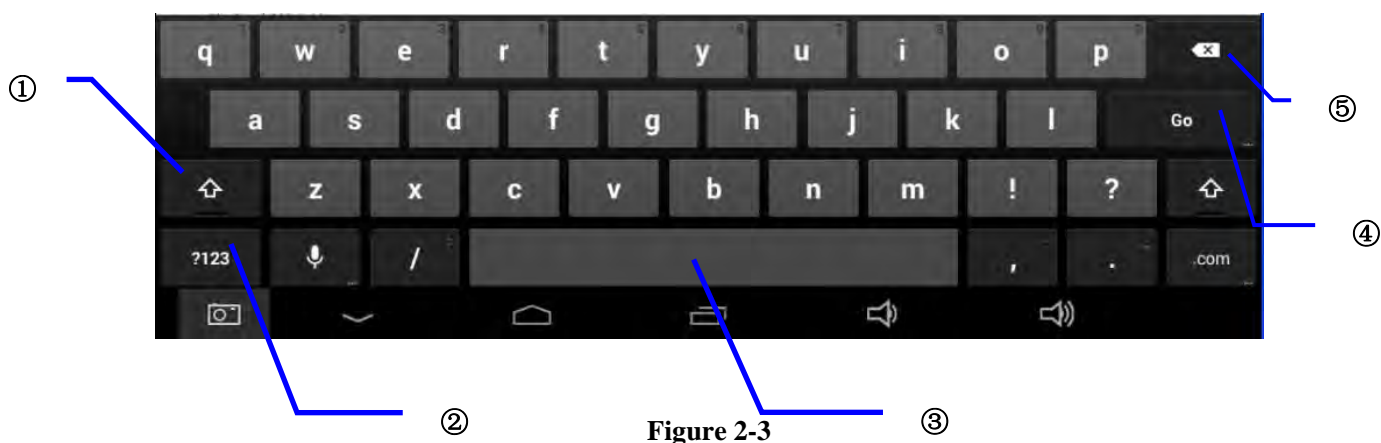

|   |   |
|---|---|
| 1 | Switch input capital and small letters                            |
| 2 | Switch character input mode and symbol/figure input mode          |
| 3 | Click to insert space   |
| 4 | Click to execute carriage return                                  |
| 5 | Click and press on to delete characters on the left of the cursor |
|   |   |
|   |   |

## 3 Connection Establishment

### 3.1 WIFI Connection

Your tablet can be connected onto Wi-Fi network to connect the operation:

1. Click the **Setting**;
2. Click Wi-Fi and open wi-fi switch;
3. After opening Wi-Fi, the searched Wi-Fi network can be scanned automatically from the equipment in the windows on the right.
4. Select the Wi-Fi network required to be connected, if the password is added, pop up the password input windows and input the corresponding password.
5. Click the Connection

Click here and select  
WIFI network

Advanced Wifi setting option



Figure 3-1

### 4.2 Bluetooth Connection .

**Application of bluetooth** (Figure 3-2)

1. Setting procedure of entering into bluetooth: set -> bluetooth set, open the bluetooth equipment
2. Name of equipment: you can randomly change the name of bluetooth for your tablet by pressing Menu key.
3. Detectability: open this function by clicking the place for name of bluetooth, which indicates that your tablet bluetooth can be searched by other bluetooth equipments, this default time for this opening is of 120 seconds.
4. Scan and look for equipment: you can detect the equipment desired to be connected by utilizing this function.
5. Bluetooth: after employing the scan to look for the equipment, all bluetooth equipments searched by your tablet can display under this function.

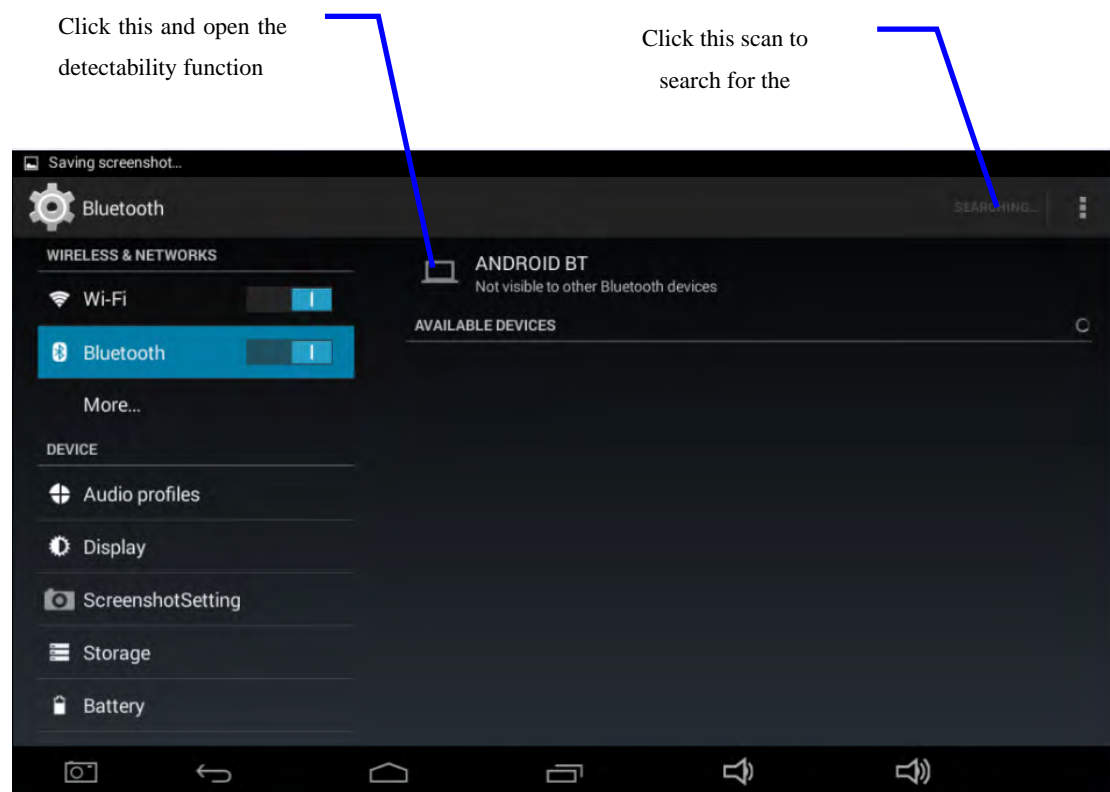 


Figure 3-2

## 4 Troubleshooting

### 1. slow initial boot for the tablet

After system upgrade of the tablet, initial boot needs installation of the pre-installed software applications, and for about 2-3 minutes, it runs faster.

### 2. Tablet can not be connected to WIFI

- Ensure that the wireless router providing the network services works properly.
- Ensure the tablet and the wireless router are kept with certain distance, and between which no wall or other obstacles exist.
- Ensure the user name and the password are correct

### **3. Tablet feels hot**

When multiple applications are running at the same time, or the screen is adjusted to the brightest, or it is recharging, this situation is normal.

### **4. System is disordered and does not work properly**

Installation of some third-party applications may lead to system failure, and you can press the reset button to reset the system.

### **5. Unable to create e-mail or regist applications**

- Ensure your network is properly connected to the Internet.
- Ensure the e-mail is set up correctly.
- Ensure your system time and the local time are consistent.

Copyright © 2016. All rights reserved.

Product features, specifications and appearances are subject to change without notice.

Android is a trademark of Google Inc.

## **Warranty conditions**

### **OPERATING MANAGEMENT:**

Your product is guaranteed 1 year.

To request support, contact the customer service at +xxxxxxxxxxxxxx

You will then be asked the defective part and the original invoice stating the product regulation.

We may ask you for photos of your appliance.

### **FAILURE TO PACKING:**

If it appeared, after unpacking the product or device, a vice preventing the use of the product in its expected configuration, contact the customer service within 72 hours worked.

## **DISCLAIMER OF WARRANTY**

### **DISCLAIMER OF WARRANTY RELATED TO THE ORIGIN OF DAMAGES**

The guarantee does not apply in case of accidental physical damage, it does not cover such damage and failures that resulted:

- improper installation (of a bad installation) or a misuse or poor maintenance of the product.
- improper use of the material or not complying with the instructions in the user manual.
- lightning, flood, fire, power surge, shock, poor ventilation, a fall, discoloration due to the action of light, burning, humidity, excessive heating without humidifier, or irregular ground or insects.
- repairs made and / or working on the hardware and / or opening of it by an unauthorized person by the manufacturer.
- maintenance, repair or replacement of parts due to normal usury or failure to maintain.
- modification of the construction and original features of the guaranteed product.
- corrosion, oxidation, a bad connection or an external power supply problem.

### **EXCLUSION OF WARRANTIES RELATING TO THE NATURE OF DAMAGES (INDIRECTS DAMAGES)**

The guarantee covers only the right to repair or replace the guaranteed product.

Consequently, the indirect damage resulting from the failure or damage not covered by warranty, including:

- Commissioning costs, adjusting, cleaning;
- Damage of any kind resulting from the unavailability of the product guaranteed during the period between deterioration and failure and repair or replacement of the product guaranteed.

### **OTHER EXCLUSIONS**

- Damage and faults under specific exclusions in the warranty manufacturer guaranteed product, as mentioned in the product instructions for use;
- The aesthetic damage;
- The products guarantee that the customer is not able to return or those who returned without their accessories.

### **FCC Notes:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**FCC ID: 2AMQA-MTABET8404G**