user's manual

Tablet pc

Model: 7M



1. Tablet desktop unlock

The default lock screen mode of the system is to slide and unlock. After booting, it will automatically enter the lock screen interface.



Clicking on the locked icon will automatically display the ripple to the unlocked position. This is an effect added to the Android 4.0 system. Drag the lock icon all the way to the small lock icon on the circle to unlock.





2. Main interface

After unlocking, the main interface is displayed. When the finger slides left and right on the screen, the page can be switched, and all applications are displayed on the main interface. Click on the middle pattern or swipe up to show all the programs on one interface.



It can change the direction of the main interface in real time according to gravity sensing.



3. Button introduction





4. Message notification

The tablet's lighting and time are displayed in the upper right corner of the screen. On the left and any notifications will be displayed. When we slide down in the main interface, the notification bar will be displayed.



Click on the icon below in the notification bar to enter the settings interface. Any settings about the product can be validly set here



5. Open/close the program in the background

Click on the main interface You can display all the running background programs, click the icon to switch from the background to the current program, and slide left and right to end the program.





6. Install/remove programs on your tablet

Just click on the Android store on the tablet, download the program you want, download the automatic installation, after the installation is complete, there is a program icon on the main interface.




Delete the program, select the program to be deleted, press and hold for 3

seconds, the trash can will appear on the screen, and the program can be placed directly in the trash can, indicating that the program has been deleted.

7. Camera

Click the camera icon to open the camera function directly. The main function of the camera is to take pictures and record video. Some software can implement network video functions, such as WeChat.

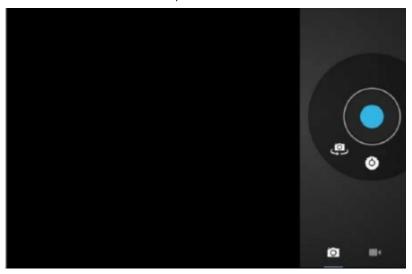

8. Install TF card

Note: Please install TF card in the state of shutdown.



Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

RF exposure compliance statement:

This device has been evaluated to meet the general RF exposure requirement

Warranty certificate

Client's name :
Contact number :
Username :
Correspondence address:
Email address:
Product information :