




ULTRASONIC BLUETOOTH® DIFFUSER INSTRUCTION GUIDE

NT Ultrasonic bluetooth diffuser
NT60236DIF

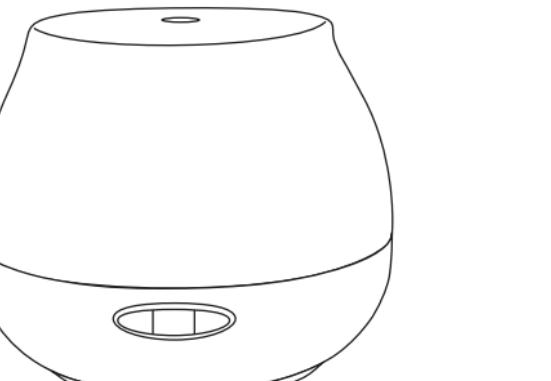

Ultrasonic Bluetooth® Diffuser

DIFFUSER STRUCTURE & PARTS

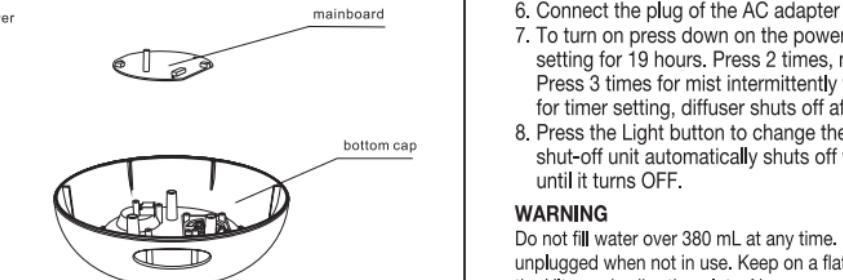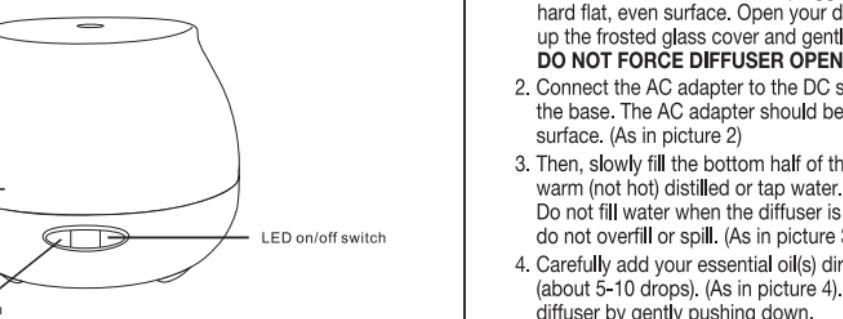

Ultrasonic Bluetooth® Diffuser

HOW TO USE

1. First, make sure diffuser is unplugged. Place diffuser on hard flat, even surface. Open your diffuser by gently pulling up the frosted glass cover and gently place on flat surface. **DO NOT FORCE DIFFUSER OPEN.** (As in picture 1)
2. Connect the AC adapter to the DC socket on the bottom of the base. The AC adapter should be placed on a stable flat surface. (As in picture 2)
3. Then, slowly fill the bottom half of the diffuser with 380 mL warm (not hot) distilled or tap water. Do not use well water. Do not fill water when the diffuser is in operation. Caution, do not overfill or spill. (As in picture 3)
4. Carefully add your essential oil(s) directly into water tank (about 5-10 drops). (As in picture 4). Re-attach top half of diffuser by gently pushing down.
5. Re-attach the main frosted glass cover. **MUST BE PROPERLY FASTENED IN THE RIGHT POSITION BEFORE USE.** (As in picture 5)
6. Connect the plug of the AC adapter to the power supply socket.
7. To turn on press down on the power button. Press 1 time, mist continuously stays on the low setting for 19 hours. Press 2 times, mist continuously stays on medium setting for 13 hours. Press 3 times for mist intermittently works for 38 hours (on/off per 10 seconds). Press 4 times for timer setting, diffuser shuts off after 4 hours of medium setting use.
8. Press the Light button to change the LED mood (bright/dim/interruption). The Safety Auto shut-off unit automatically shuts off when water runs out. To turn off, press the mist button until it turns OFF.

WARNING

Do not fill water over 380 mL at any time. Leave the power off when there is no water in tank and keep unplugged when not in use. Keep on a flat surface away from electronics and clean often. Do not touch the Ultrasonic vibration plate. Never move diffuser when in use or touch with wet hands. Make sure cord is clear from pathways and do not pull plug. Keep away from children and pets.

BLUETOOTH® INSTRUCTIONS

Plug in the diffuser to activate the Bluetooth® connection. Initiate the Bluetooth® function in your device settings, search and match your Bluetooth® device and choose "Nature's Truth". After connecting to the Bluetooth® speaker successfully, the song you select will play on the speaker.

ATTENTION AND NOTES

- This diffuser operates maximum up to 19 hours continuously.
- It is normal that the mist produced varies in intensity.
- The types of water used, the temperatures and wind direction will affect the mist produced.
- The aroma diffuser cannot operate without water.
- Use only 100% pure essential oils. It's possible to damage the diffuser if the oil used contains synthetic chemicals.

ATTENTION TO LEAKAGE

If the diffuser overturns when in use, please handle as follows:


1. Turn off the power supply and open the main cover.
2. Drain off any water still left in the water tank. Let dry for 24 hours before using again.

Ultrasonic Bluetooth® Diffuser

MAINTENANCE METHOD

General maintenance is needed once every 5 uses or 3-5 days of usage. The maintenance or cleaning must be according to the following procedures

1. Turn the power supply off and remove the main cover.
2. When there is water left in the water tank, tilt the diffuser toward the drainage side to drain out the water.
3. Clean all parts with a damp, soft cloth that has been soaked in warm water with some dish soap added. Use a cotton swab to clean any stains present on the corners of the water tank.
4. Do not use any alcohol or vinegar for cleaning. It may damage the diffuser.

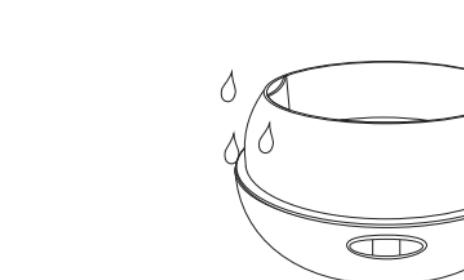

Ultrasonic Bluetooth® Diffuser

