

smART PIXELATOR

Activites Display Screen

Tray holding pins

Control Buttons

LED Indicators

Content Card Slot

Power Jack (back)

On/Off Switch (back)

* 2 Battery Compartment (bottom)

Content Card



WARNING:

CHOKING HAZARD-Small parts.
Not for children under 3 years.

CAUTION-ELECTRIC TOY:


Not recommended for children under 3 years of ages. As with all electric products, precautions should be observed during handling and use to prevent electric shock. AC adapter:
INPUT:100-240VAC, 0.3A MAX 50/60Hz;
OUTPUT: 5.9V 1.0A

The toy should be periodically examined for potential hazardous parts to be repaired or replaced.

SIMPLE SET UP

1. Insert 4 C batteries (not included) or plug-in the smART pixelator™ AC Adapter (included).
2. Flip the switch on the back to turn on the tablet.
3. Insert the pre-loaded activity pack into the back of the tablet.
4. After 10 minutes with no activity the tablet light will automatically turn off. Reactivate the light by using the buttons in the app or on the tablet.

CONTROL BUTTONS

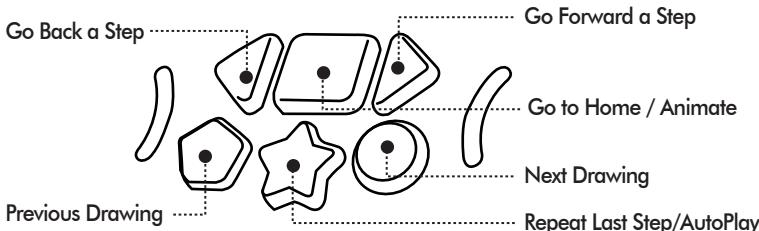

SAFETY INFORMATION


BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Do not mix old and new batteries. Only batteries of the same or equivalent types as recommended to be used. Batteries are to be inserted with correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short circuited. Dispose of battery(ies) safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.

BATTERY INSTALLATION

To insert or change the batteries, twist the screw counter-clockwise to loosen. Remove old batteries and insert 4 C batteries with the correct polarity. Replace the screw and twist clockwise to close.

**2 TRAYS -
EACH TRAY HOLDS
2 C BATTERIES**

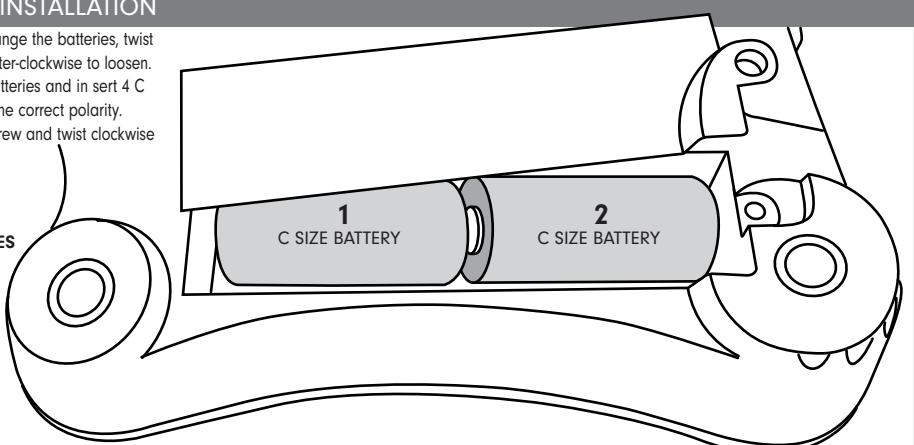

AC ADAPTER:

Transformers / charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer/charger until the damage has been repaired.

The toy is not intended for children under 3 years old;

- 1) The toy shall only be used with a transformer for toys
- 2) The model number XY06J-0601000Q-EW/
XY06J-0601000Q-BW/
XY06S-0601000Q-UW/XY06S-0591000Q-UW/
XY-0601000-A or specification of Input Voltage:
AC 100-240V 50-60 Hz, Output Voltage: DC 5.9V, 1A,
transformer for use with the toy
The transformer is not a toy;
- 3) Toys liable to be cleaned with liquid are to be disconnected from the transformer
4) disconnected from the transformer
before cleaning.

RADIO STATEMENT

Warning: Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device

QUICK START

1. Download the "smART Pixelator" app on your mobile device or tablet.
2. Turn on your Bluetooth and connect to the "smART Pixelator" by clicking on the "connect" button at the top right of your screen.
3. Choose your pixel: use Pixel Beads or Pixel Pegs or Pixel Sequins.
4. Pick a design:
 - Choose from 50 projects
5. Customise it:
 - Change the color
6. Animate it:
 - Bring finished projects to life
7. Create an Original!
 - Engineer your own projects with the smart device and a FREE app.

Requires Android 5.0+
Requires Apple iOS 8.0+



For more fun, additional Creativity and Learning Packs are available at:

www.smartpixelator.com

