

 
# smART PIXELATOR™

Activites Display Screen

Tray holding pins

Control Buttons


LED Indicators

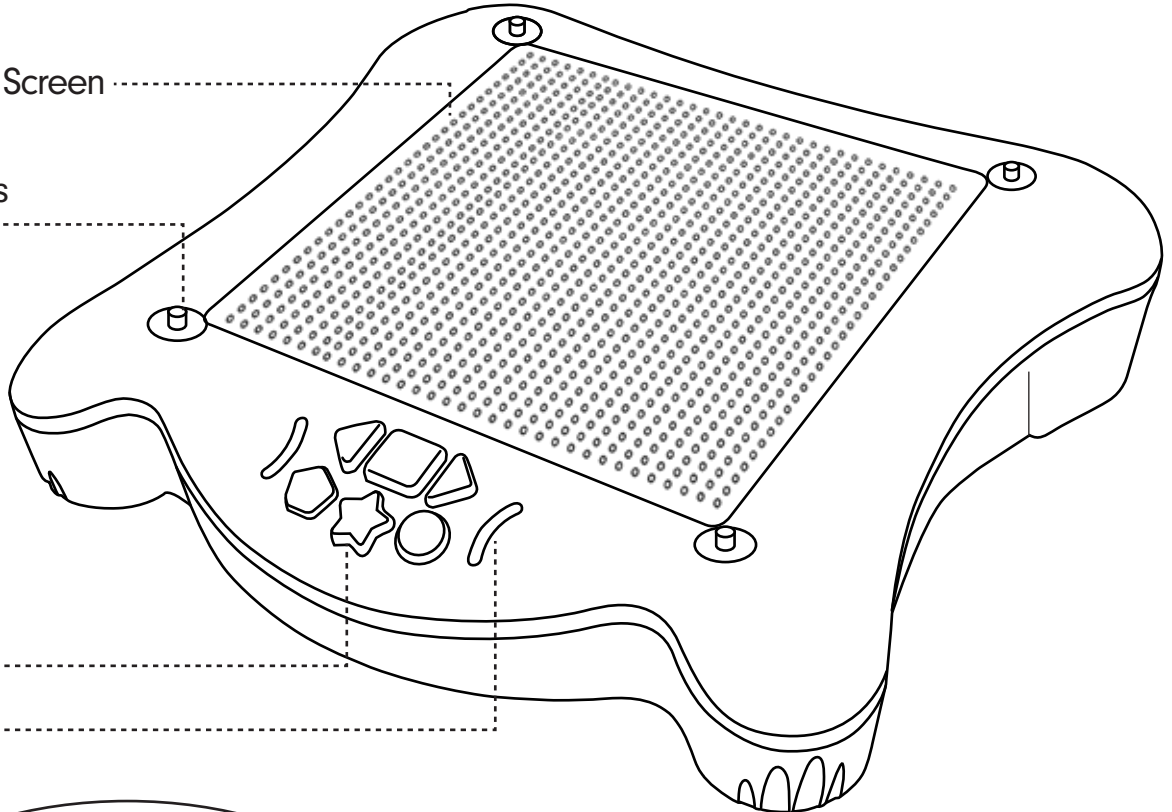

Content Card Slot

On/Off Switch (back)

 Power Jack (back)

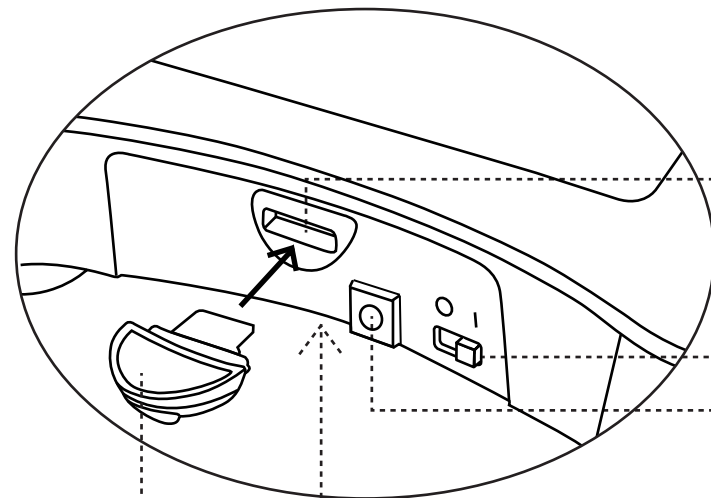

Content Card Slot

\* 2 Battery Compartment  
(bottom)

Packing/instruction sheet has to be kept  
since it contains important information.

**WARNING:**  
**CHOKING HAZARD**-Small parts.  
Not for children under 3 years.

## CAUTION-ELECTRIC TOY:

 
Not recommended for children under  
3 years of ages. As with all electric  
products, precautions should be  
observed during handling and use to  
prevent electric shock.

AC adapter output: 6V, 1A 60 Hz

## SIMPLE SET UP

1. Insert 4 C batteries (not included) or plug-in the smART pixelator™ AC Adapter (included).
2. Flip the switch on the back to turn on the tablet.
3. Insert the pre-loaded activity pack into the back of the tablet.
4. After 10 minutes with no activity the tablet light will automatically turn off. Reactivate the light by using the buttons in the app or on the tablet.

## CONTROL BUTTONS

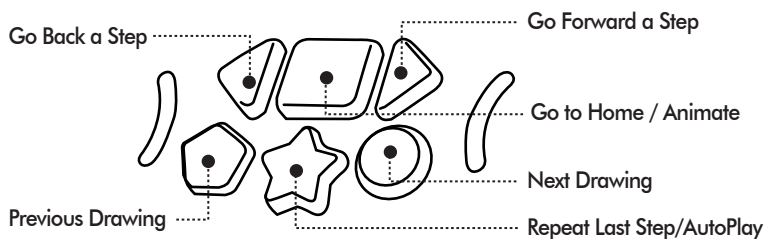

## QUICK START

1. Download the "smART pixelator" app on your mobile device or tablet.
2. Turn on your Bluetooth and connect to the pixelator by clicking on the "connect" button at the top right of your screen.
3. Choose your pixel: use Pixel Beads or Pixel Pegs or Pixel Sequenies.
4. Pick a design:
  - Choose from 50 projects
5. Customies it:
  - Change the color
6. Animate it:
  - Bring finished projects to life
7. Create an Original !
  - Engineer your own projects withe the smart device and a FREE app.

Requires Android 5.0+  
Requires Apple iOS 8.0+



**For more fun, additional Creativity and Learning Packs are available at:**

**[www.smartpixelator.com](http://www.smartpixelator.com)**

## SAFETY INFORMATION

### BATTERY SAFETY INFORMATION

 
In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent types as recommended to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire.
- The batteries inside may explode or leak.

### BATTERY INSTALLATION

To insert or change the batteries, twist the screw counter-clockwise to loosen. Remove old batteries and in sert 4 C batteries with the correct polarity. Replace the screw and twist clockwise to close.

**2 TRAYS -  
EACH TRAY  
HOLDS  
2 C BATTERIES**

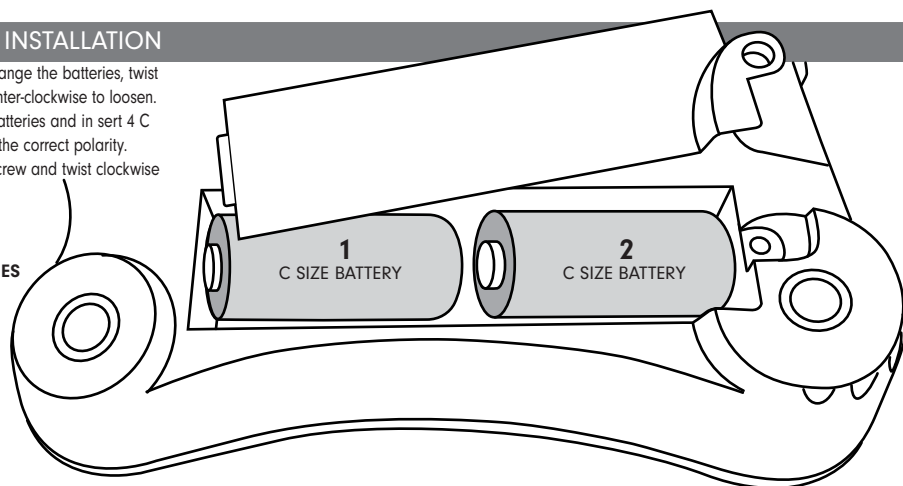

### AC ADAPTER:

Transformers / charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer/charger until the damage has been repaired.

The toy is not intended for children under 3 years old;

- 1) The toy shall only be used with a transformer for toys
- 2) The model number XY06J-0601000Q-EW/  
XY06J-0601000Q-BW/  
XY06S-0601000Q-UW/XY06S-5901000Q-UW/  
XY-0601000-A or specification of Input Voltage:  
AC 100-240V 50-60 Hz, Output Voltage: DC 6V, 1A,  
transformer for use with the toy
- 3) The transformer is not a toy;
- 4) Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning.

### RADIO STATEMENT

Warning: Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



smART pixelator™ is a trademark of Flycatcher Inc.

Copyright © 2018  
Flycatcher Inc.  
All rights reserved.

Visit us at:  
[www.smartpixelator.com](http://www.smartpixelator.com)

For more detailed instructions, questions or problems, please visit [www.smartpixelator.com](http://www.smartpixelator.com)