


USER MANUAL

TX221 Two button

Indicator light


Press this button to turn on the device

Press this button to turn off the device

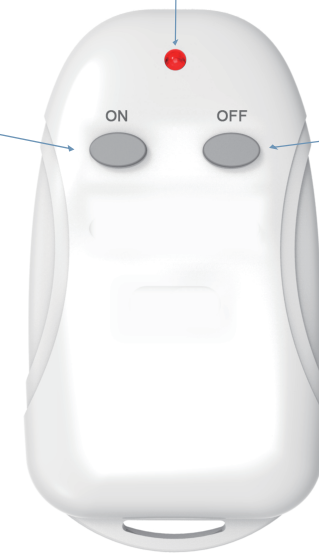

battery cover

TX221-1 Two button with lever

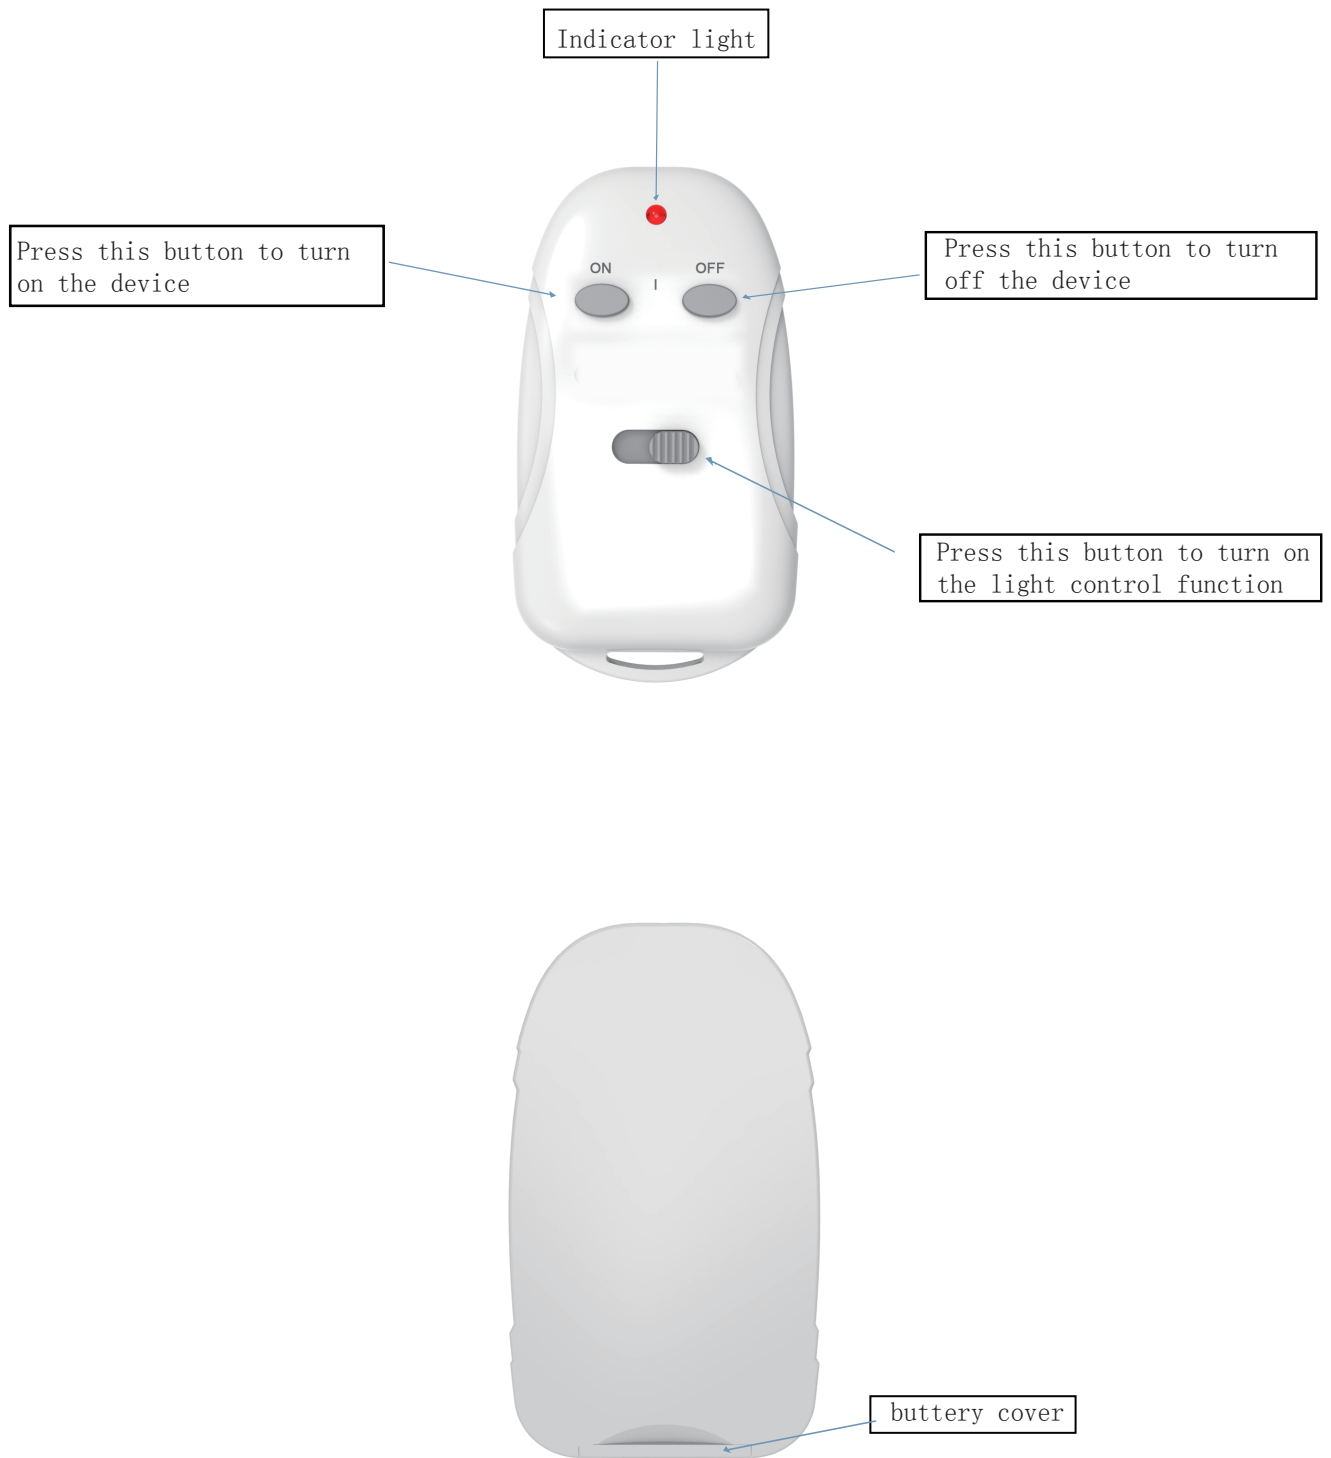


TX221-4 Four button

Indicator light


Press these button to turn on the device

Press these button to turn off the device

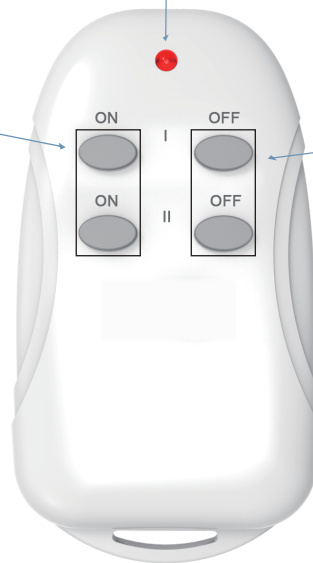


buttery cover

TX221-2 Four button with lever

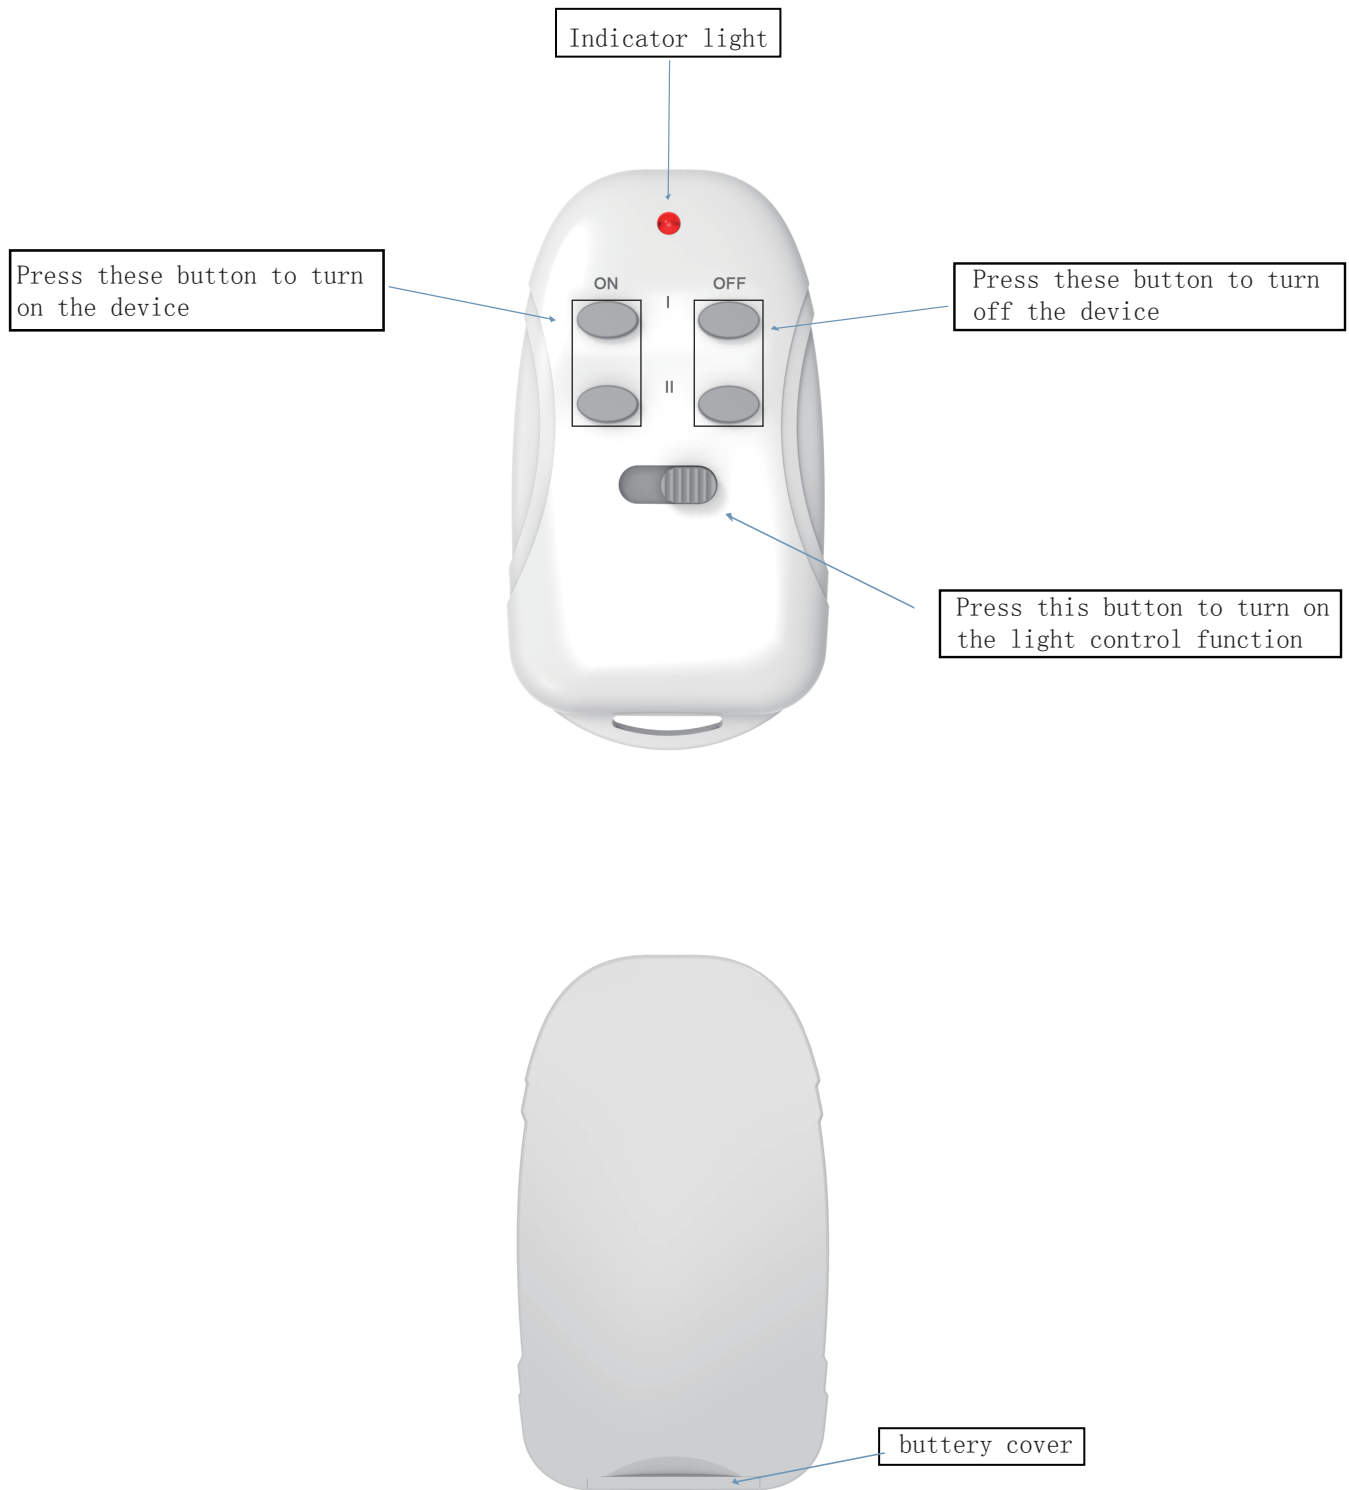

TX221-6 Six button

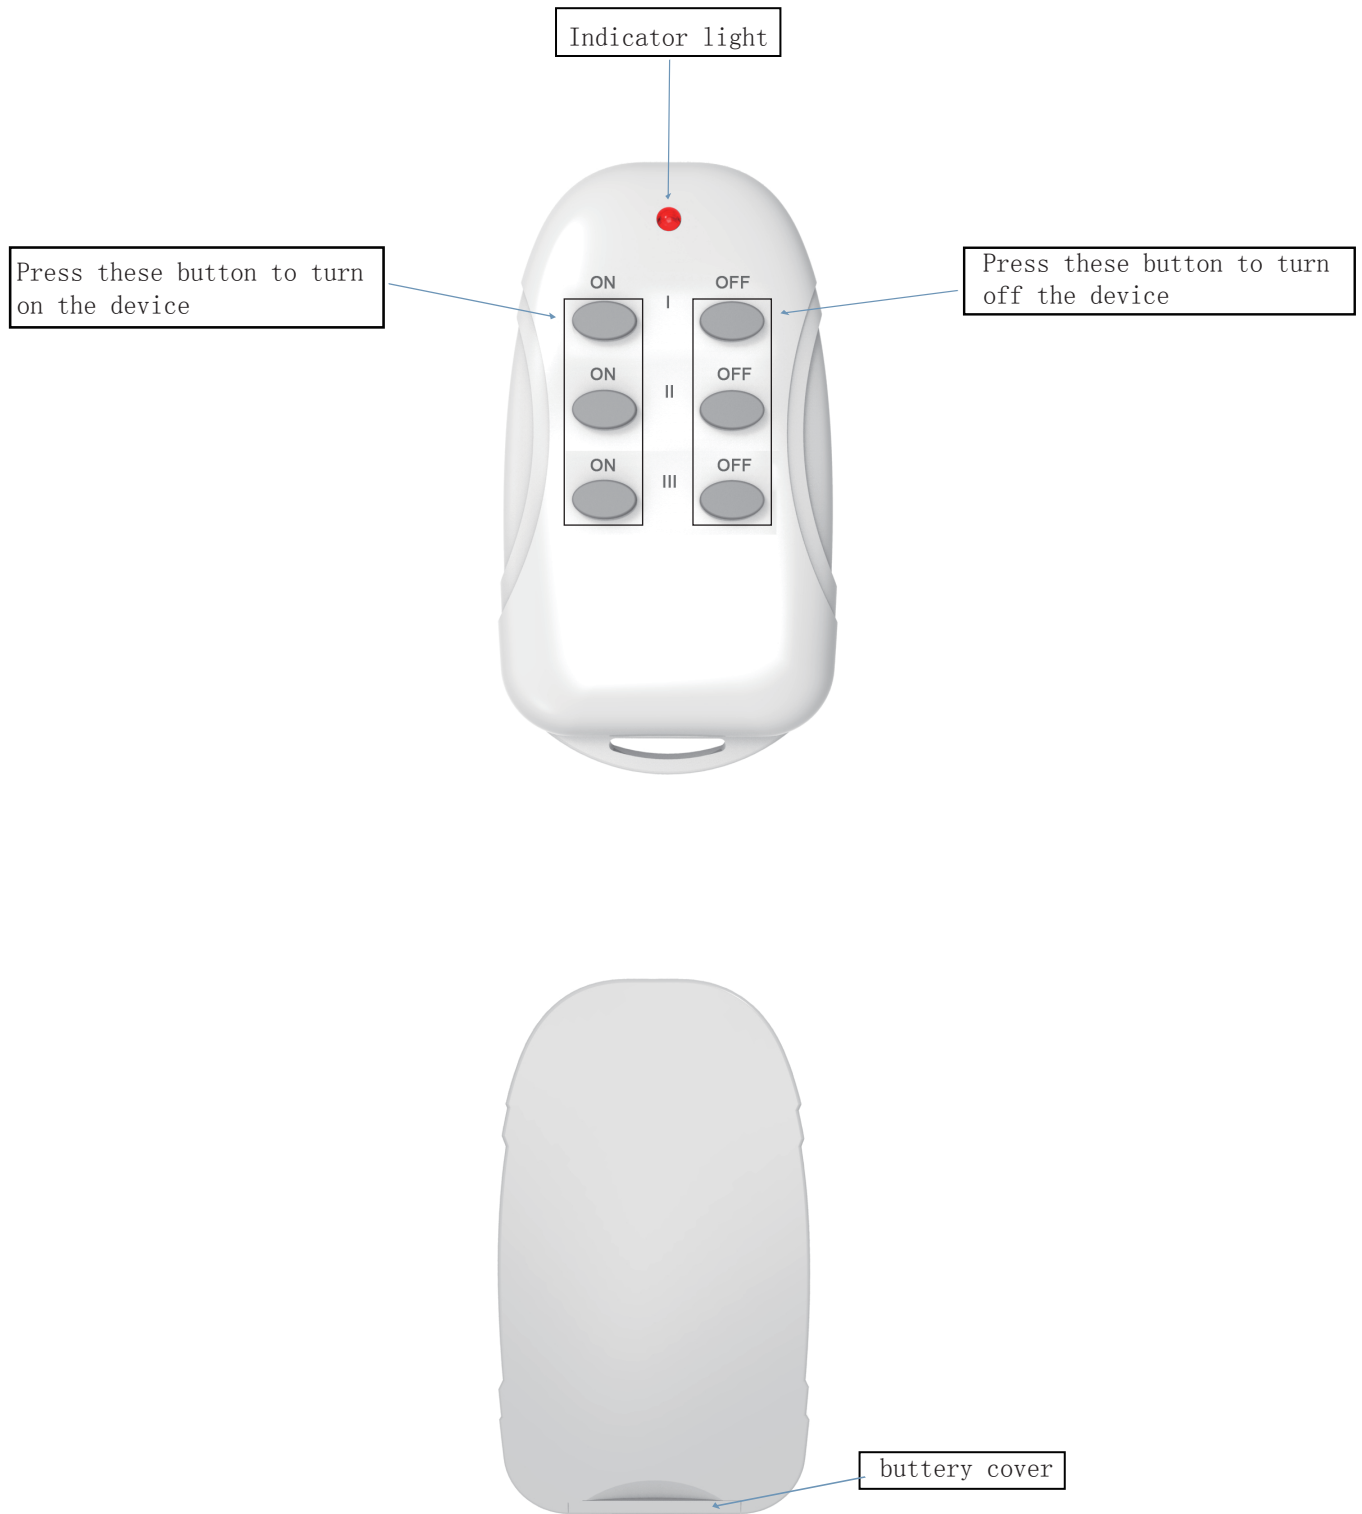

This is a transmitter used for control the device, the device maybe a light, fixed camera, home appliances and so on. The receiver usually connected the control switch which can control the device on and off.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.