 



## SPEAKER

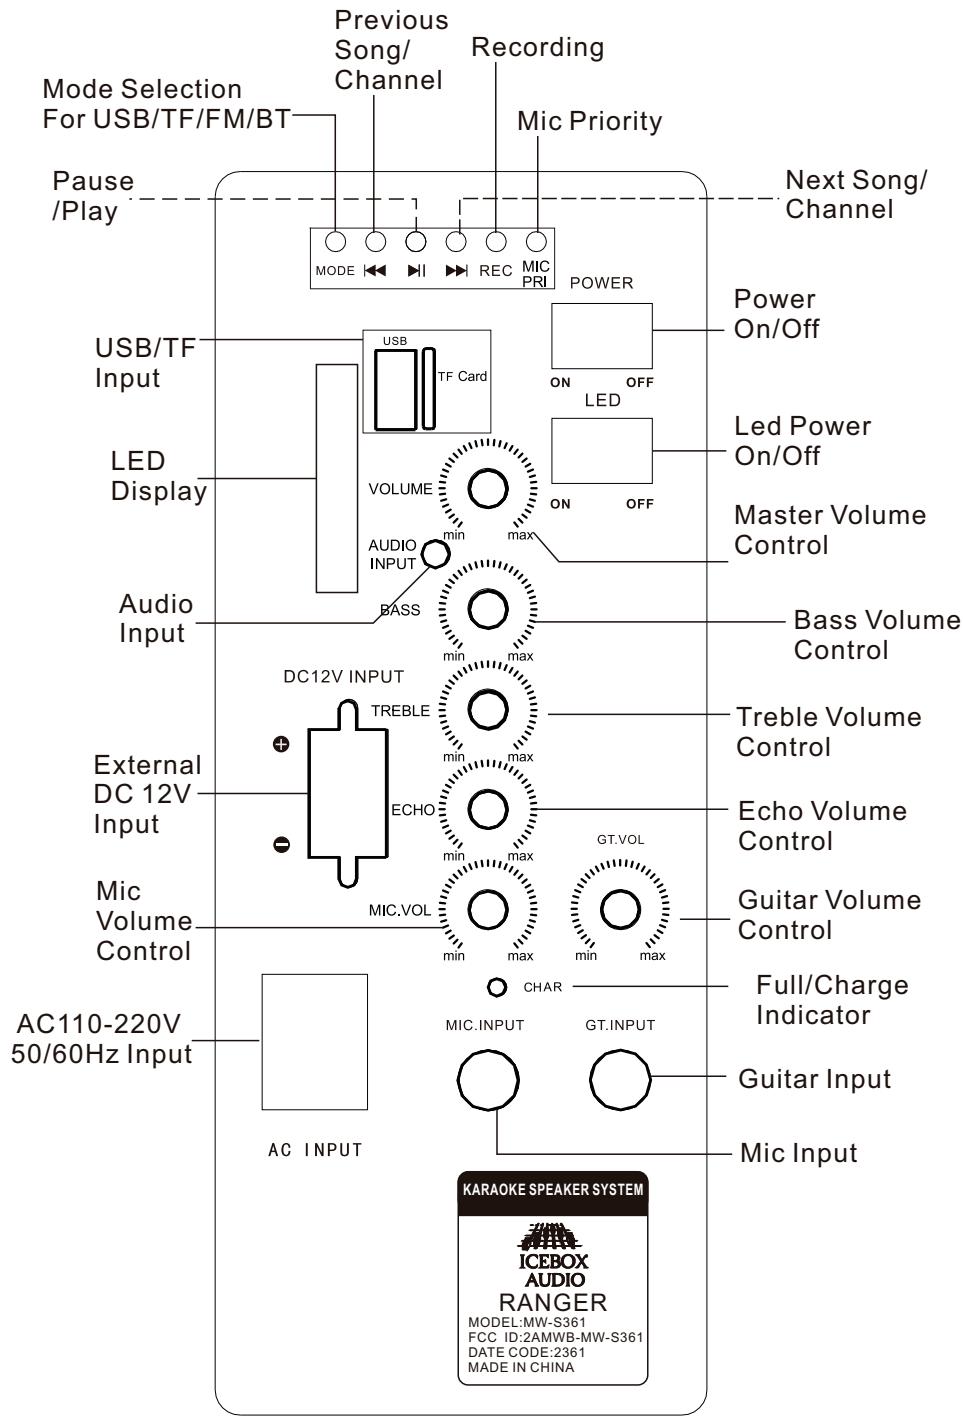

**ICEBOX**  
**AUDIO**

## USER MANUAL

### WIRELESS KARAOKE SPEAKER

With USB/SD/FM/Bluetooth/AUX input

MODEL: MW-S361



[www.megawholesalesus.com](http://www.megawholesalesus.com)

Please read this Instruction manual prior to using this unit.

## FEATURES

- FM Radio
- USB/Micro TF slot Plays MP3 Files stored in your Micro TF Card or USB Disk Drive
- AUX IN to connect to External Audio Players (ipod®/iphone®/ipad®/smartphones etc.)
- Built in Rechargeable battery
- Charge cable included

## POWER SUPPLY FOR UNIT

- Connect the supplied cable to AC power cord one end to unit and other end to AC socket to charge the built in battery.
- Please make sure battery is fully charged. For best results (or to charge faster) do not use the unit while charging.
- Use On/Off button to switch power ON/OFF on unit.

## WIRELESS MODE

- Short press "Mode" button to switch between wireless / USB / TF /FM / AUX
- On your smartphone, scan and select " MW-S361" to pair.
- Sound quality will depend on quality of your media file or distance of smartphone from speaker  
( Distance should NOT be more than 30Ft) or There should be no object blocking the Wireless Signal
- To control volume Long Press " VOL- " (volume down) or "VOL+" (volume up).
- To change tracks Short Press " I◀◀ " (Previous Track) or " ▶▶I " (Next Track).
- To Pause or Release Pause Short Press " ▶||"

## USB/MICRO SD

- Plug in your USB Disk and/or Micro TF Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY and correct mode has been selected.
- Short press "M" (Mode) button to switch between WIRELESS / USB / TF /FM / AUX. Please ensure that your speaker is fully charged & that your files are MP3 format, or correct source has been selected.
- To control volume Long Press " VOL- " (volume down) or "VOL+" (volume up).
- To change tracks Short Press " I◀◀ " (Previous Track) or " ▶▶I " (Next Track).
- To Pause or Release Pause Short Press " ▶||"
- Please remember to turn off the power of the Speaker before removing the USB Disk or TF Card.

## FM RADIO

- Short press "Mode"button to switch between WIRELESS / USB / TF /FM / AUX. Please ensure that yourspeaker is fully charged & correct source has been selected.
- To control volume Long Press "VOL - " (volume down) or "VOL+ " (volume up).
- Short Press"▶| | " to Auto Scan and preset available frequencies
- To switch between preset frequencies Short Press " I◀◀ " or " ▶▶I " .

## AUX (LINE IN)

- Plug in external device to Aux jack.
- Short press "Mode"button to switch between WIRELESS / USB / TF /FM / AUX. Please ensure that your speaker is fully charged & correct source has been selected
- To control volume Long Press "VOL- " (volume down) or "VOL+" (volume up).
- Short Press "MUTE" to mute

Tracks can only be changed from your connected external device.

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc.  
This product is not Designed, Manufactured or Distributed by Apple Computer Inc. All other Trademarks & Trade Names belong to their respective owners.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference

This device must accept any inference received,including interfence that may cause undesired operation.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment compliese with FCC radition exposure limits set forth for an uncontrolled envirment.

This transmitter must not be co-located or operating in conjuction with any other antenna or transmitter.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

**FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.