

Curtain motor emitter manual

03.03.01.0071



BE301

Single channel
hand-held emitter



BE302

Double channels
hand-held emitter



BE316

16 channels LCD emitter


Input voltage:2*1.5(NB.7battery)
Frequency:433.92MHZ
Power:10MW
Working temperature:-10 C~-50 C
Distance:>50m

Matched with wall mounting bracket



BE301

 
CLOSE
STOP
OPEN



BE302

CLOSE
STOP
OPEN

 Left
Function
Middle
Group/single
control switch
button



BE316

Right
Function
CLOSE
STOP
OPEN



SET

Hand-held emitter



Hand-held wall
mounting bracket

Matching code—BE301

Here are 2 methods for emitters to match code:shortly press MATCH button on motor or copy code
When motor is in being matched state,press the set button of a totally new emitter,the motor will
vibrate once,then matching code successfully

Shortly press MATCH button of motor



Press MATCH button
when powered on



Press SET button of a emitter
(never matched before)



The motor vibrate once ,
it means matching code finished



BE301

Matching code—BE302

Here are 2 methods for emitters to match code:shortly press MATCH button on motor or copy code
When motor is in being matched state,press the set button of a totally new emitter,the motor will
vibrate once,then matching code successfully
when chosing channels on BE302,press the stop button on the side you want firstly ,then continue.

Shortly press MATCH button of motor



Press MATCH button
when powered on



Take the right channel for
an example press the STOP
on right firstly



Press SET button of
a emitter
(never matched before)



The motor vibrate once ,
it means matching code
finished



BE302

Other operations please refer to motor manul

Matching code—BE316


Here are 2 methods for emitters to match code:shortly press MATCH button on motor or copy code
When motor is in being matched state,press the set button of a totally new emitter,the motor will vibrate once,then matching code successfully

Chose 16 channels by left or right button ,every time you press left or right ,number of channel appears on screen ,it shows the channel you want.


Shortly press MATCH button of motor



① Set MAX channel number

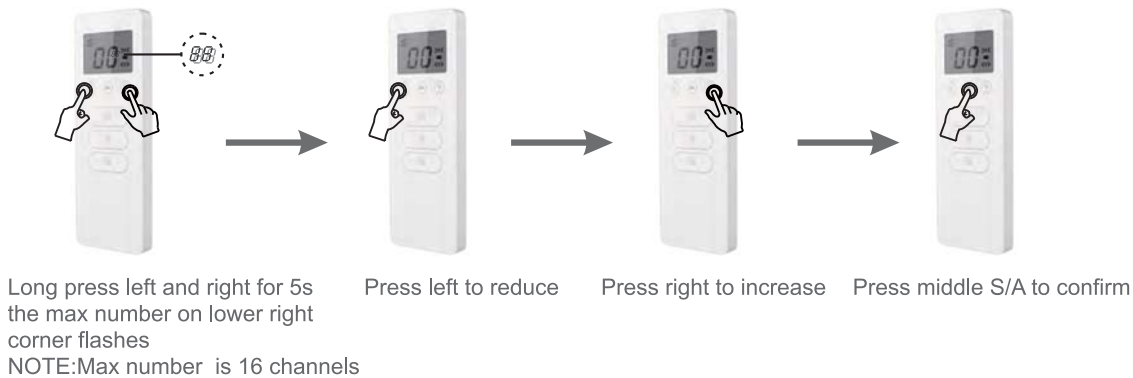


② Switch single/all channel

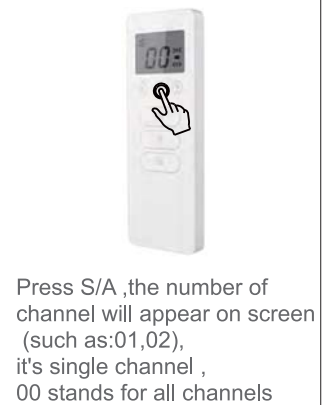

Copy to match code

Take BE301 for an example

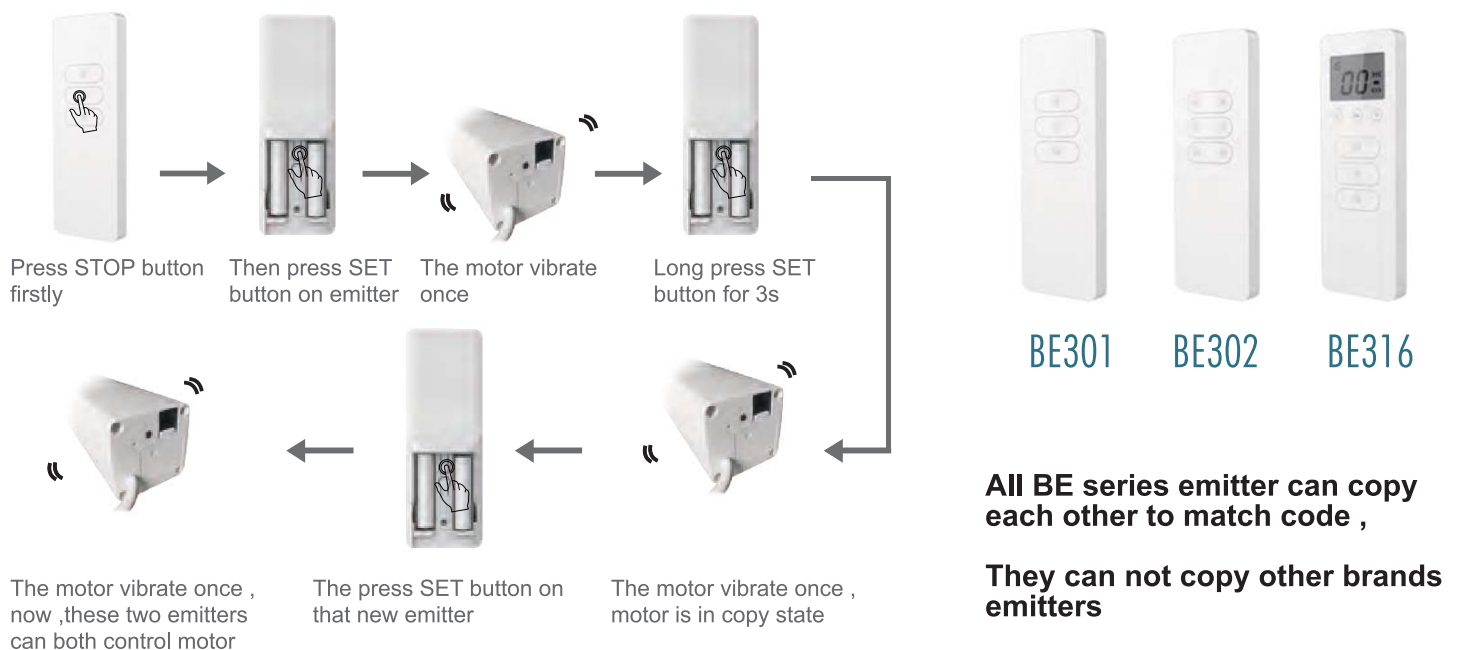

Other operations please refer to motor manual

Note: 1.Do not put emitter in humid environment.
2.Replace battery timely when it's out of power.
3.Do not press buttons over 10s every time

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.