



ELSW3917BF

---

## 38.5" HD Digital LED TV



### INSTRUCTION MANUAL

---

Please read all the instructions carefully before using this TV, and keep the manual for future reference.

# CONTENTS

---

<b>Important Safety Instructions</b>	<b>2</b>
<b>Additional Safety Information</b>	<b>3</b>
<b>Preparations</b>	<b>4</b>
What's Included	4
Front/Rear View	5
Rear View	5
Wall Mounting	6
Remote Control	7
<b>Connecting External Devices</b>	<b>8</b>
<b>Customizing TV Settings</b>	<b>9</b>
Turning On/Off Your TV	9
Initial Setup	9
Source	11
Channel Selection	11
Volume Adjustment	11
Streaming	12
Media	13
Viewing Photos	13
Listening To Music	14
Watching Videos	14
TV Settings	15
General	16
Picture Settings	17
Audio Settings	18
Network Settings	18
Channel Settings	19
Time Settings	20
Lock Settings	21
APP Settings	22
Parental Control	23
<b>Troubleshooting</b>	<b>25</b>
<b>FCC Notes</b>	<b>28</b>
<b>Specifications</b>	<b>28</b>
<b>OTT APP Service</b>	<b>29</b>

## IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not defeat the safety purpose** of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**WARNING:** The main plug is used as disconnect device, the disconnect device shall remain readily operable.

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



- Unplug this apparatus during lightning storms or when unused for long periods of time.

## **ADDITIONAL SAFETY INFORMATION**

---

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

### **Electrical Safety**


- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for long period.
- Do not break open or throw exhausted batteries on a fire.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

### **Physical Safety**


- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.

# PREPARATIONS

## What is Included?

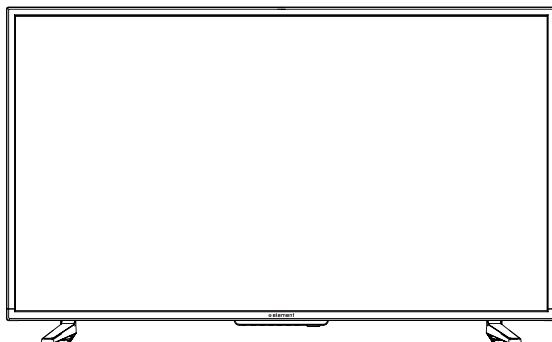

TV Set

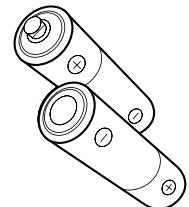

Remote Control with Batteries




User Manual



Quick Start Guide

# PREPARATIONS


## Front/Rear View

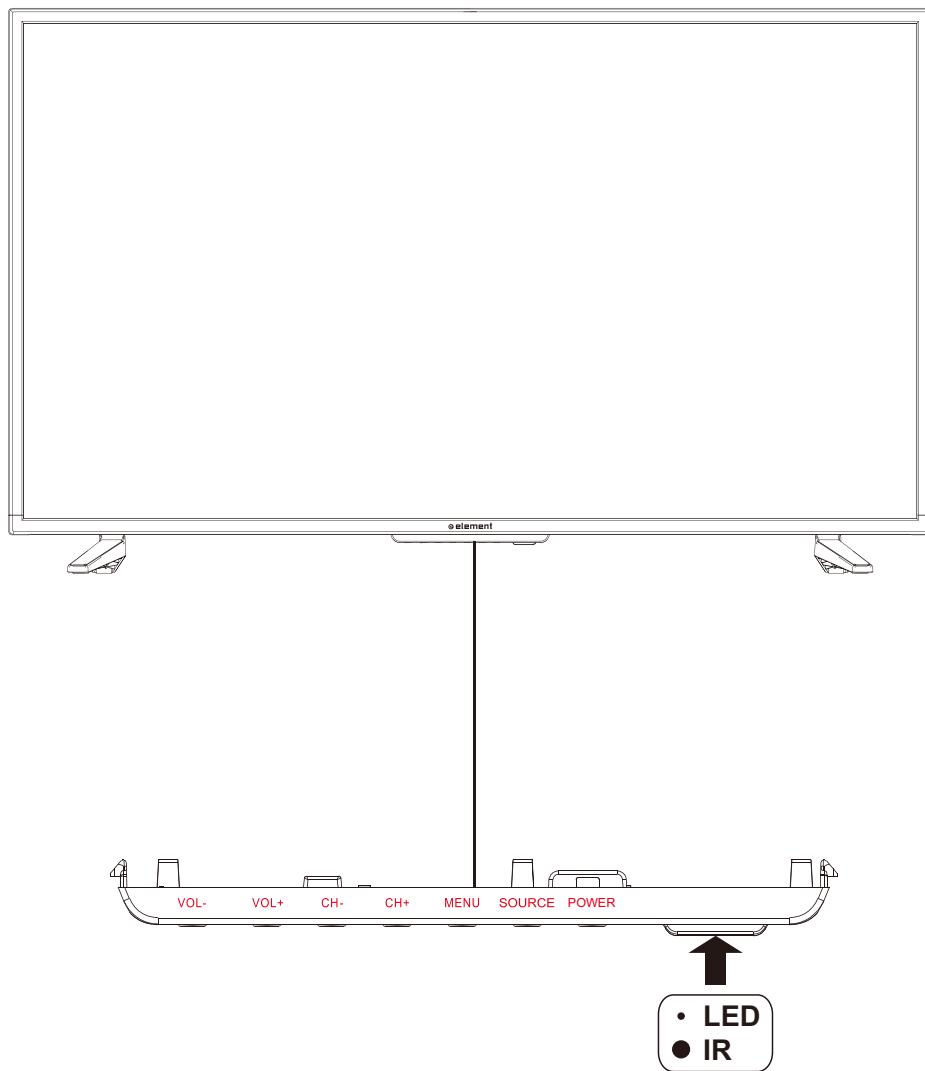

- **VOL +/-**  
Press to adjust the volume.
- **CH +/-**  
Press to select a channel.
- **MENU**  
Display the OSD (on screen display) menu.
- **SOURCE**  
Press to select among different input signal sources.
- **POWER**  
Switch the TV between On and Standby mode.

# PREPARATIONS

## Rear View

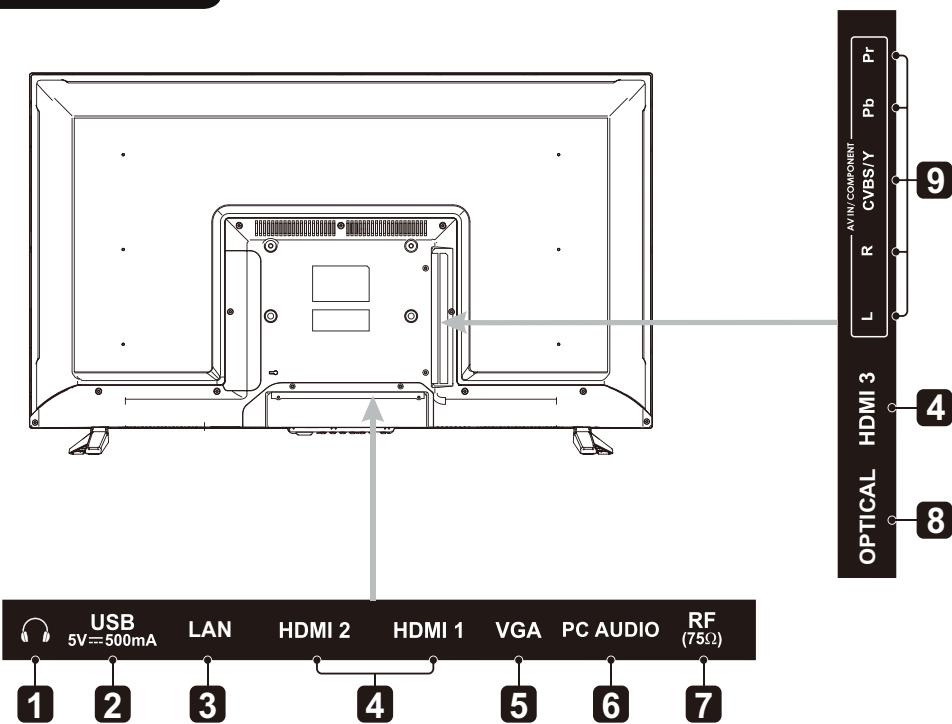

### 1. Headphone output

Connect to the Headphones.

### 2. USB Input

Connect to a USB storage device to play photo files. (USB mode)

### 3. LAN

Network connection port.

### 4. HDMI Inputs

Connect to a High-Definition (HD) signal input device.

### 5. VGA Input

Connect to a computer or other devices with a VGA interface.

### 6. PC Audio Input

Connect to a computer audio output.

### 7. Antenna Input (75Ω VHF/UHF)

Connect to the antenna (75Ω VHF/UHF) socket with the RF coaxial cable.

### 8. Optical Output

Connect a digital sound system to this jack.

### 9. COMPONENT/AV Input

Connect to AV devices with composite/component (Y/Pb/Pr) video and audio output sockets. COMPOSITE VIDEO and COMPONENT(Y/PB/PR) share with AUDIO IN (L/R).

## Wall Mounting

The TV is provided with mounting holes for a VESA approved wall mounting bracket (Not Supplied). Remove the screws holding the base to the base bracket and lift the base away (do not remove the base mounting brackets). Mount the VESA bracket using 4\*M6\*8 isometric threaded screws (Not Supplied).

### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.



Your new TV is heavy, please consult with professional wall mount installer to perform this installation.


## PREPARATIONS

## Remote Control

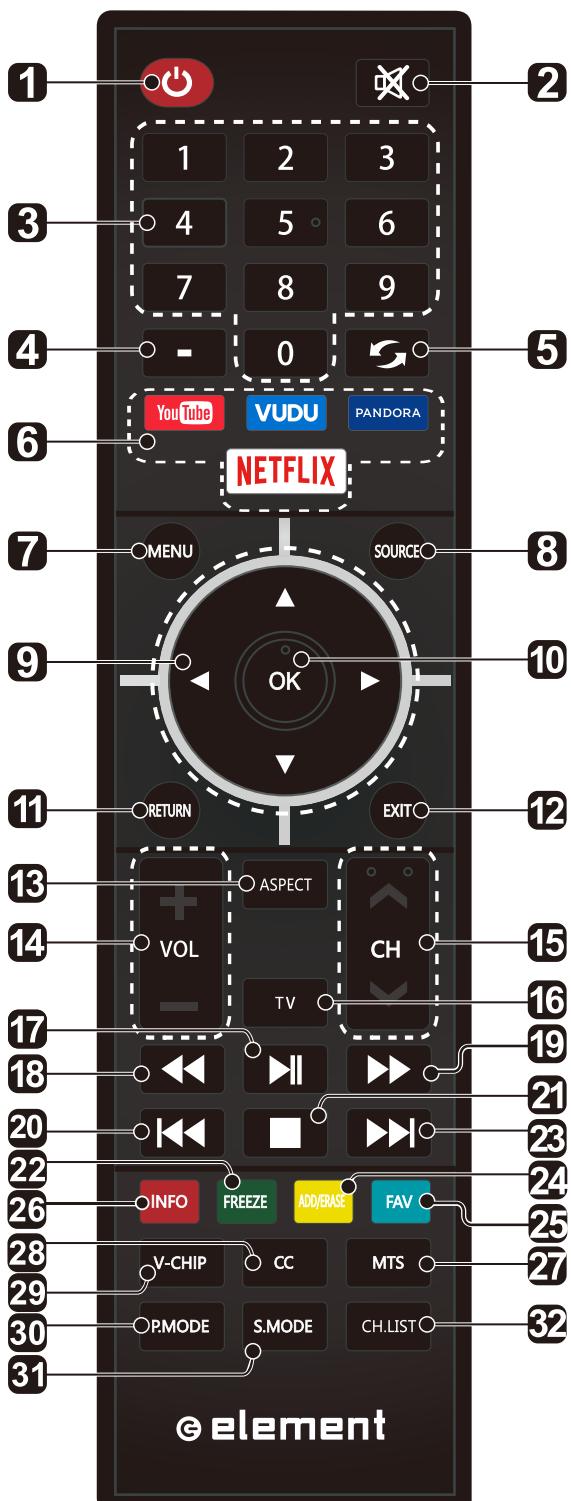

1. **POWER**:Switch the TV between On and Standby mode.
2. **MUTE**:Mute and restore TV sound.
3. **0~9**:Select a program.(ATV/DTV mode)
4. **—**:Enter multiple program channel number such as 2-1.
5. **CH**:Return to the previous viewing channel.
6. **APP**:Press to select the desired APP.
7. **MENU**:Display the main menu.
8. **SOURCE**:Select among the different input signal sources:TV/AV/COMPONENT/HDMI1/HDMI2/HDMI3/VGA/USB.
9. **◀ ▲ ▼ ▶**:Allows you to navigate the on screen display menus and adjust the system settings to your preference.
10. **OK**:Confirm the selection.
11. **RETURN**:Return to previous menu.
12. **EXIT**:Exit the on screen display menu.
13. **ASPECT**:Select the aspect ratio.  
settings:standard/wide/wide zoom/zoom/Just Scan (HDMI)/Dot by Dot(VGA).
14. **VOL+/-**:Adjust the volume.
15. **CH<sub>▼/▲</sub>**:Select the channel.
16. **TV**:Into the TV channel.
17. **▶||**:Start playback or pause.
18. **◀◀**:Reverse playback rapidly.
19. **▶▶**:Advance playback rapidly.
20. **◀◀**:Skip to the beginning of the previous chapter/track/photo.
21. **■**:Stop the playback.
22. **FREEZE**:Freeze the picture.
23. **▶▶**:Skip to the beginning of the next chapter/track/photo.
24. **ADD/ERASE**:Add or delete Favorite channels.
25. **FAV**:Display the favorite channel list.
26. **INFO**:Display the present screen information such as the current channel and input source.
27. **MTS**:Switch among different audio channels:STEREO/MONO/SAP.
28. **CC**:Closed Caption selection:ON/OFF/CC On Mute.
29. **V-CHIP**:Set up parental control.
30. **P.MODE**:Select picture mode:dynamic/movie/user/standard.
31. **S.MODE**:Select sound mode:standard/music/movie/user.
32. **CH.LIST**:Display program list.

## CONNECTING EXTERNAL DEVICES

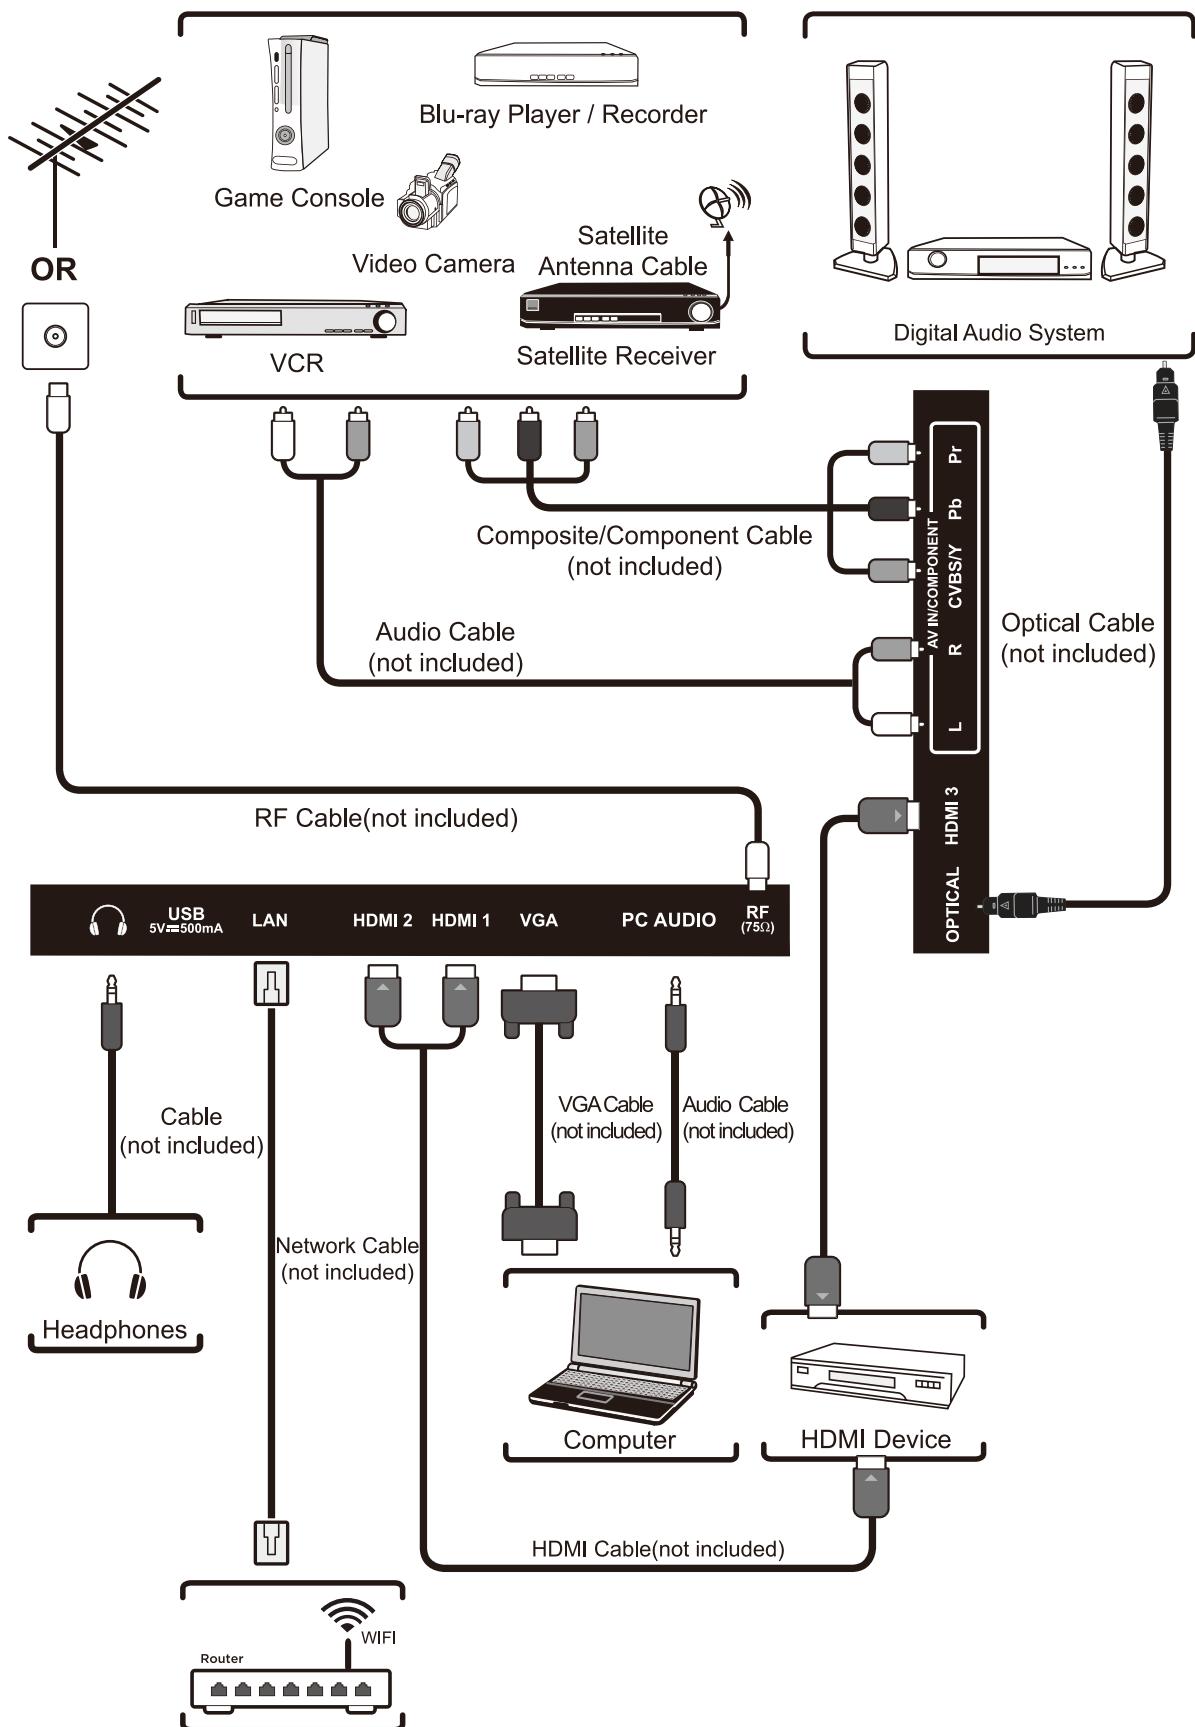

# CUSTOMIZING TV SETTINGS


## Turning On/Off Your TV

- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the red LED indicator will illuminate.
- In Standby Mode, press the **POWER** button on the main unit or on the remote control to turn the TV on. The red LED indicator will turn blue.




The **POWER** button on the main unit or on the remote control can only switch the TV into standby. To completely turn off the TV, please disconnect the power cord from the power socket.

## Initial Setup

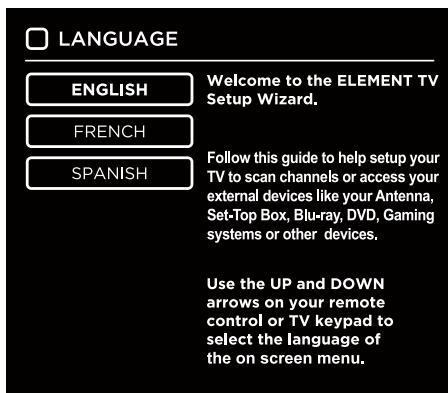

- The first time you turn the TV on, it will go into the Setup Wizard. Press the **Arrow** buttons to highlight and select your desired mode and press **OK** to confirm.


1

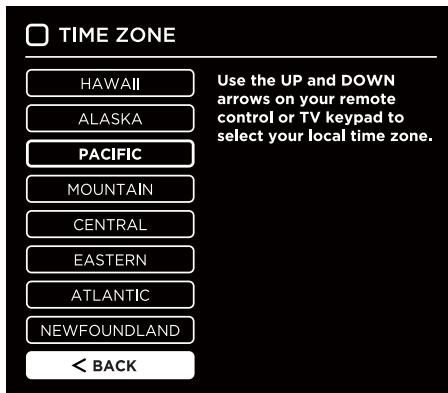

2


# CUSTOMIZING TV SETTINGS

## Initial Setup

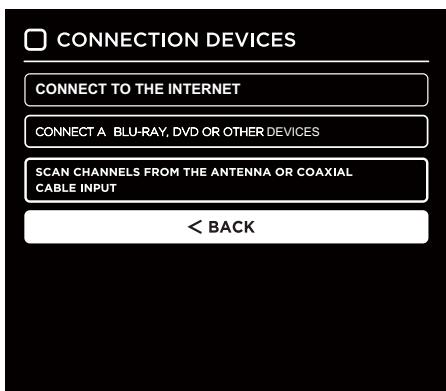


- Follow the next screens. Use the arrow keys on the remote control and then press OK button to customize your TV channel configuration.
- After the channel scan, your TV channels will be set up.


3

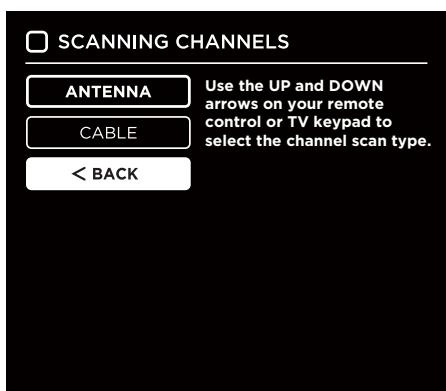

4

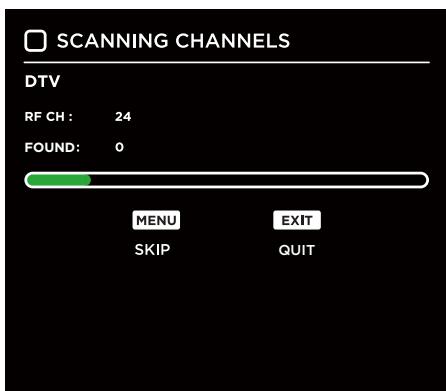

5

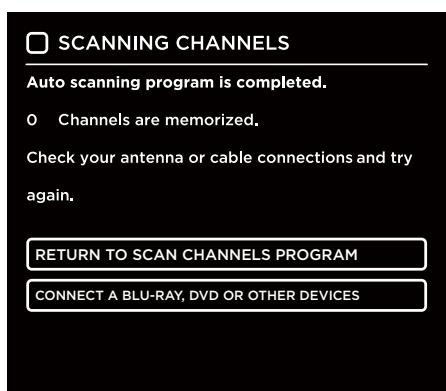


6

- If channels cannot be found, this frame will be displayed automatically.

# CUSTOMIZING TV SETTINGS

## Source

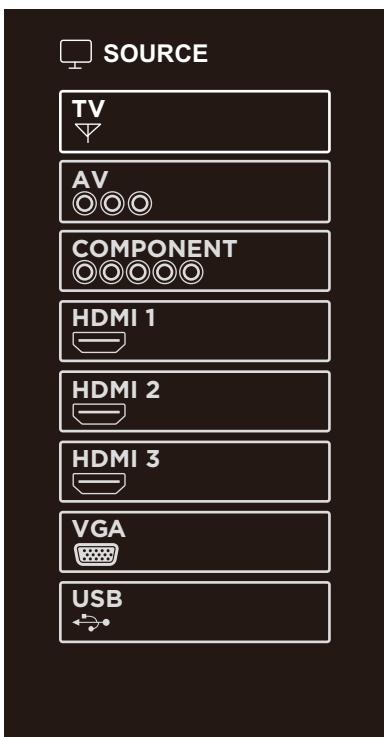

- Press **SOURCE** on the remote control or on the main unit to display the source menu, then use the **Arrow** buttons to cycle among the different input sources: TV/AV/COMPONENT/HDMI1/HDMI2/HDMI3/VGA/USB, then use the **Arrow** buttons to highlight the desired source and press **OK** to confirm.

## Channel Selection

- Press the **CH<sup>▲</sup>/CH<sup>▼</sup>** buttons on the main unit or on the remote control repeatedly to select the channel.
- Press the **0-9** buttons on the remote control to select the channel directly.



Press "4", and then press **OK** button to select channel 4.

Press "4" and "5", and then press **OK** button to select channel 45.


Press "1", "2" and "3", and then press **OK** button to select channel 123.

## Volume Adjustment

- Press the **VOL+/-** buttons on the main unit or on the remote control to adjust the volume.
- If you wish to switch the sound off, press the **MUTE** button again or the **VOL+** button to resume the sound.

## CUSTOMIZING TV SETTINGS

### Streaming

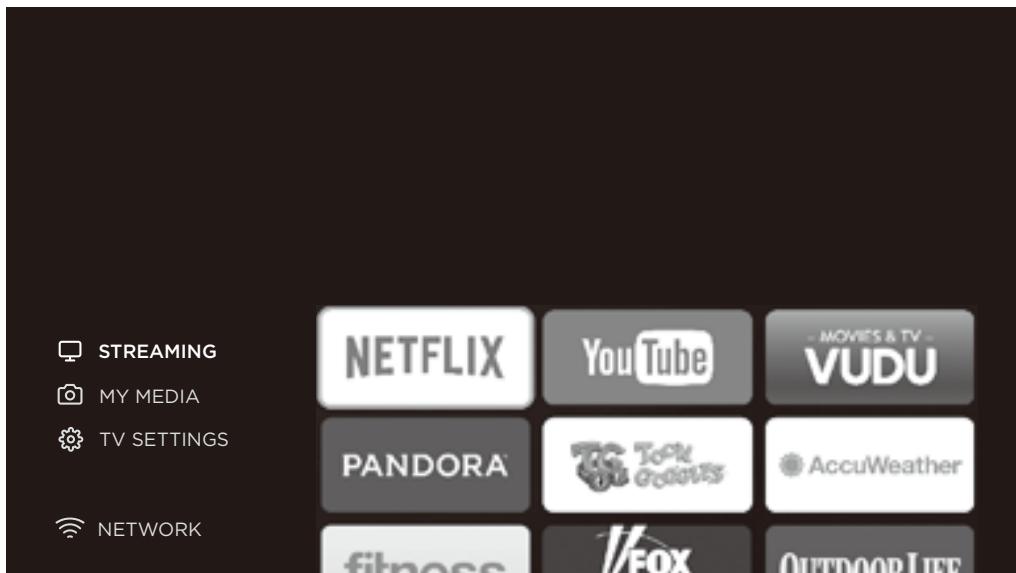


- Press **MENU** button on the main unit or on the remote to display the main interface. Then use the Arrow buttons to select **STREAMING** and press **OK** to enter. Use the **Arrow** buttons to select the desired APP and press **OK** button to view. Or press the hotkey on the remote control to enter the desired APP directly. For full listing of available Apps, please visit [elementelectronics.com](http://elementelectronics.com).

<b>NETFLIX</b>	Enjoys TV shows & movies streamed instantly over the Internet.
<b>YouTube</b>	YouTube your way on the best screen in your house.
<b>VUDU</b>	Discover, watch and collect the latest movies and TV shows in high quality 1080p. Free to sign up. No subscriptions, late fees or commitments.
<b>Pandora</b>	Free personalized radio that offers effortless and endless music enjoyment and discovery. Just start with the name of one of your favorite artists, songs, genres or composers and Pandora will do the rest. It's easy to create personalized stations that play only music you'll love.
<b>AccuWeather</b>	Displays the current weather conditions and the temperature anywhere in the world in centigrade or Fahrenheit.

# CUSTOMIZING TV SETTINGS


## Media

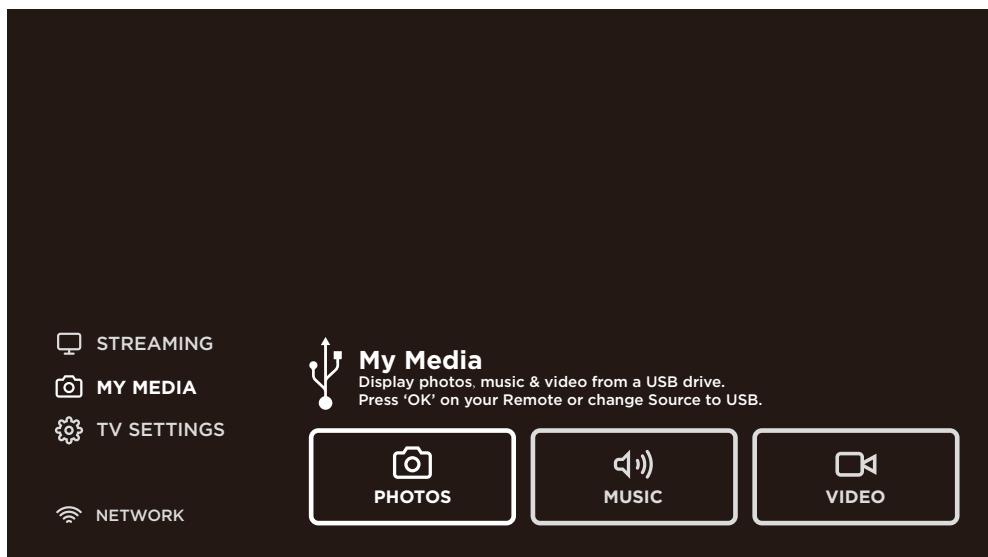


- Press  **MENU** button to display the main interface, then use the  **Arrow** buttons to highlight  **MY MEDIA** and press  **OK** to confirm. Select among Photos, Music and Video to view what you like.

**Note:** Portable drives should be inserted before entering  **MY MEDIA** menu.

## Viewing Photos

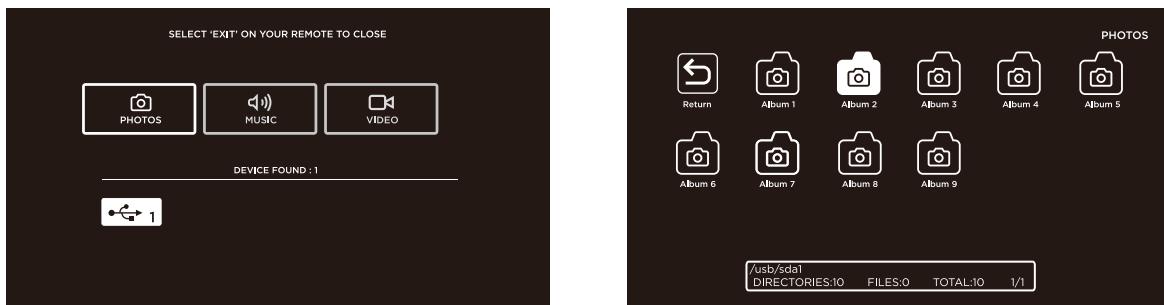


- Use the  **Arrow** buttons to highlight the  **PHOTOS** option and press  **OK**, then it will jump to confirm the inserted drive, press  **OK** to enter. After entering  **PHOTOS**, use the  **Arrow** buttons to select the picture file and press  **OK** to enter.

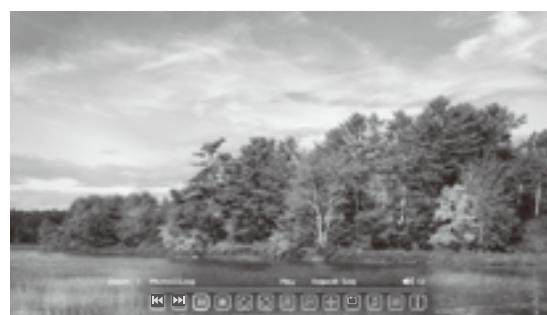



- After entering the picture file, use the  **Arrow** buttons to select the desired picture, then press the  **▶** to display. When the picture is playing, the picture Function Bar will be displayed. Use the  **Arrow** buttons to select the desired function available on the bar.

# CUSTOMIZING TV SETTINGS

## Listening To Music

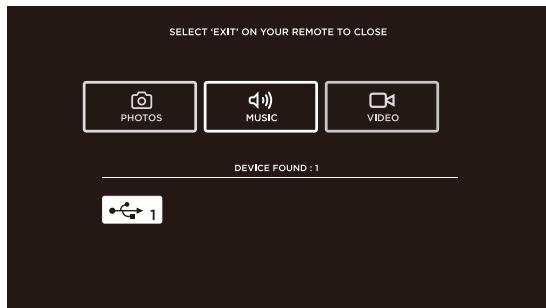


- Use the **Arrow** buttons to highlight the **MUSIC** option and press **OK**, then it will jump to confirm the inserted drive, press **OK** to enter. After entering **MUSIC**, use the **Arrow** buttons to select the audio file and press **OK** to enter.

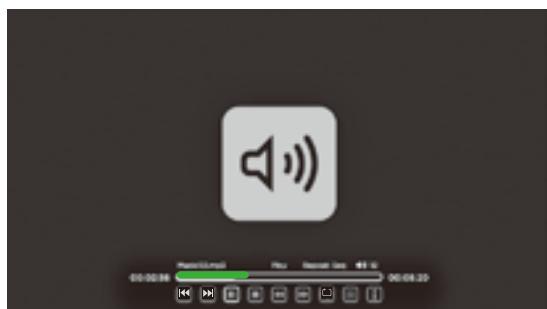
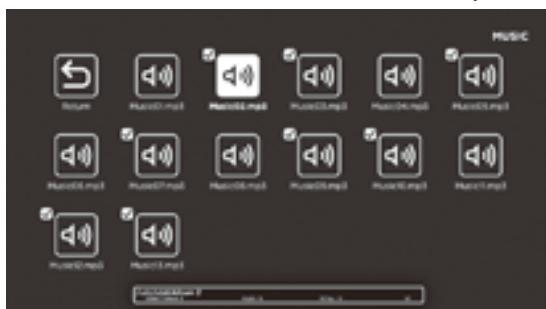


- After entering the audio file, use the **Arrow** buttons to select the desired music, then press the **▶||** to display. When the music is playing, the music Function Bar will be displayed. Use the **Arrow** buttons to select the desired function available on the bar.

## Watching Videos

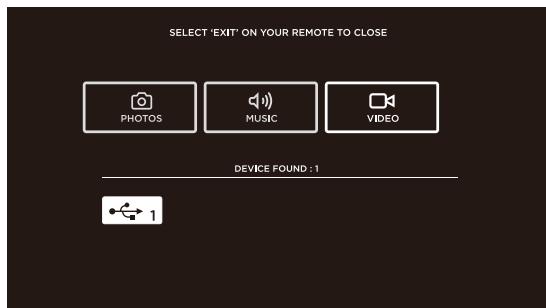

- Use the **Arrow** buttons to highlight the **VIDEOS** option and press **OK**, then it will jump to confirm the inserted drive, press **OK** to enter. After entering **VIDEOS**, use the **Arrow** buttons to select the video file and press **OK** to enter.

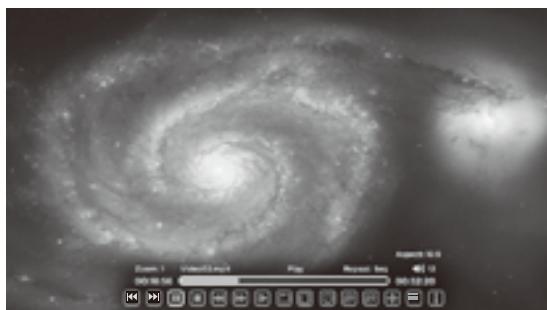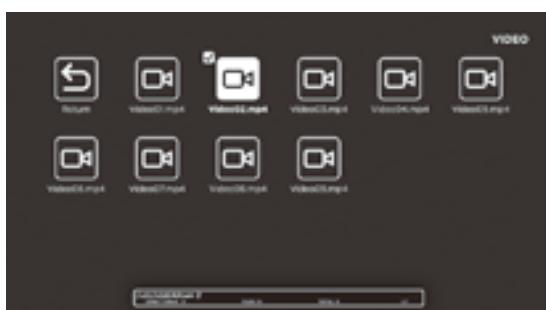

- After entering the video file, use the **Arrow** buttons to select the desire video, then press the **▶||** to display. When the video is playing, the video function bar will be displayed. Use the **Arrow** buttons to select the desired function available on the bar.