 
 
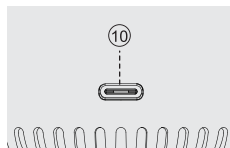 


Serene Sound Bluetooth Sound Machine

Item No: PC35SM

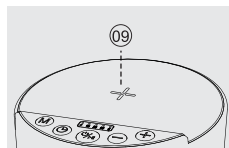

USER MANUAL

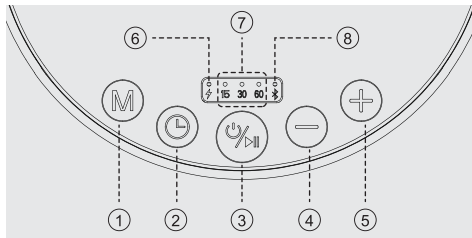

- ① Bluetooth/Sound Machine Mode Button
- ② Timer Setting Button
- ③ Power On/Off, Pause Button
- ④ Previous Track or Volume Down Button
- ⑤ Next Track or Volume Up Button
- ⑥ Wireless Charger Indicator
- ⑦ Timer Indicator Including 15/30/60 Minutes
- ⑧ Charging & Mode Led Indicator
- ⑨ Wireless Charging Area
- ⑩ Type C Power Input Slot

BASIC FEATURES

Battery: 500mAh/3.7V

Input: 9VDC 2.5A

Charging time: 1 Hour

Working time: 3-6 Hours

Speaker

Bluetooth: V5.3

Speaker: 40MM,3W

Wireless Charging

Input: 9VDC 2.5A (QC 3.0 required)

Output: 15W (Max)

Sound Machine

Six Preset Sounds: Stream,
Lullaby, Sea Waves, Rain and
Thunder, Crackling Fire, White
Noise

Three Timer Modes: 15/30/60
Minutes

HOW TO USE

SOUND MACHINE

Long press the power button “” two seconds to turn on the device, it will start playing the first default sound automatically. The “” Led light has no display; there are 6 optional sounds including sea waves, crackling fire, white noise, lullaby, rain & thunder, and stream.

Press once “” or “” to choose the best sound you like, or long press “” or “” to turn volume down or up.

Short press the button “” to pause the sound machine.

Timer Function:

Short press the timer indicator button “” once for 15 MIN countdown.

Short press the timer indicator button “” twice for 30 MIN countdown.

Short press the timer indicator button “” three times for 60 MIN countdown.

BLUETOOTH SPEAKER

Short press once the mode button “” once to switch to Bluetooth mode. Follow the operating instruction of your wireless connection enabled device. Select “Serene Sound” from list. Once you hear the voice prompt “Connected” your device has successfully connected to the sound machine.

Short press the button “” to pause.

Press the “” or “” to change the tracks, or long press “” or “” to turn the volume down or up.



The blue led indicator will flicker fast while waiting to pair.



The blue led indicator will be constant when paired.



The blue led indicator will flicker slowly while playing.

WIRELESS CHARGER

Put the smart phone on the wireless charging area, the phone will start charging automatically, the white led indicator “” will start to blink slowly once the wireless charging begins.

BUILT-IN BATTERY

Please charge this device using the Type-C charging cable provided. It will take approximately 1-2 hours to fully charge. Fully charge before first use.

LOW battery: if the power voltage is lower than 3.2V, the device will alarm every 2 minutes, “Low battery, please charge” total of three times and then power off automatically to protect the battery. Please charge the unit using the Type-C charging cable provided.

The red “” charging indicator will be constant while charging, and then turns off once it is fully charged.

WARNING

- Do not disassemble the item.
- Damaged batteries can cause chemical burns when in contact with skin.
- Never throw the item or parts of it into the fire.
- Never expose the item to extreme temperature changes, humidity or liquids.
- Do not use if the items or parts of it are damaged.
- Store in a clean and dry space.
- To maintain good battery health, the item should be recharged every 6 months. Battery will lose capacity when stored without charging
- If the product gets very hot, please disconnect the item and do not use it.
- Keep out of reach of children.
- Never use the appliance and its battery in extreme conditions (high or low extreme temperatures, high altitude...) during use, storage, or transportation.

- Warning: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Replacement of a battery with an incorrect type that can defeat a safeguard.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

maybe cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment(WPT) shall be installed and operated with minimum distance 20cm between the radiator & body.

FCC ID: 2AMZY-PC35SM

HandStands Promo LLC
770 South 5350 West Suite 100
Salt Lake City, UT 84104 USA
(801) 727-1400
www.hpgbrands.com



Made in China

The marking information is located at the bottom of sound machine.