

Front 120mm x 68.658mm

SLIM

Power Bank


Package Content:

1 Power bank
1 USB Cable Carried with Body
1 User Manual

Specifications:

Battery Capacity: 2000mAh | 7.6 Wh
USB-C Input/Output: DC 5V/1.5A
Wireless Output: 5W

Product Diagram

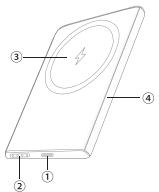

① USB-C Input port

② LED Indicator Lights

③ Charging Zone

④ 6mm Product Shell

First Time Use:

First make sure that the product is intact and there is no visible damage to the product. Before using the power bank for the first time, charge the unit completely for about 2 hours.

Wireless Charging at Home/Office

Connect the device to the power outlet using the Type-C cable attached to a laptop or USB adapter. The LEDs will light up during the charging process. If there are LEDs flashing, the charging process has not yet been completed. If all LEDs are lit continuously, the charger is fully charged.

Battery Indication:

The LED lights on the bottom of the charger shows the current battery status:

1 LED < 25%

2 LEDs < 50%


3 LEDs < 75%

4 LEDs < 100%

If 1 LED is flashing, the battery status is less than 3%. Please recharge the power bank.

How to use

For magsafe compatible phones, just snap your charger onto the back of your phone for instant power and a charging status will appear on the lock screen.

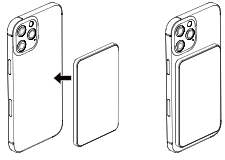

Back 120mm x 68.658mm

Recharging:

Connect the charger to the USB port of computer or USB adaptor by using the provided Type-C cable. If there are one or some LEDs flashing, the charging is not complete. When the charger is fully charged, all LEDs are illuminated constantly.

Safety Instructions:

Warning: When using this product, basic precautions should always be followed.

Read instructions before use.

Never store product in temperatures below 32°F (0°C) or above 86°F (30°C).

Do not over charge your device with the power bank. The power bank may become hot with excessive use.

Do not expose the power bank to moisture or extreme heat.

When charging, the power bank may feel warm, this is a normal operating condition and should not be cause for concern.

To avoid risk of fire or injury, only use the charging cable provided to charge the power bank.

Do not use the power bank if damaged or modified.

Do not disassemble the power bank.

Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.

Switch off the power bank when not in use.

Do not dispose of power bank in heat or fire.

To reduce the risk of injury, close supervision is necessary when power bank is used near or by children.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DISPOSAL INFORMATION FOR USER:

Recycle according to local recycling and environmental regulations.

Attachments on the back of your phone or some phone cases can impede the effectiveness of the wireless charger and can lead to overheating. Remove attachments before wirelessly charging.

Handstands Promo LLC

1770 South 5350 West Suite 100, Salt Lake City,

Utah 84104, United States

(801) 727 - 1400

www.hpgbrands.com/origaudio