



WIRELESS PORTABLE CHARGER



User Manual

CONTENTS

English ----- 01-09

 **Manufacturer:**

Guangdong Gadmei Intelligent Technology Co.,LTD

 **Address:**

Unitry Park No.1 Road, No.1 Yin Zhan, QingCheng District,
QingYuan City, GuangDong Province, China.

 **Email:** AMZ-Help24h@outlook.com


MADE IN CHINA




平南商事株式会社



Packing List

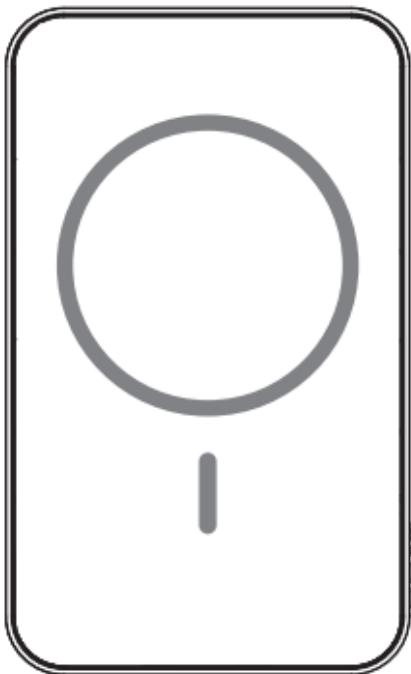

① Wireless Portable Charger

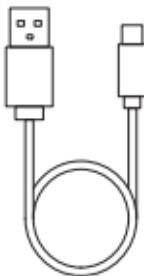

② Type-C Charging Cable




③ User Manual

Package Contents:


- ① Wireless Portable Charger x 1
- ② Type-C Charging Cable x 1
- ③ User Manual x 1

Product Introduction

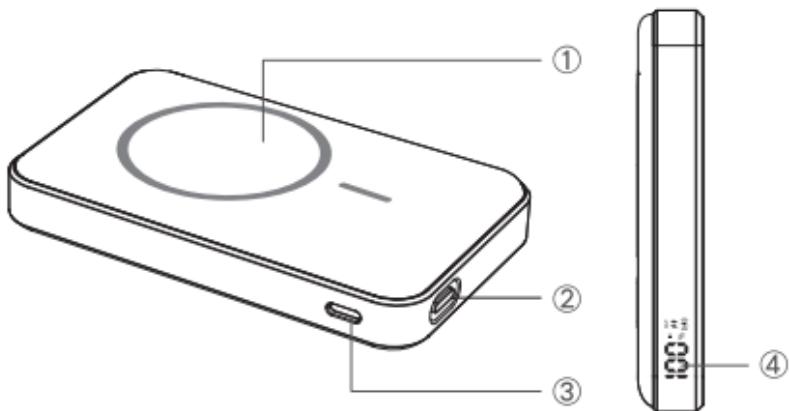

- ① Wireless Charging Surface
- ② Power Button
- ③ TYPE-C Input/Output Port
- ④ LED Display

LED Display Status:

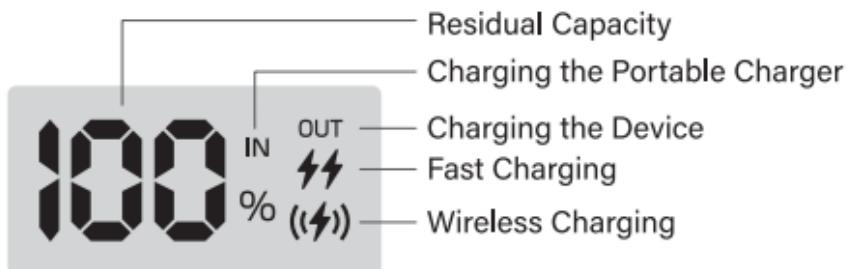


Specifications

Model	W12
TYPE-C Input	5V==3A, 9V==2A
TYPE-C Output	5V==3.0A, 9V==2.2A, 12V==1.7A

Charging Method

Wireless charging mode

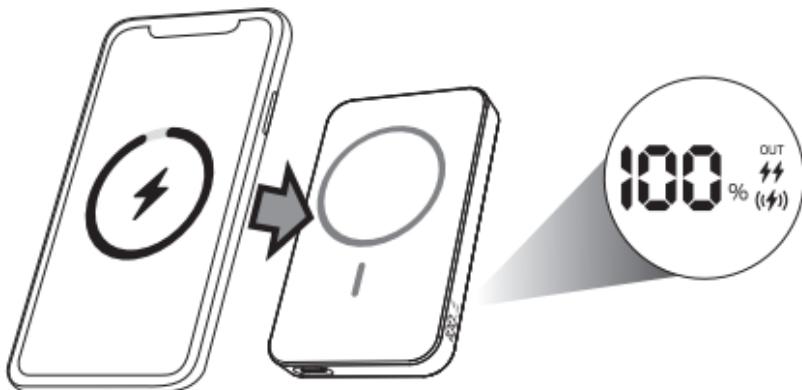

The wireless charging does not compatible with the non-magnetic phone case



Magnetic Cases





Non-magnetic

1. Press power button to start wireless charging mode, turn on and enter fast charging mode. (The number will show the current battery level of the portable charger).
2. Place your phone on the portable charger. For best results, make sure it is centered on the circular icon of the portable charger.
3. Remove the portable charger or double-press the power button to end charging.

NOTE:

- * The device to be charged needs to support wireless charging capability.
- * Magnetic suction function is compatible for iPhone 12/13/14 Series or newer models. Wireless charging supports a maximum output of 15W, and iPhone supports a maximum wireless output of 7.5W.
- * When wireless charging output, the wireless character will flash when there is a metal object in the transmitting area, and the light will go out to standby within 40 seconds if there is always a metal object.

Wired charging mode

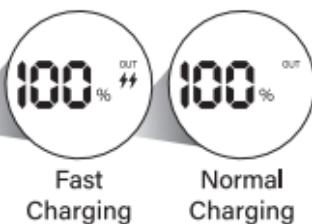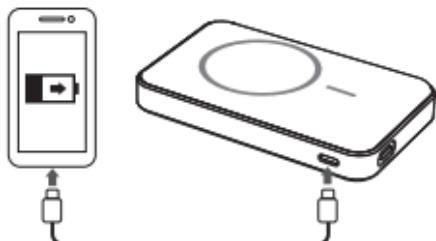

1. To charge compatible electronic devices with wired charging, connect it to the TYPE-C output port with the charging cable (not included) and do not press the button. (Lightning fast charging logo will appear after 10 seconds)
2. Fast charging requires both fast charging data cable and fast charging adapter support.
3. Remove the data cable or double press the power button to end the charging.

NOTE:

To protect the battery life of the phone, when the phone is charged to about 80%, it will automatically turn off the fast charging mode.

Simultaneous wired & wireless charging

Press the power button, place the phone on the portable charger, and connect it to another device with a cable.



NOTE:

- * When two devices are charged at the same time, the product may heat up due to the increased power. This is a normal phenomenon, please don't worry.
- * In order to prolong the life of the product, the output speed may be slow when the two are charged at the same time.


Low Current Function

1. When the digital display is lit, press and hold the button for 2s, the digital tube turns around to display, repeatedly cycle.
2. In the low current mode, the output will always be open and will not standby, and the output will automatically exit after 2 hours without load.
3. Exit low current mode can press the button for 2s or double click the button to turn off the power to exit the low current mode.

NOTE:

To protect the battery life of airpods and iWatch, please use low current mode to charge it.

Charge For Portable Charger

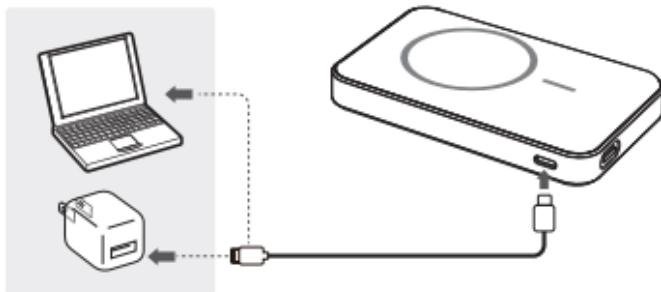

1. Use the type-c charging cable(provided) to connect your computer(with power on) or an adapter(not provided) to your portable charger.
2. At the beginning of charging, all LED lights flash once, then the LED number is steady on, and the LED display "IN" keeps flashing. The charge is complete after the battery LED light shows 100%.

* Low battery indication: when the battery is below 5%, "OUT" will flash to indicate low battery. Please charge in time.

Important Safety Precaution

[WARNING] - When using this product, basic precautions should always be followed, including the following:

1. Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
2. Please charge the product every three months when it's been idle status.
3. Don't use rough chemicals, like soap or cleanser to scrub it.
4. To reduce the risk of injury, close supervision is necessary - when the product is used near children.
5. Portable chargers are not allowed in checked luggage on commercial airline flights. Handle with care and dispose of in accordance with local regulations.

- * Do not put your fingers or hands into the product.
- * Do not expose the portable charger to rain or snow. Keep the battery dry and ventilated.
- * Do not use the power supply or charger not recommended or sold by power pack injury to persons.
- * Do not charge the portable charger for more than 10 hours and do not leave it unattended. Disconnect the portable charger when not in use.
- * Do not use the portable charger in excess of its output rating-Overload outputs above the rating may result in a risk of fire or injury to persons.
- * Do not use the portable charger that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- * Do not disassemble the portable charger. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- * Do not expose a power pack to fire or excessive temperature. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
- * If the power supply is found to have hidden dangers, or other problems, to immediately terminate the use.

Q & A

Q: Can't charge the portable charger.

A: (1) The portable charger is wrong connected to the AC charger.
(2) It does not work with the AC charger. Please change an AC charger.
(3) This product is a breakdown with an internal circuit. Please contact us by Amazon.

Q: No response with the being charged device.

A: (1) Too low power with this product, please recharge for this product.

- (2) The voltage of being charged device is not compatible with this product. Please check the voltage of your device.
- (3) This product is wrong connected with being charged device.
- (4) The charging cable and connectors are damaged. Please change them.
- (5) This product is a breakdown with an internal circuit. Please contact us by amazon.
- (6) Using a charging line to connect the output port to the input port by mistake will cause short-circuit protection. You should disconnect it. The product is connected to the AC charger or computer USB to be charged to solve short circuit protection.

Warning

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CUSTOMER SERVICE

Two Methods to Contact After-Sales:

Thank you for purchasing. If you have any questions about the products you've received, don't hesitate to contact us by following methods.

We will provide you with satisfactory service and help solve the problem.

Method 1:



Contact us through Amazon:

"Your order">>>"sold by" >> "Ask a question">>>"An order I have placed"

Method 2:



Contact us through Email:

Customer Service Address:AMZ-Help24h@outlook.com

成品尺寸: 70mm X 105mm

材质: 80g铜版纸

印刷颜色: 四色印刷

装订方式: 12P骑马订