


## **Appendix II**

### **Internal Photographs**


## Open View of EUT



## Internal View of EUT-1

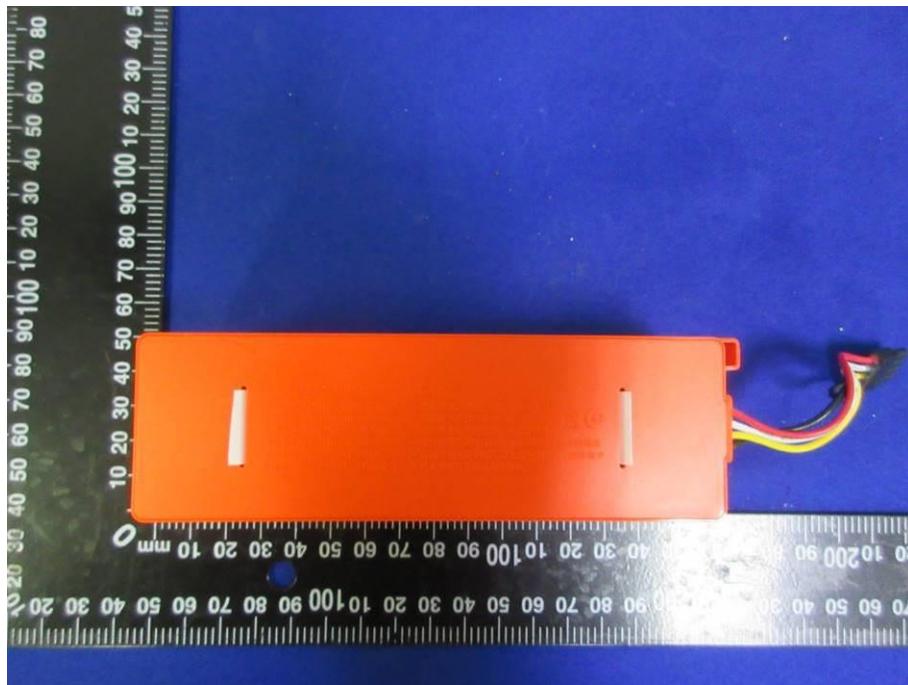


## Internal View of EUT-2

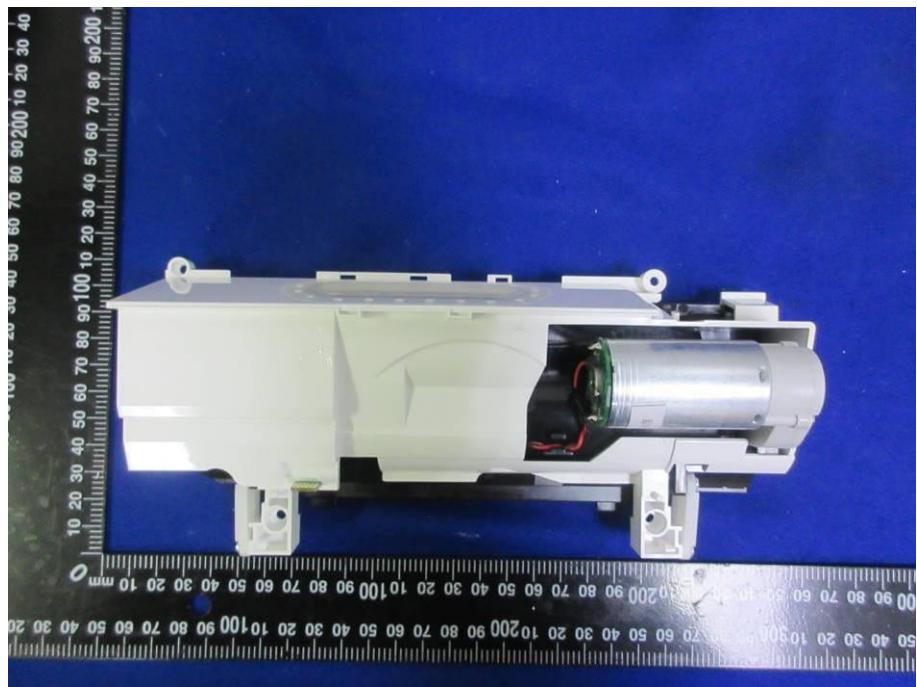


## Internal View of EUT-3




## Internal View of EUT-4

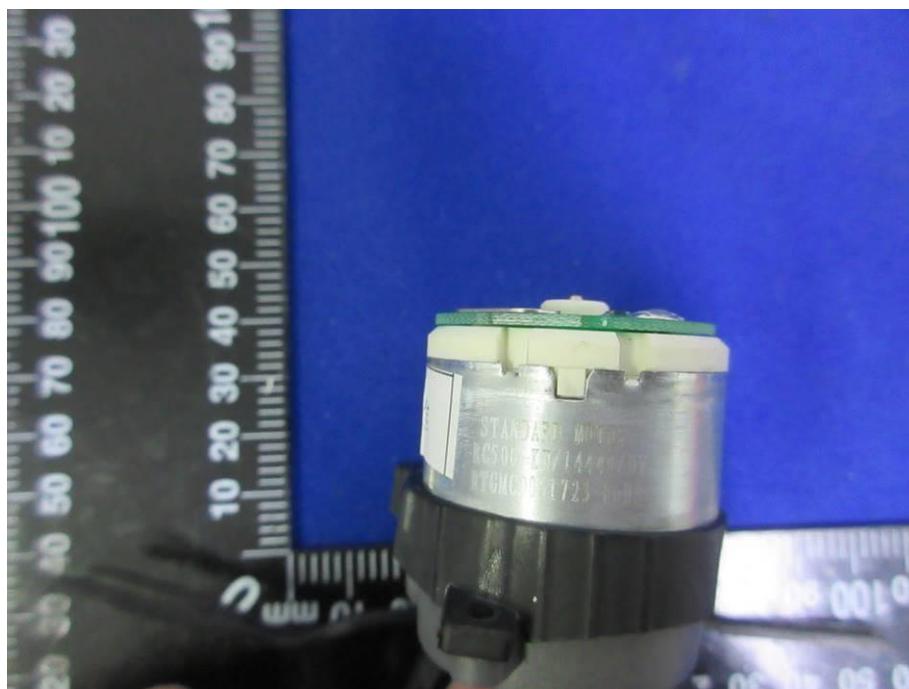


## Internal View of EUT-5

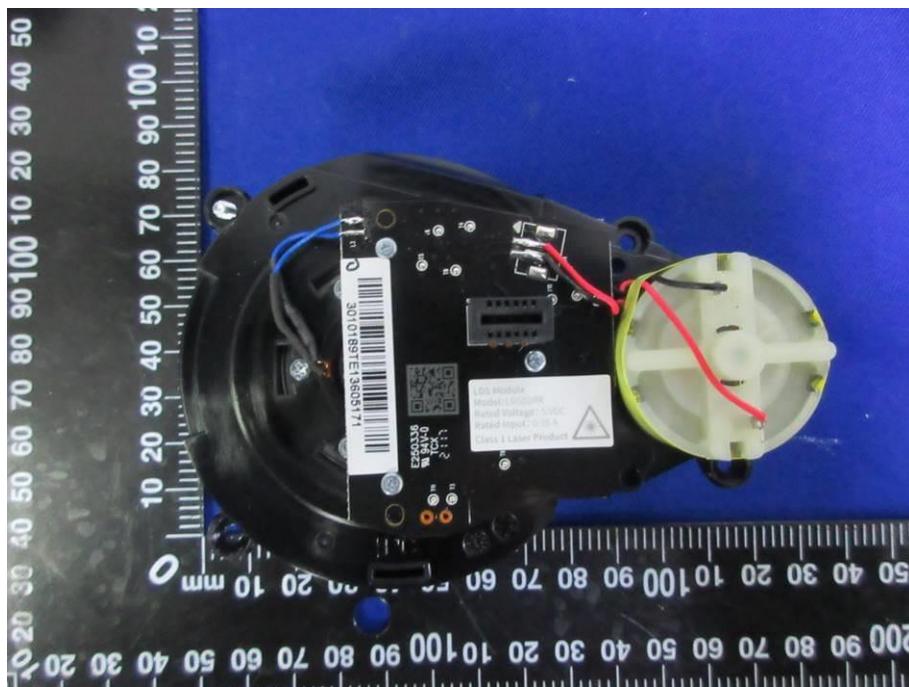


## Internal View of EUT-6

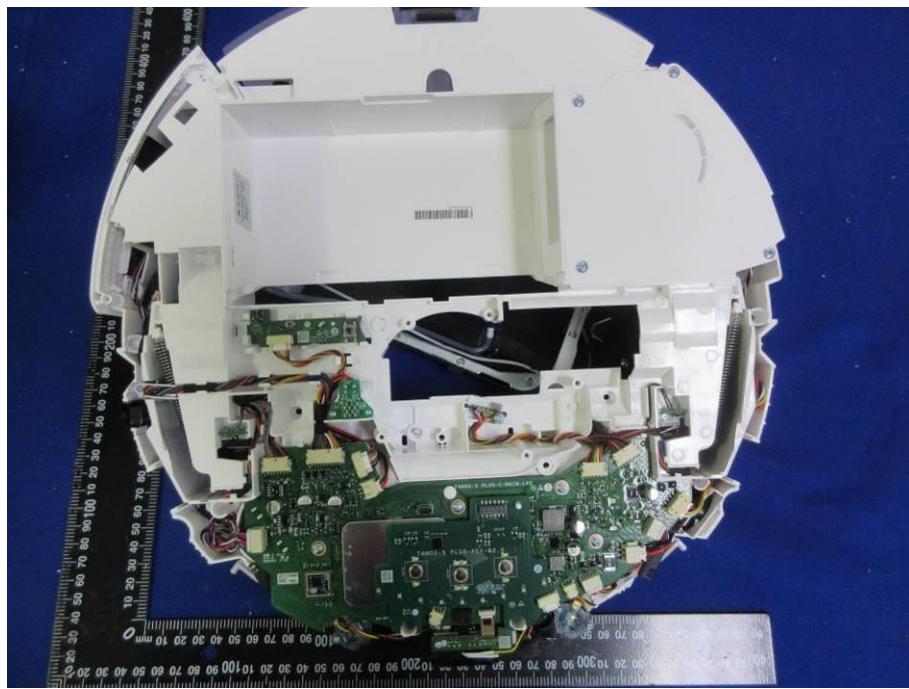


## Internal View of EUT-7

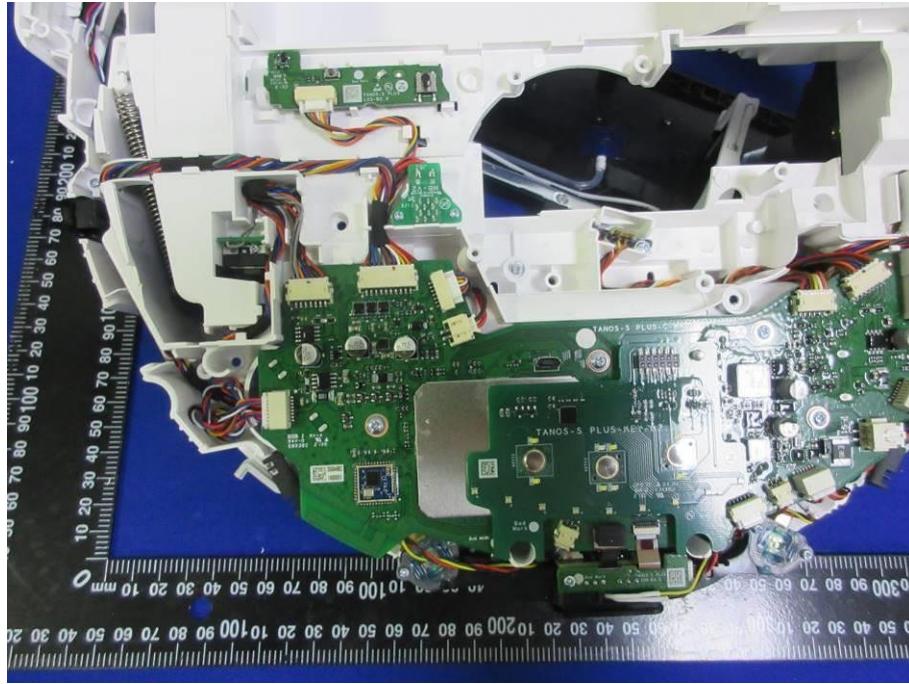


## Internal View of EUT-8

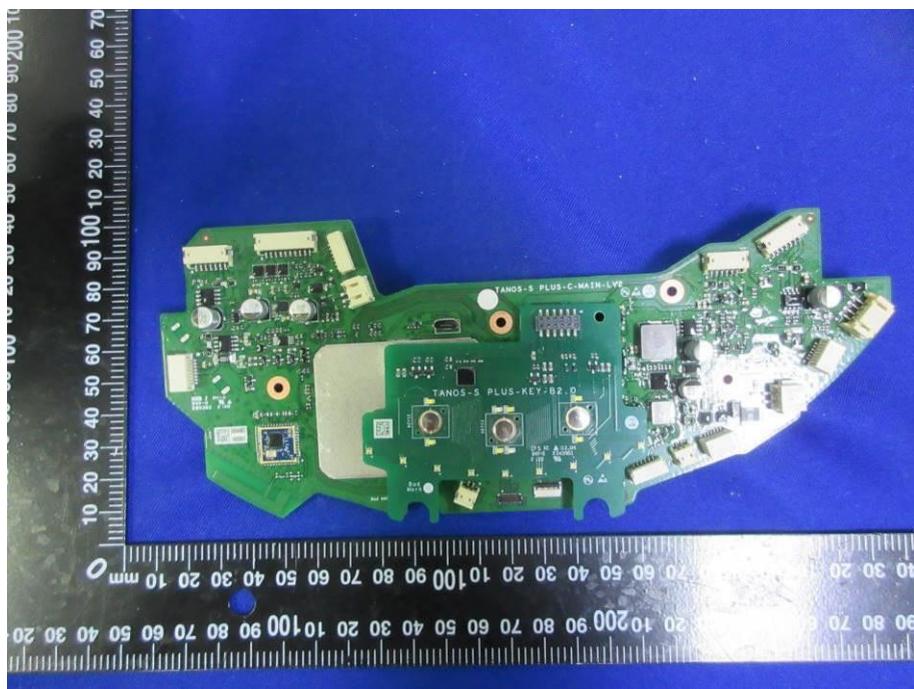


## Internal View of EUT-9

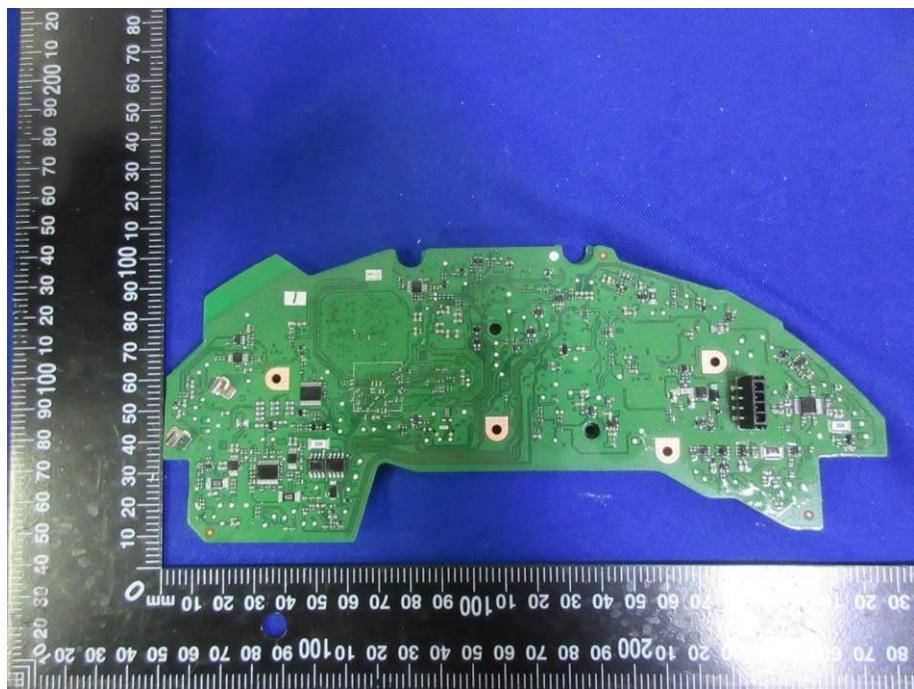


## Internal View of EUT-10

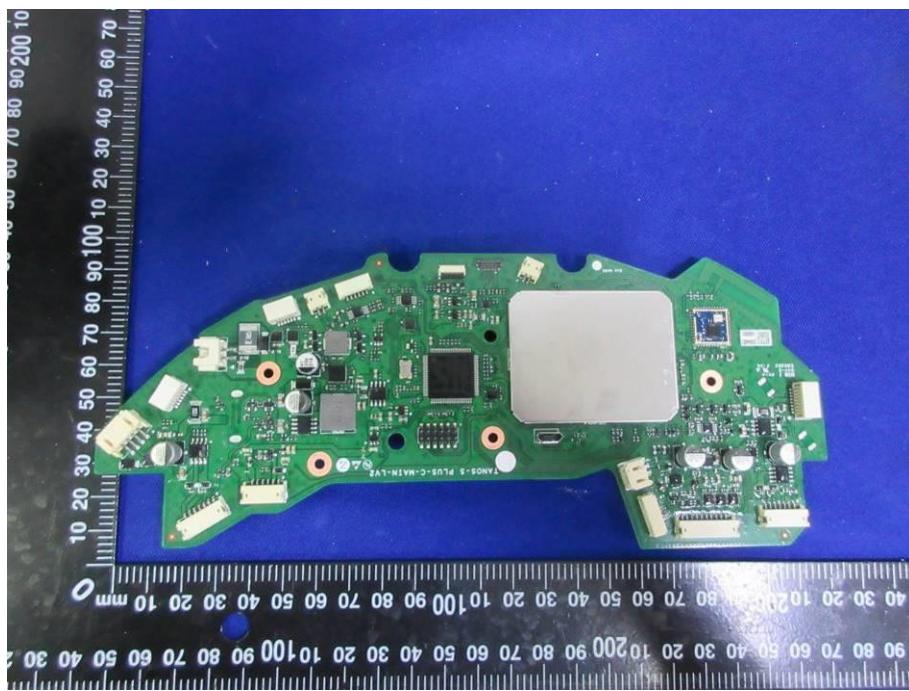


## Internal View of EUT-11

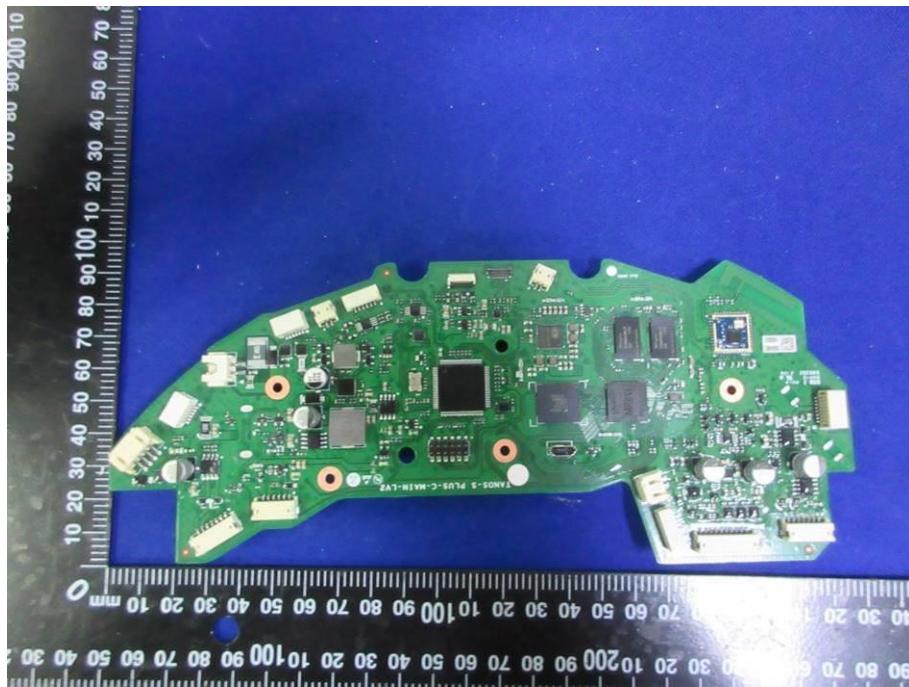


## Internal View of EUT-12

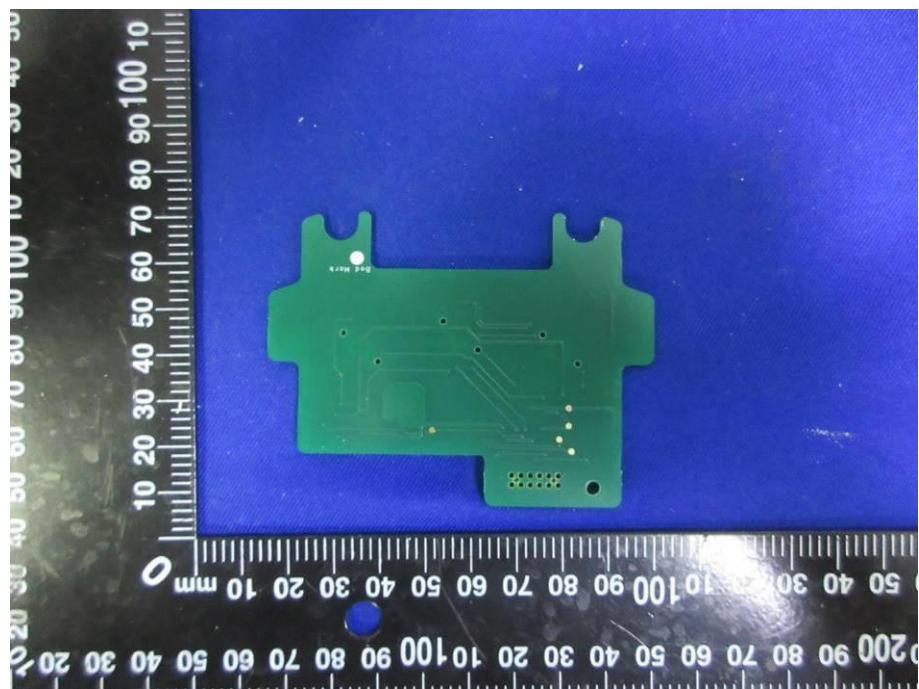


## Internal View of EUT-13

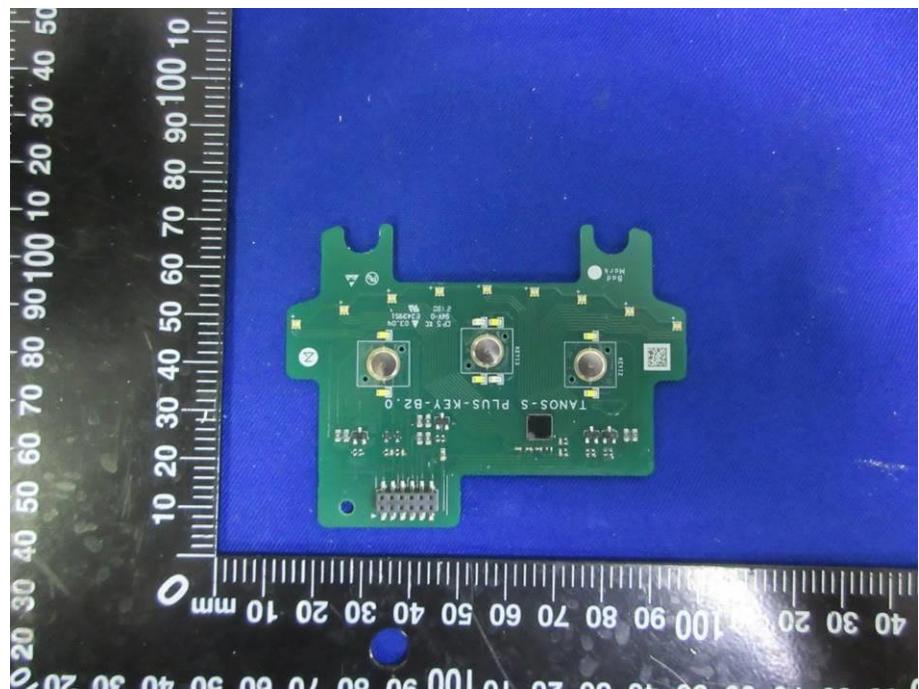


Internal View of EUT-14(Auto-Empty Dock Config1)

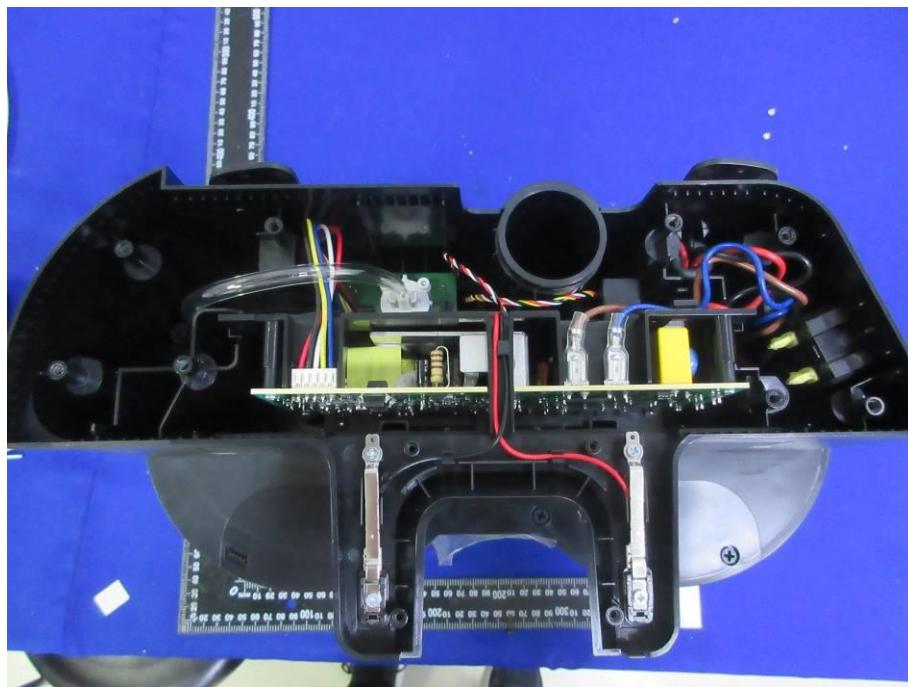


Internal View of EUT-15(Auto-Empty Dock Config1)

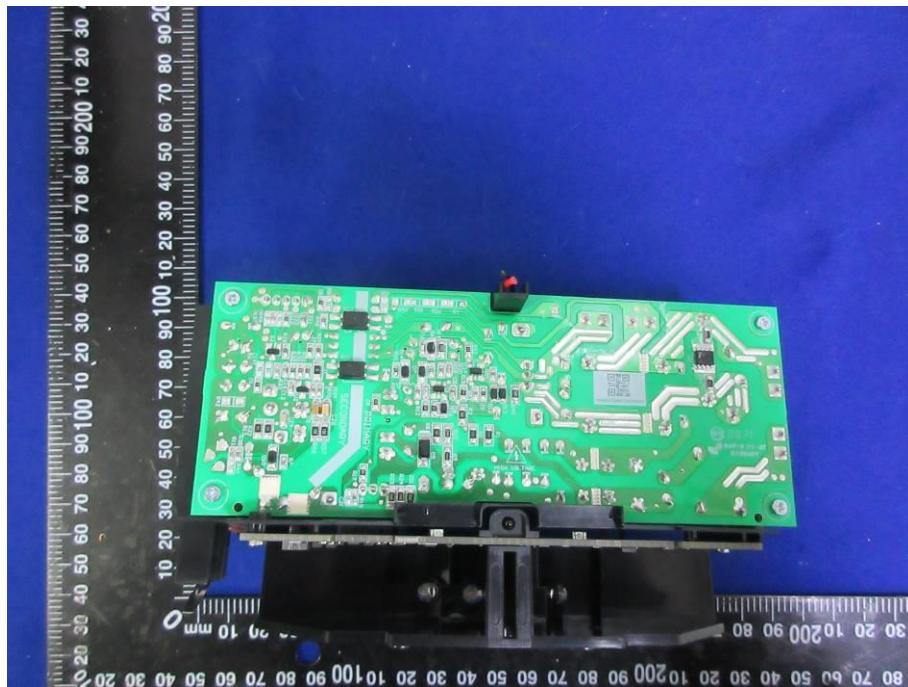


Internal View of EUT-16(Auto-Empty Dock Config1)

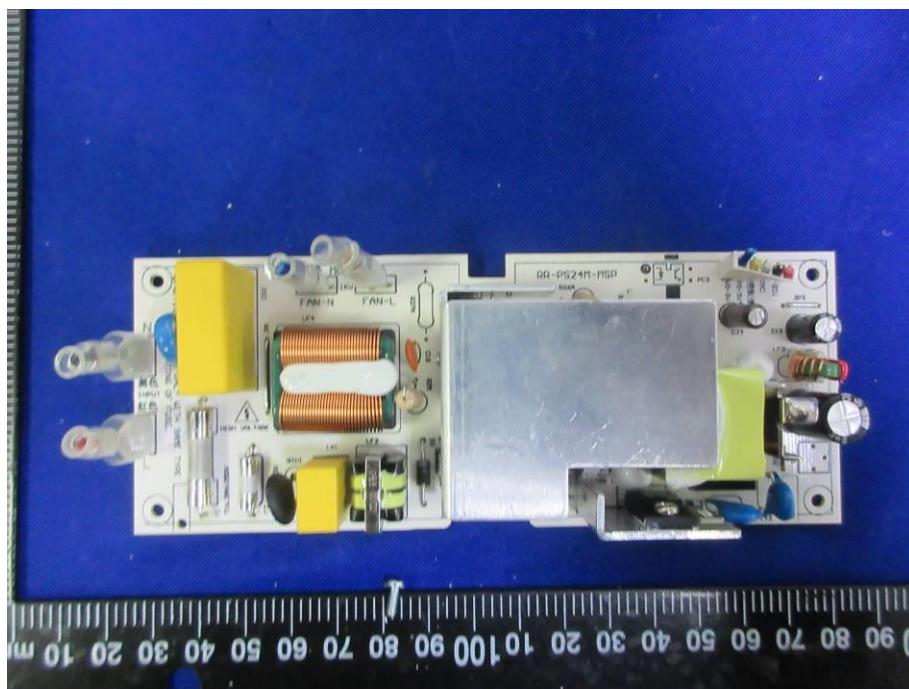


Internal View of EUT-17(Auto-Empty Dock Config1)

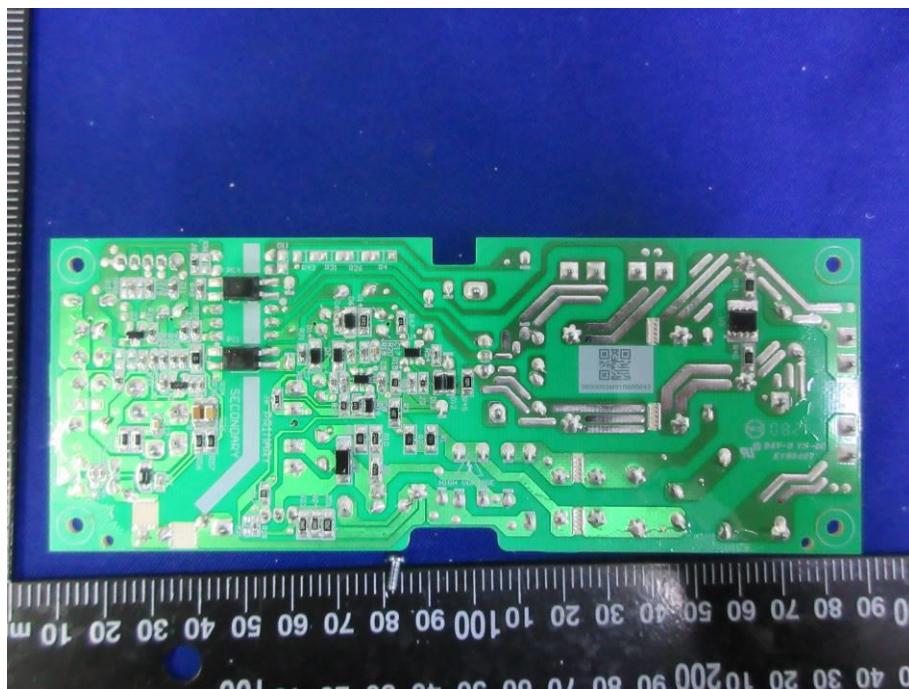


Internal View of EUT-18(Auto-Empty Dock Config1)

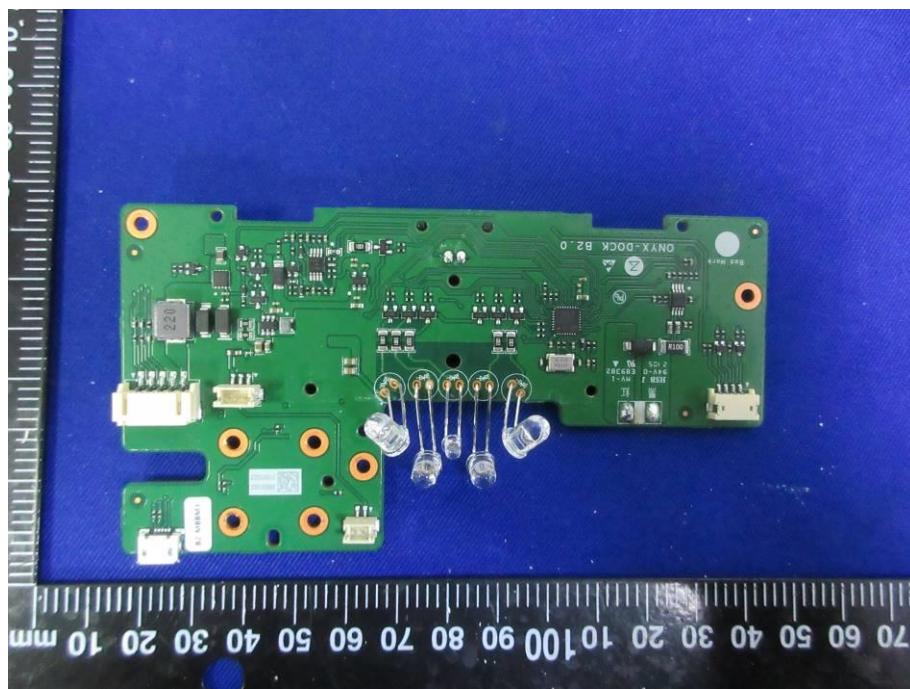


Internal View of EUT-19(Auto-Empty Dock Config2)

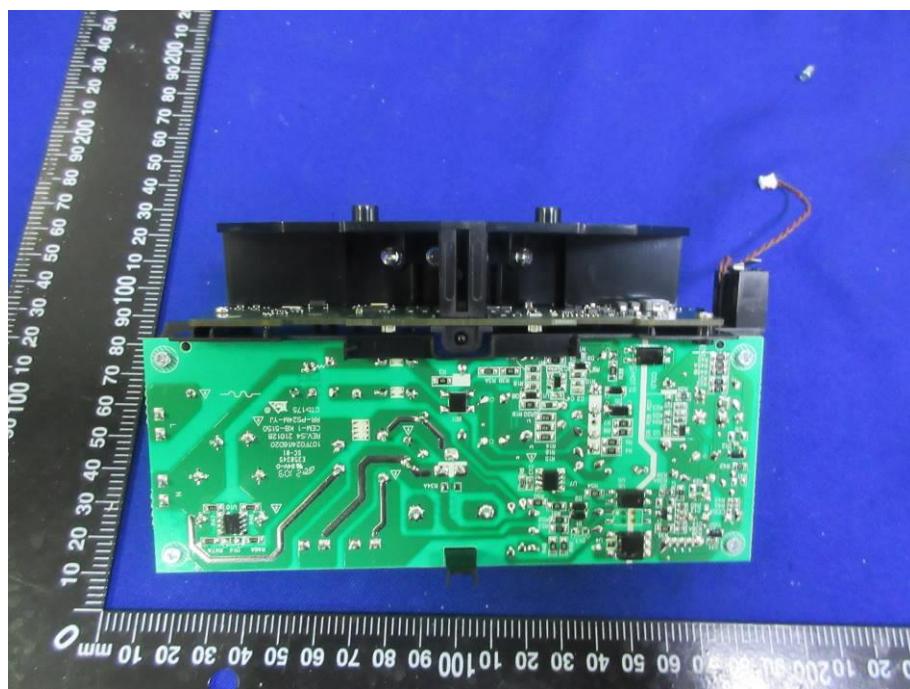


Internal View of EUT-20(Auto-Empty Dock Config2)

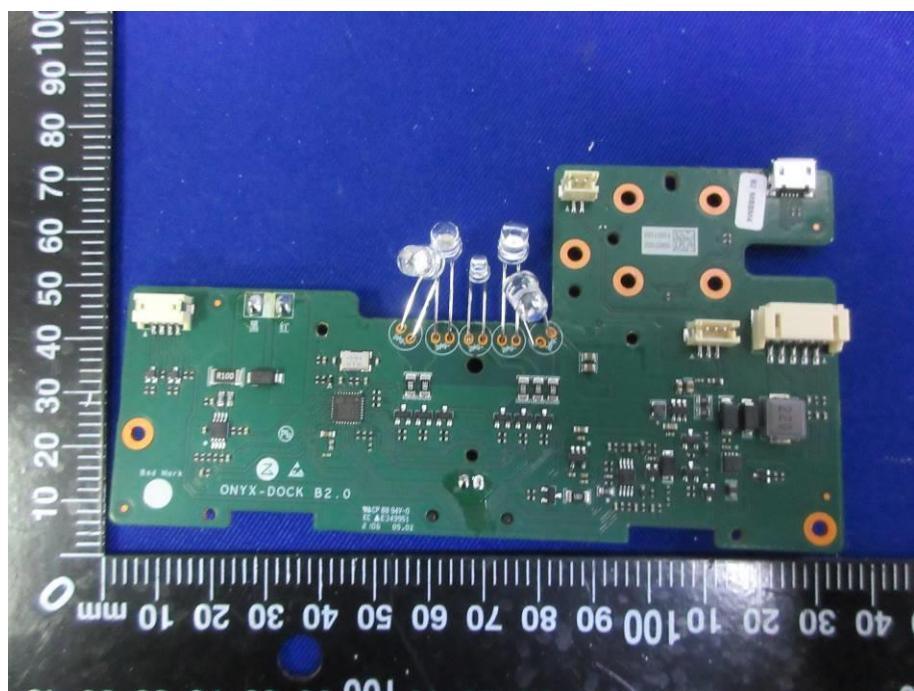


Internal View of EUT-21(Auto-Empty Dock Config2)

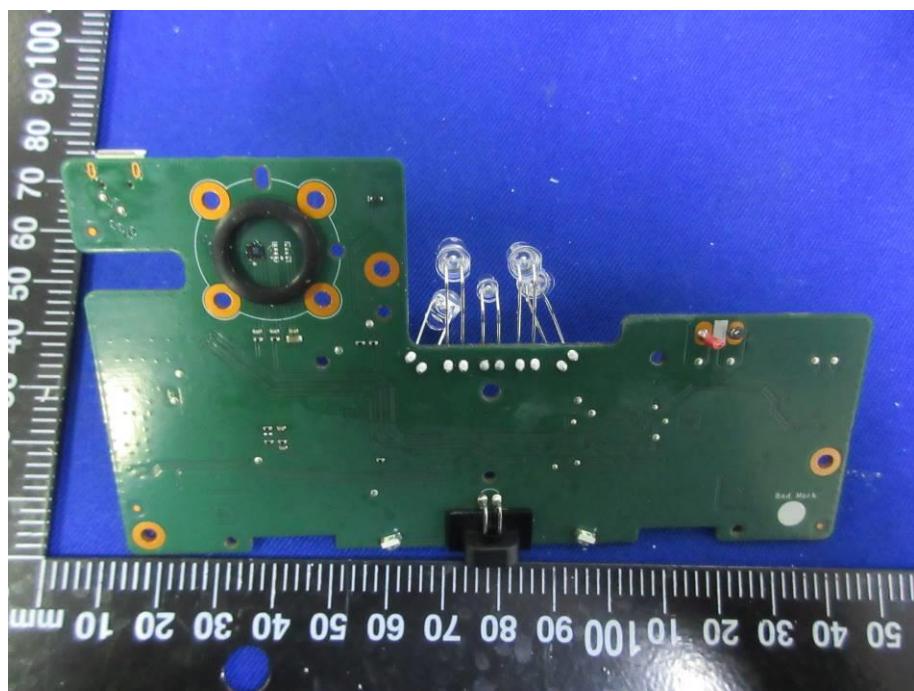

Internal View of EUT-22(Auto-Empty Dock Config2)

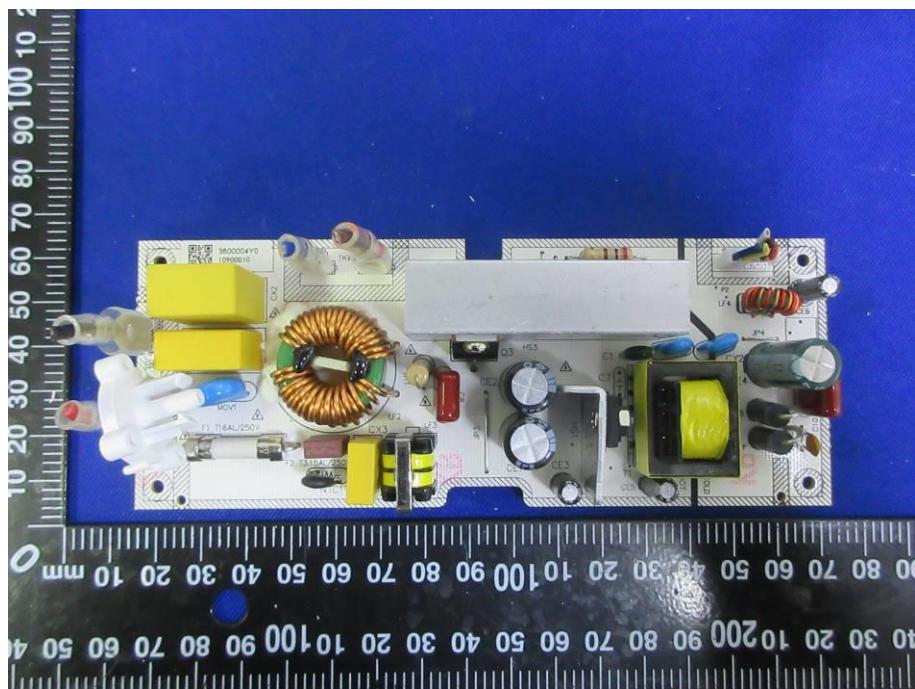

Internal View of EUT-23(Auto-Empty Dock Config2)

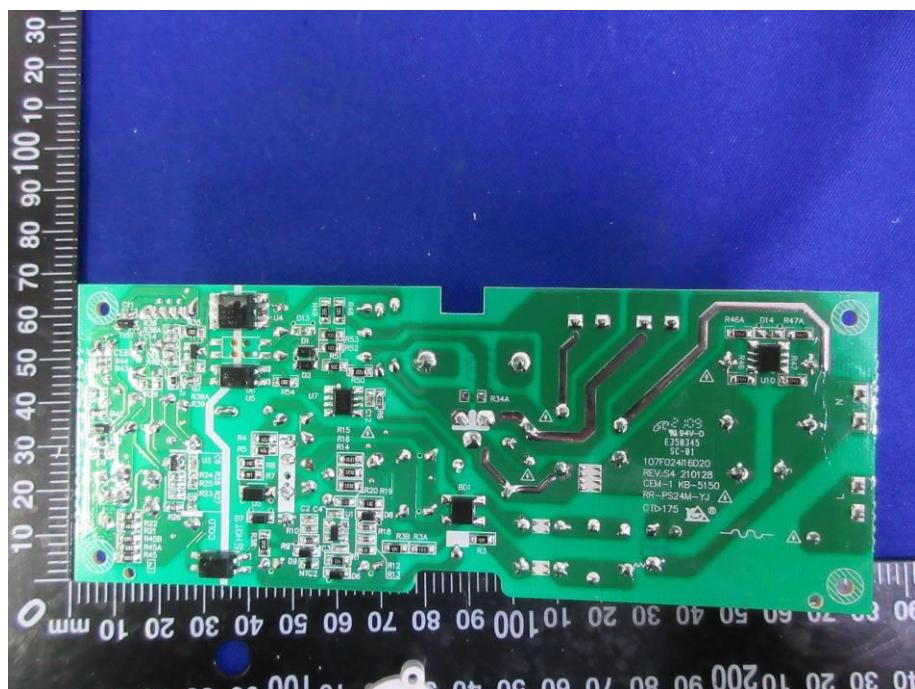

## RF Model & Antenna location

