 



Appendix II

Internal Photographs

Open View of EUT

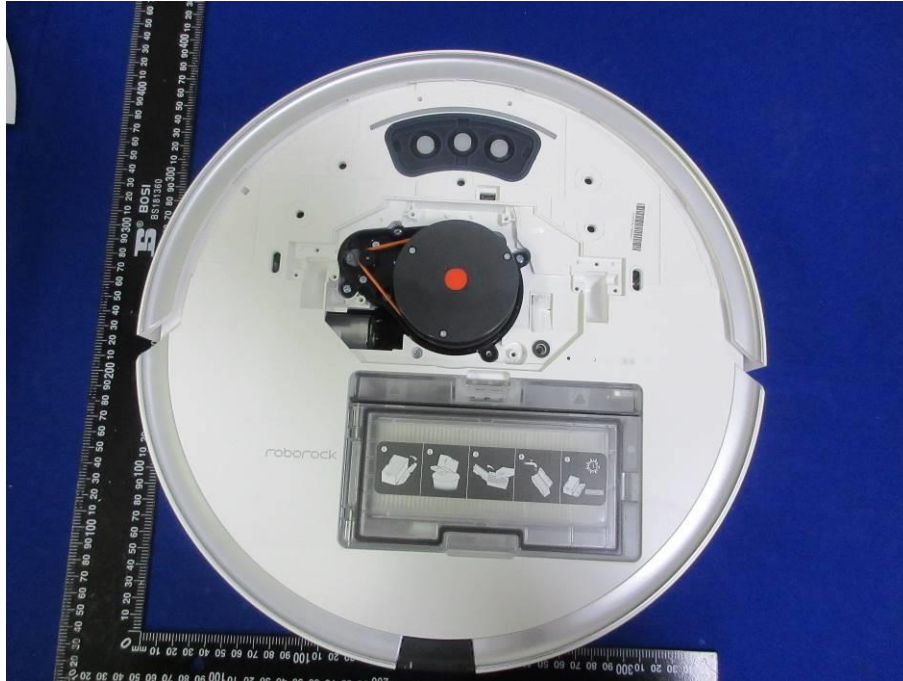

 
Internal View of EUT-1

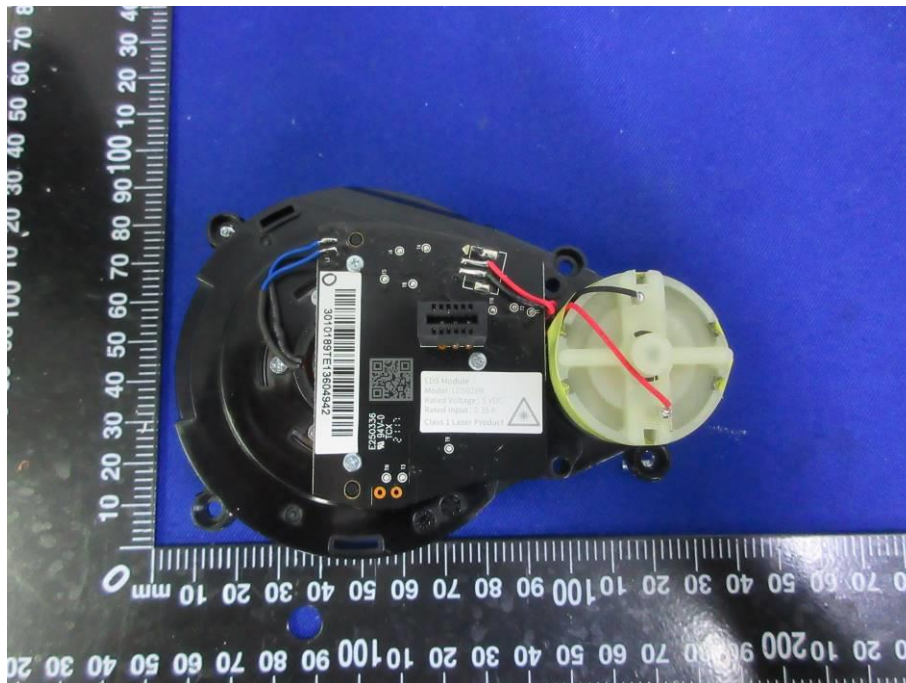

Internal View of EUT-2



 
Internal View of EUT-3

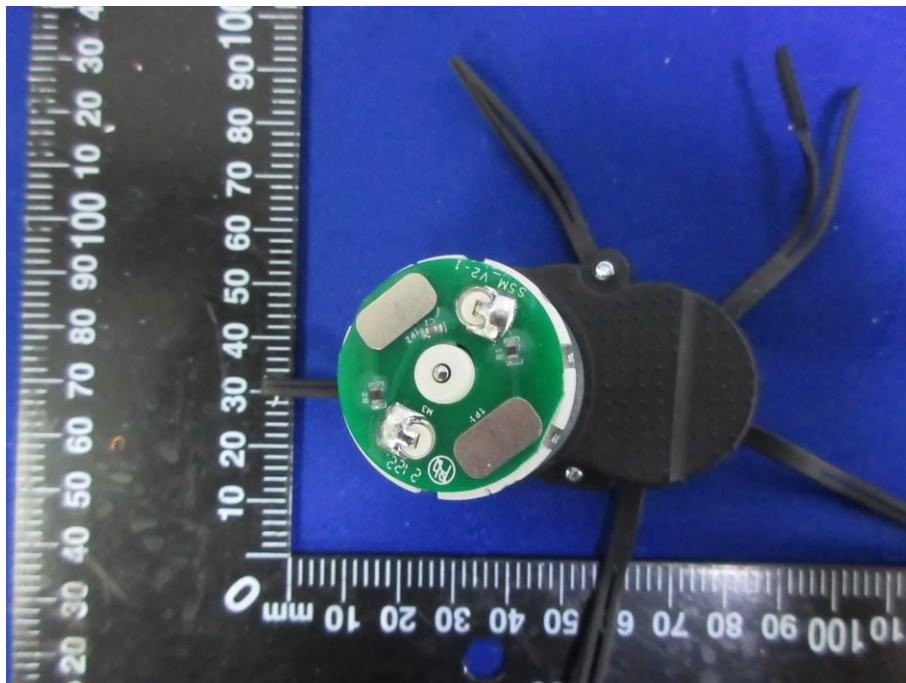


Internal View of EUT-4



 
Internal View of EUT-5

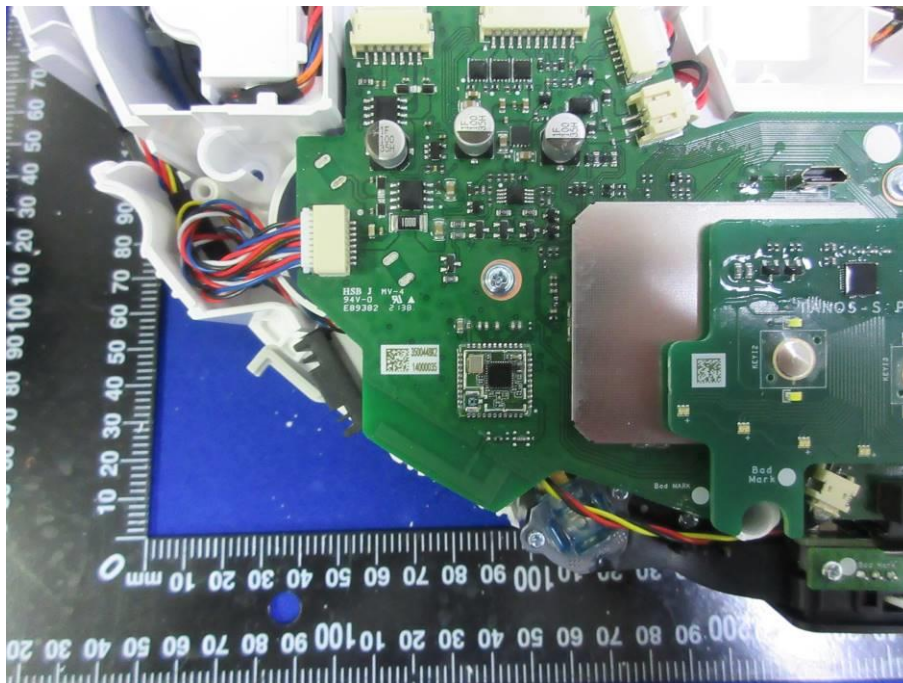


Internal View of EUT-6

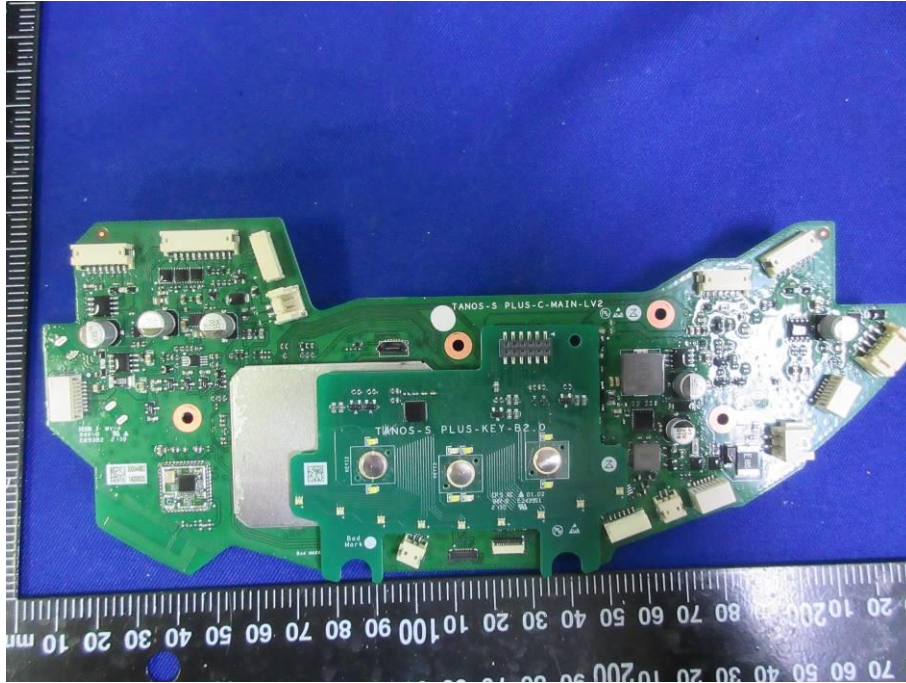 


Internal View of EUT-7

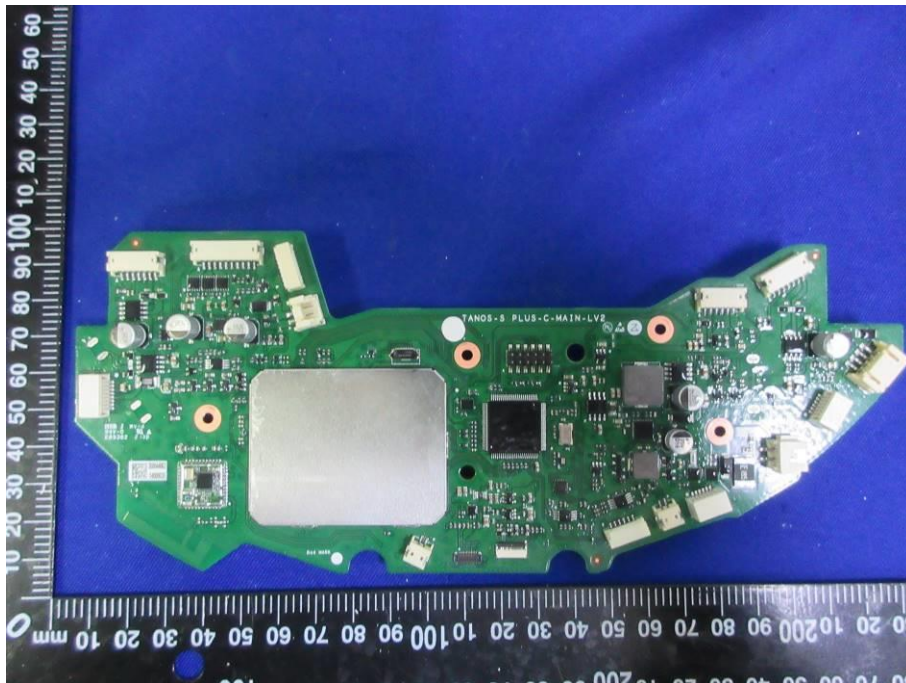 


Internal View of EUT-8

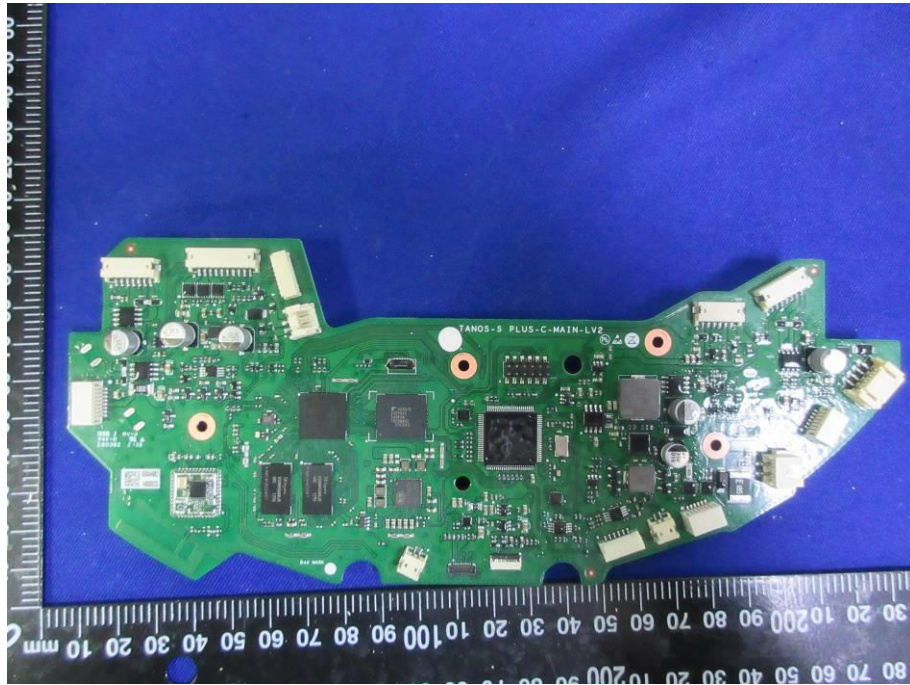 


Internal View of EUT-9

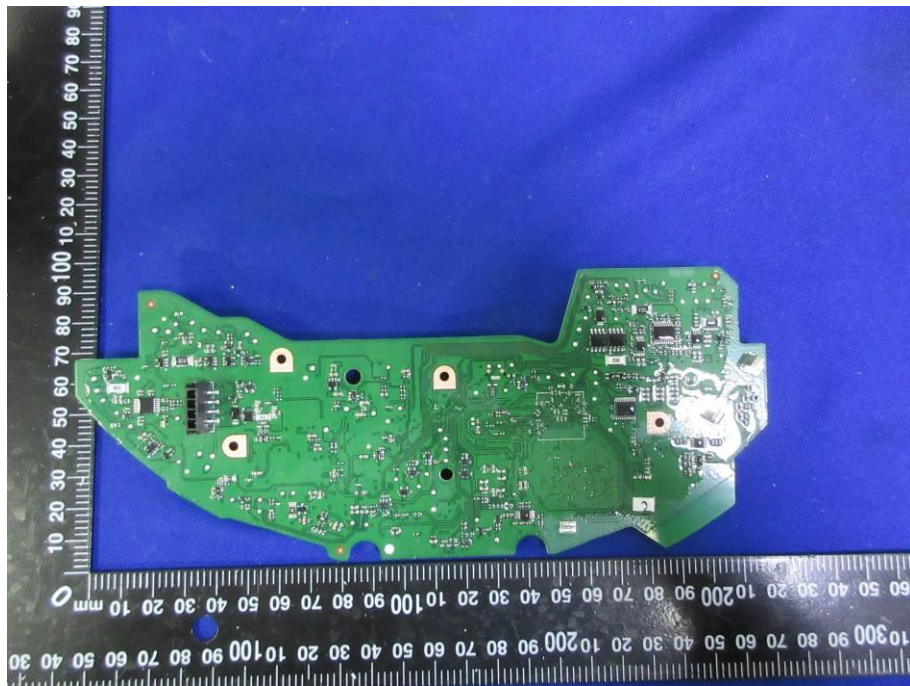 


Internal View of EUT-10

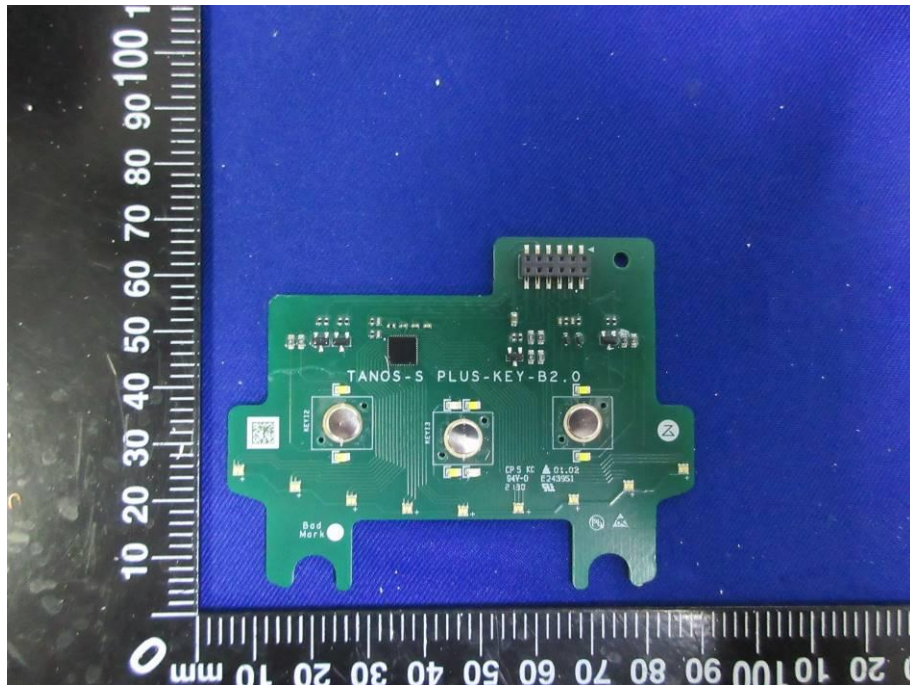 


Internal View of EUT-11

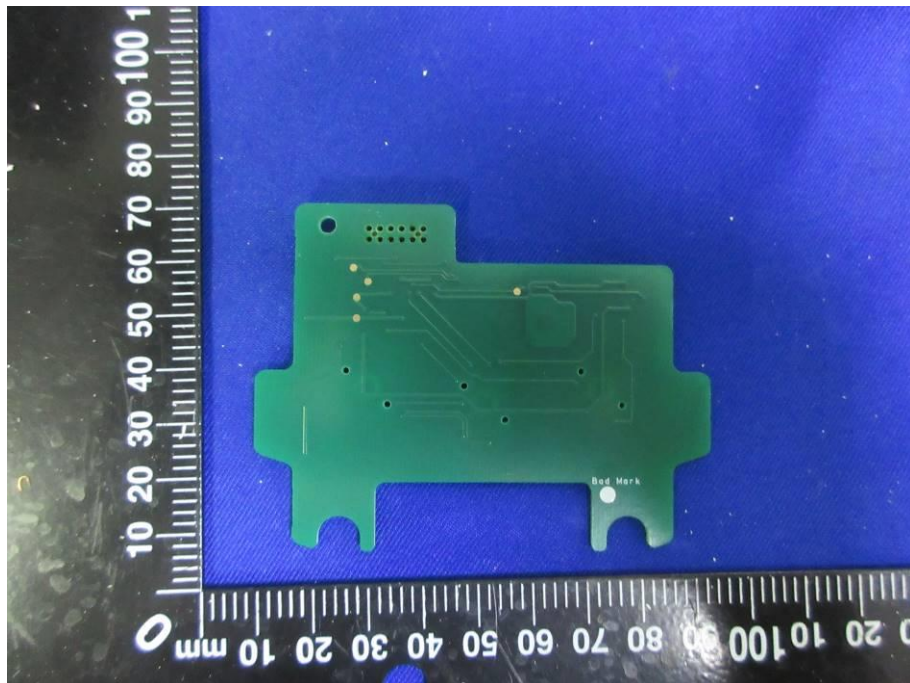 

 
Internal View of EUT-12(Auto-Empty Dock Config1)

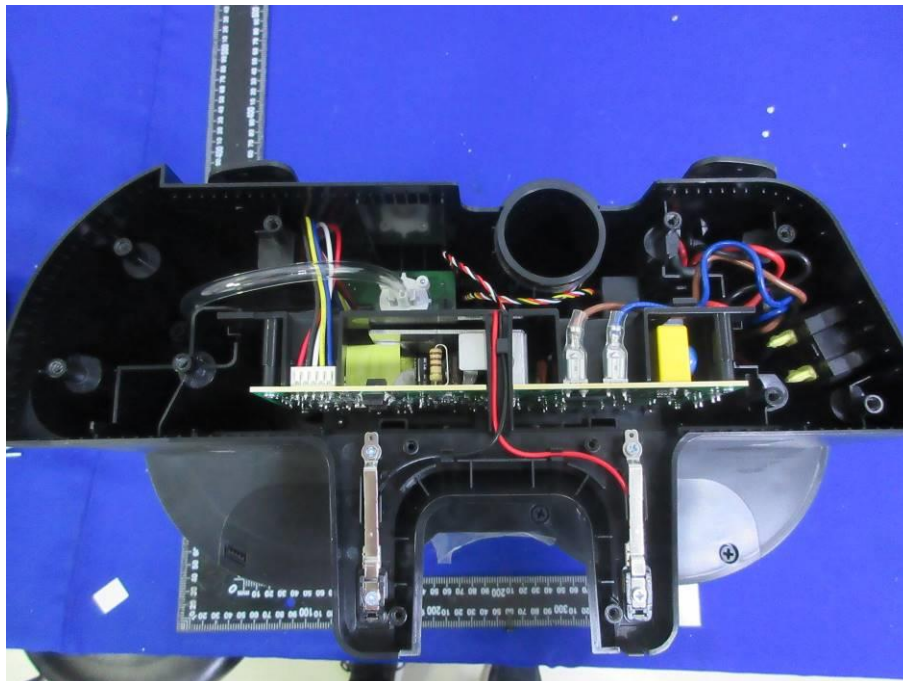

 
Internal View of EUT-13(Auto-Empty Dock Config1)

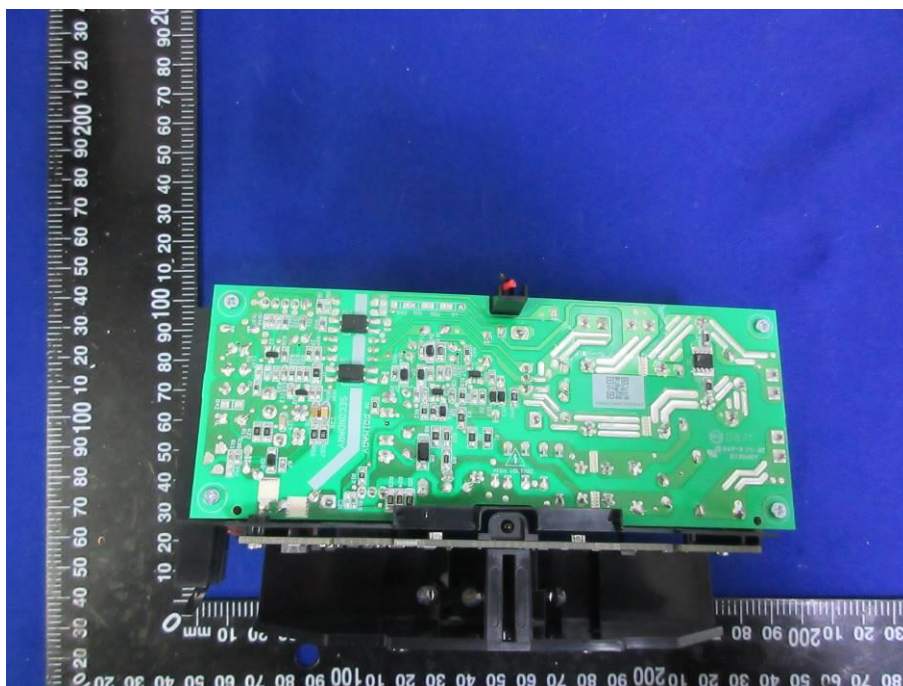

 
Internal View of EUT-14(Auto-Empty Dock Config1)

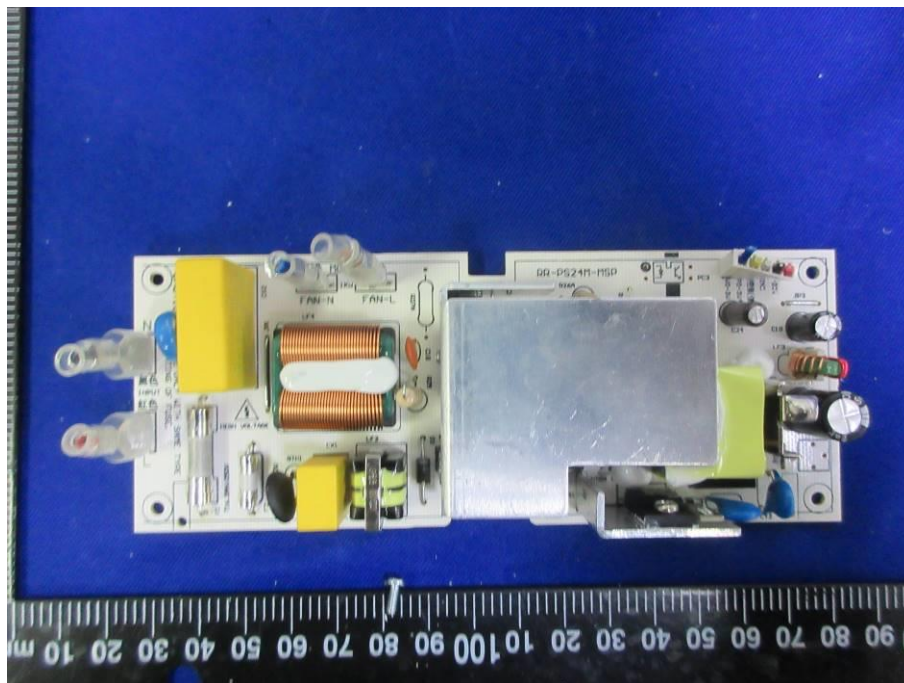

 
Internal View of EUT-15(Auto-Empty Dock Config1)

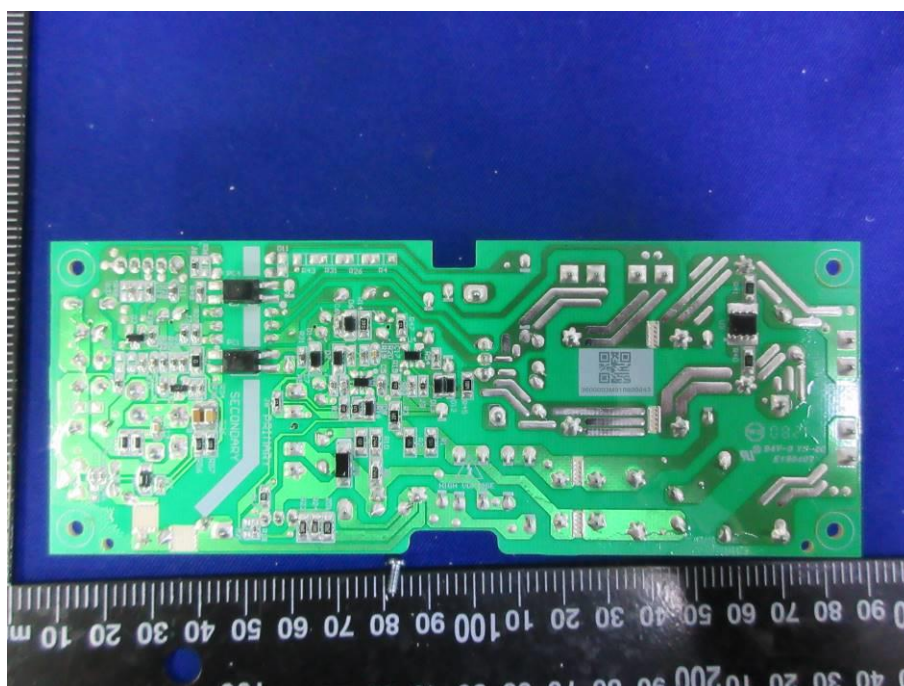

 
Internal View of EUT-16(Auto-Empty Dock Config1)

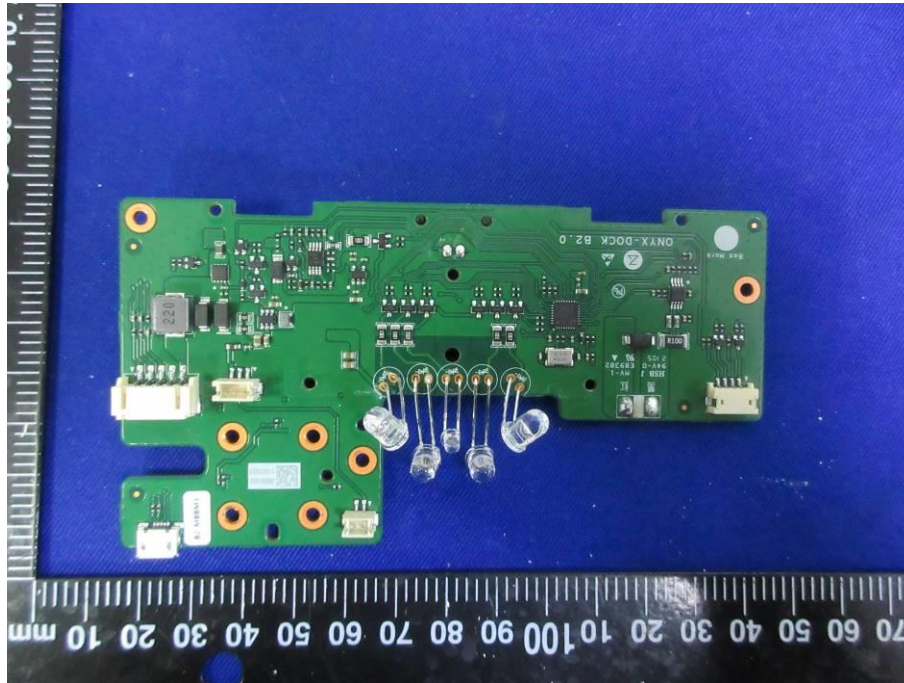

 
Internal View of EUT-17(Auto-Empty Dock Config2)

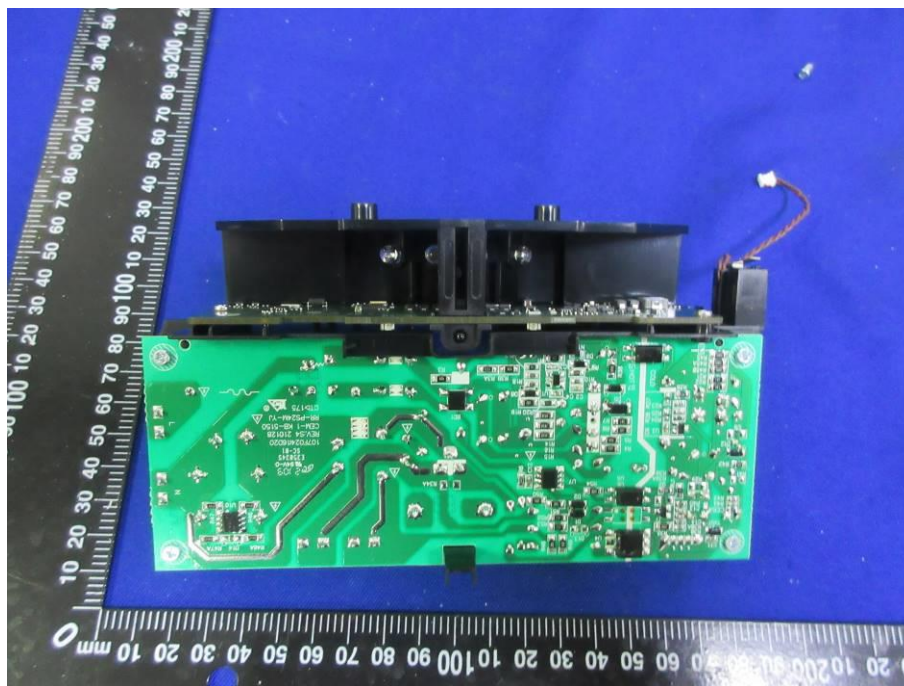

 
Internal View of EUT-18(Auto-Empty Dock Config2)

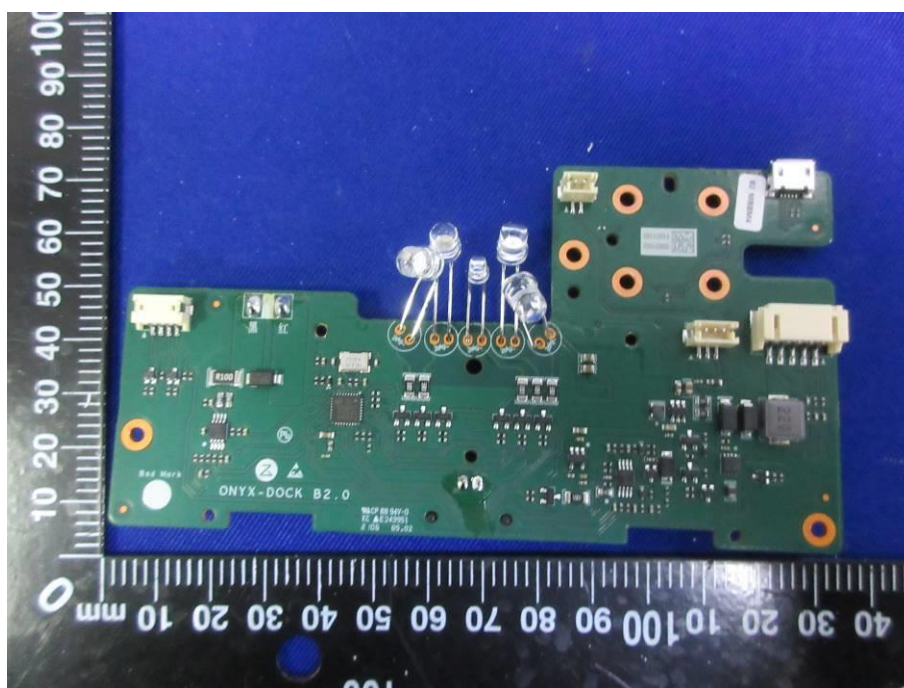

 
Internal View of EUT-19(Auto-Empty Dock Config2)

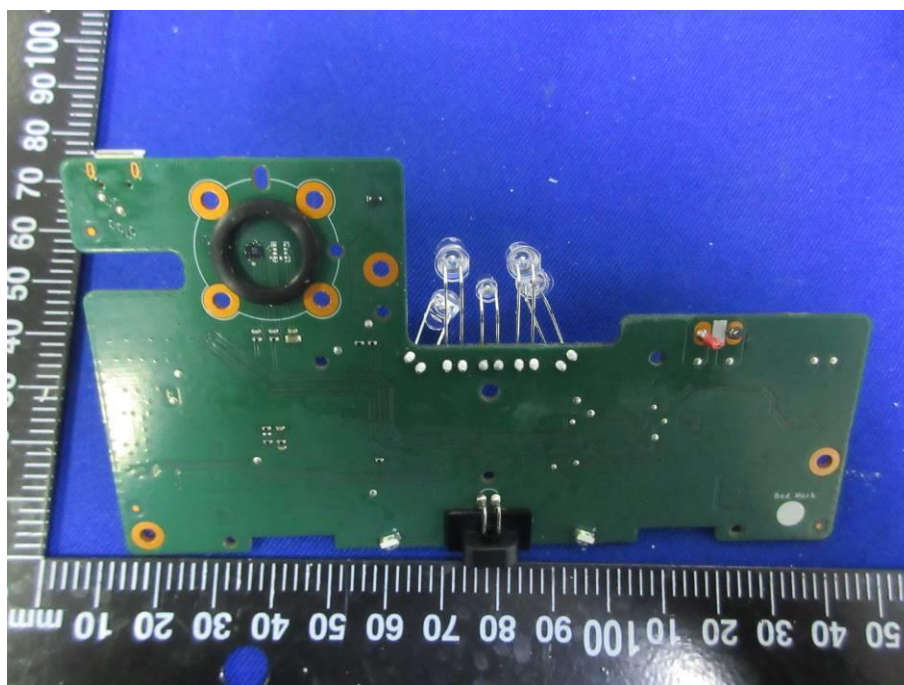

 Internal View of EUT-20(Auto-Empty Dock Config2)

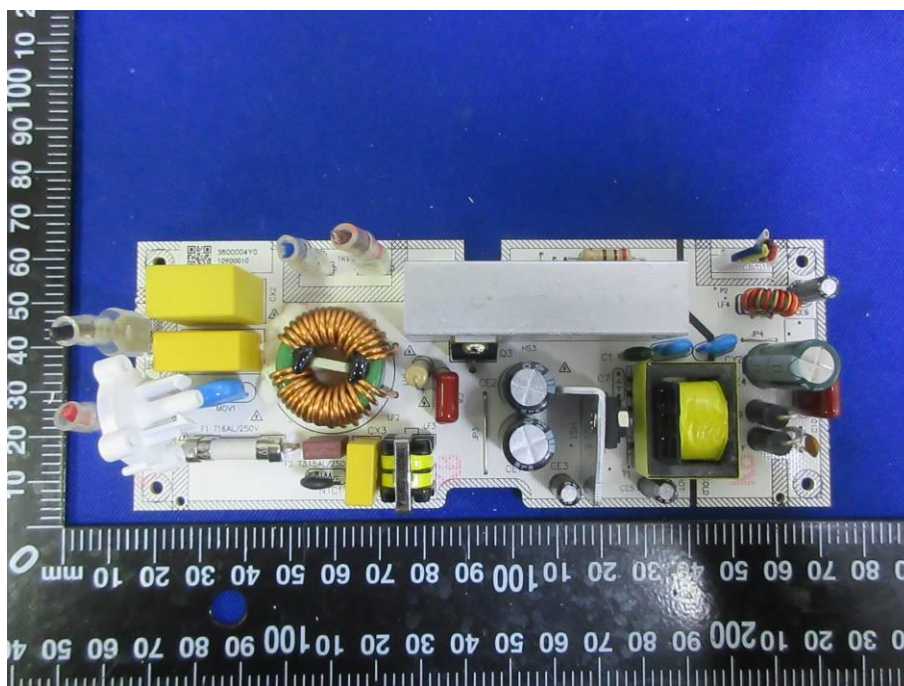

 Internal View of EUT-21(Auto-Empty Dock Config2)

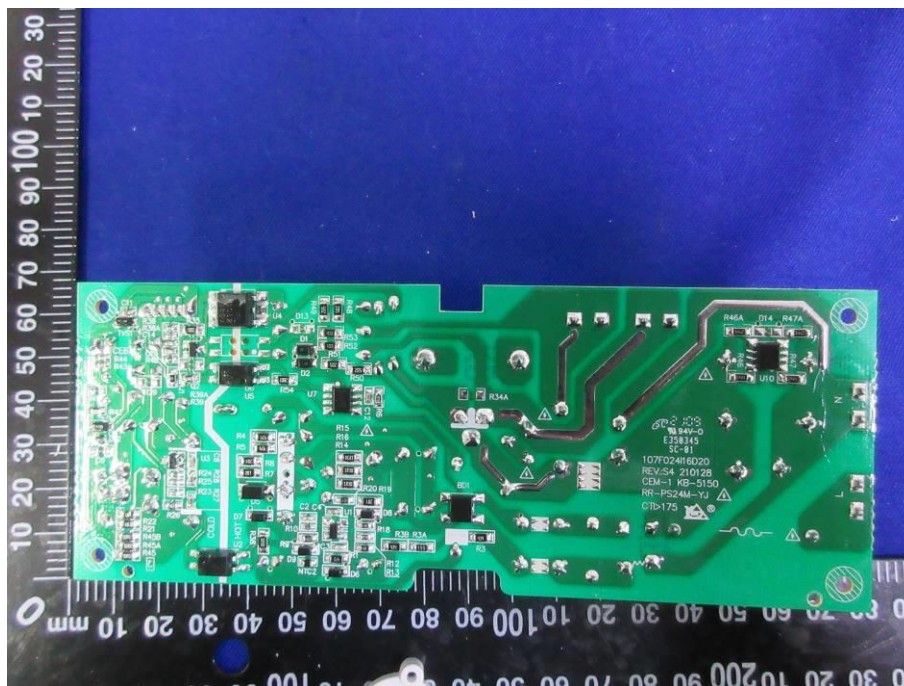

RF Model & Antenna location

