



OPERATION MANUAL

RADIO CONTROL

MODEL NO:6936

 
- Ages: For 3 and up
- Read the instructions carefully to the end before use.
- Adult guidance is strongly recommended

6936 ACCESSORIES TOTALLY

REMOTE CONTROL


Channel:5

Battery: Control: Uses "AA" size batteries
The car bottom: Uses 6 "AA" size batteries

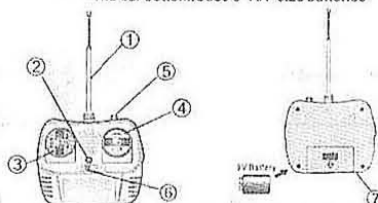

- | | | | |
|--|---|-----------------------------|----------------------|
| 1. Antenna | 4. Joystick (Turn to the left and to the right) | 7. Transmitter battery case | 10. Car switch |
| 2. Power source light | 5. Sprinkler switch | 8. Equilibrium machine | 11. Refresh the bore |
| 3. Joystick (Go forward and go backward) | 6. Power switch | 9. Battery cover switch | 12. Battery bottom |

 Attached with rechargeable battery and install of charger

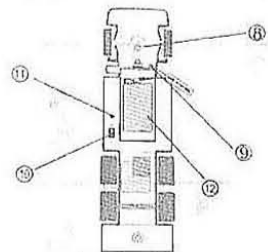


6936 Additional accessories

1. Connect the charger into the inner socket
2. Connect the charger's output plug into the socket under the car.
3. Turn on the button under the car as "A"; Or is a piece of battery takes out 6 grains the overcharging like "B".
4. The charging time should be about 4 hours.


Notes:

 1. Using special charger produced by our company is strongly recommended, charging with any other uncertain characteristic charger may destroy the circuit of the car and battery.
2. The charging time should not be too long, 6 hours charging is enough, over refresh time longly, and even destroy or invalidate the battery.

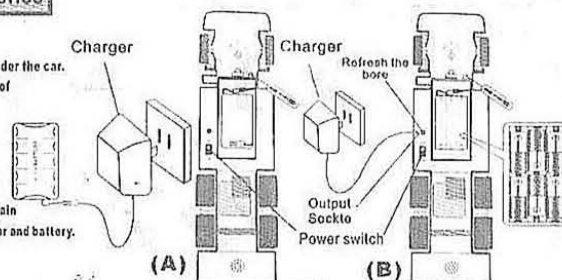

SAFETY CAUTIONS

 1. Please turn off the power switch on the car bottom after playing, and take out the batteries in car and those in controller. If the batteries are not taken out, there may occur a leakage and therefore an injury to car and controller.
2. Pay attention to the "+" and "-" electrodes when loading the batteries in car and controller. Do not mix the new and old batteries or different brands of batteries together. Stop using the batteries once they get wet.
3. Please choose a safe outdoor place, immediately stop outdoor use when lightning comes.
4. Do not bend the antenna. If it breaks, the sharp ends may become very dangerous.
5. Don't touch the tires while they are rotating in case being injured.
6. Do not control the car to run toward people.
7. Do not moisten the car, descend the day in fish do not want to play in the open air.
8. Please keep the packing materials to avoid pollution to the environment.

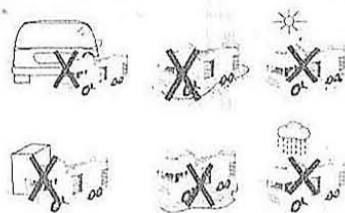

OPERATIONS

1. Pull out the remote controller's antenna
2. Turn on the switch on the controller and the one under the car.
3. Control the joystick to ride the car and.

 
① WATERING, ABSORBING WATER



② GO FORWARD




③ BACK OFF

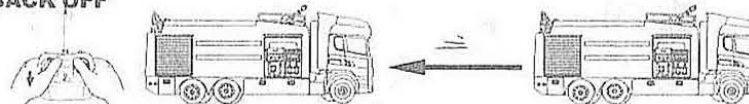

④ GO FORWARD AND LAEOTROPIC



 ⑤ GO FORWARD AND RIGHT-HAND BEND

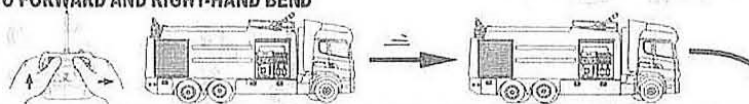


⑥ BACK OFF AND LAEOTROPIC



⑦ BACK OFF AND RIGHT-HAND BEND



 ⑧ SPRINKLER SWITCH

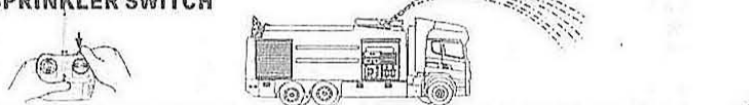

1. If slows down and the car cannot turn over, it means the battery is low and needed recharge or replace battery
2. Do not forget to turn off switch under the car when stop using it, otherwise, the battery will be used out very soon.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by GUANGXING TOYS FACTORY may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.