

 
78mm




Bluetooth speaker


V2 / Bluetooth speaker User Manual
Please read me before using

- Safety Information**
- Please read and keep this Manual, and pay attention to the below warnings.
 - Please put this speaker in a stable place, to avoid any damage caused by accident dropping.
 - Please keep this speaker away from any liquid or fire.
 - Please don't leave this speaker in high temperature, or high moist environment for long time.
 - Please don't insolate this speaker


- Item List**
- 1 pcs speaker
 - 1 pcs AUX cable
 - 1 pcs charging cable
 - 1 pcs manual
- 

1 pcs AUX cable



 
1 pcs charging cable
- 

1 pcs speaker

 


1 pcs manual

Buttons Instruction

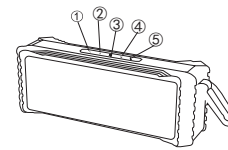

- ① Volume down/Previous song
- ② Volume up/Next song
- ③ Pause/PlayM
- ④ ON/OFF/Mode shift
- ⑤ Hands free phone call



- ⑥ Charging slot
- ⑦ Micro SD/TF card slot
- ⑧ AUX Line in
- ⑨ Reset

How to connect the mobile phone by Bluetooth?

1. Long press power M for 3 seconds, the speaker will prompts "welcome to use Bluetooth speaker, the Bluetooth is waiting for connecting the device". In this status, the indicator light on blue and flash slowly. If the speaker is not in the Bluetooth mode, please short press button M to shift into Bluetooth mode.

2. Turn on the Bluetooth of mobile phone and search V2, Match the speaker to the mobile phone with the initial pairing password "0000". After speaker prompted "Bluetooth connection is succeeded", the blue indicator light will stop flashing, and then the music file in the mobile phone can be played via Bluetooth. Bluetooth paring time is about 1 minute; it will be different for different mobile phones as the Bluetooth version is different.
3. Note: There is a memory function for the Bluetooth speaker. Turn off the Bluetooth of the previous mobile phone, and long press the button M for 3 seconds before connecting it to another mobile phone.
4. Button Control Instruction: press button M for power OFF/ON; short press button - for last song, long press button - for volume down; short press button + for next song, long press button + for volume up; press button M for pause / play.
5. Hands Free Phone Call: press button M to answer the phone call, long press button M for 3 seconds to refuse the phone call. After the phone call finished, short press button M, the speaker will be back to work. Press M to shift mode into AUX or MP3 mode. (Speaker with the coming phone No. prompts function).
6. Press button M to turn off the speaker when don't need it on work, to save the power. (The speaker will turn off automatically if it doesn't work and have got no operate instruction within 10 minutes.)

Repair by this card

please keep it

Warranty Card

Model No.: _____
 Purchasing Date: _____
 User Name: _____
 Telephone No.: _____

| No. | Purchasing Date | Repair Time | Defect | Repair Result | Operator |
|-----|-----------------|-------------|--------|---------------|----------|
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

Warranty Records:

1.Customer could get a new same item within half month since the purchasing date, if found the purchased item with function problems. The defective item should be returned with undamaged package and without any human damage.
 2.Warranty service only could be in effect under that the customer uses this item in correct way.
 3.All human damage, self disassemble and self assemble, abnormal usage of this item, are out the cover range of warranty.
 4.To door service and free of shipping cost are not available for this item.
 The warranty service may be not available if this Warranty Card got lost or damaged. Seller has the final explanation right for the warranty terms.

no operate instruction within 10 minutes.)
 The Bluetooth version of the speaker is 4.2. The speaker also can answer the phone call under AUX/MP3 mode, if the speaker already connected by Bluetooth. It will back to original mode when the phone call finished.
How to Line in by AUX (external audio input)?
 This speaker can connect to all kinds of audio devices (such as mobile phones, ipad, MP3 player, cassette player, CD player, radio, etc.). With 3.5mm AUX plug in the earphone jack of the audio device and the other end in the AUX slot of the speaker, press button MODE to shift to AUX mode, the speaker will prompt "AUX". Then it can play under AUX line in mode.
How to use Micro SD/TF Card?
 Insert the Micro SD/TF Card into the TF slot of speaker, it will prompt "MP3", then play the audio files in the card. If the speaker is not in MP3 mode, press M button to shift into MP3 mode. The speaker will prompt "MP3".
Support Audio File Format: MP3 WMA WAV APE
Support 32G TF card maximum
Card Reader Function: turn off the speaker, insert the micro SD/TF card, then connect the speaker and the computer by the USB cable, USB plug to the computer, the micro USB plug to the charging slot. It becomes a carder reader, thus it can transfer the dates between the computer and the micro SD/TF card.
How to charge?

1. The Speaker will prompt "battery low, need to be charged" and turn off automatically.
 Turn the power switch OFF, and insert one end of the cable to the slot of speaker, the USB plug to the computer or the mobile charger. (The mobile charger output better be 5V, 2000mAh or more than 2000mAh.)
 Side indicator light on red indicates it's charging, light off indicates charging finished.
 2. It takes around 4 hours for fully charged. Its working time is about 4-8 hours after fully charged. Working time depends on playing volume. Charging time depends on the output of the mobile charger.(mobile charge output small ,charging time longer. mobile charge output big, charging time shorter.)
 Please note it's normal that the speaker will become a little heat during charging. Please don't use the speaker while charging, to keep the battery life cycle longer.
Reset Function:
 When the speaker is stuck, please insert a pointy tool into the reset hole and press. Then turn on the speaker.
How to connect to tablet pc/laptop by Bluetooth?
 Please refer to the way of connecting to mobile phone by Bluetooth. (Note: the Bluetooth version of the speaker is 4.2, the Bluetooth connection may fail if the Bluetooth version of the tablet pc/laptop is lower than 4.2. In this situation, it only can work by using the USB cable to connect.)
F&Q

1. It cannot be matched with the devices by Bluetooth: (1) turn off the speaker and mobile phone, and then turn on both, rematch. (2) Too many Bluetooth devices surround, turn off the other Bluetooth devices.
2. Sound too small or distortion too much: (1) may be battery runs out. Please charge it. (2) Turn up the volume of the mobile phone.
3. Sound off and on: please check if the range between the speaker and the device is more than 10 meters. Or check if there are any barrier between the speaker and the device.

| Specification | | | |
|-------------------|---------|-----------------|-------------|
| Model number | V2 | Power output | 10W*2 |
| Bluetooth version | 4.2 | Bluetooth range | ≤10 meter |
| Battery | 2600mAh | Power input | DC5V 2000mA |

warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
 If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -- Reorient or relocate the receiving antenna.
 -- Increase the separation between the equipment and receiver.
 -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -- Consult the dealer or an experienced radio/TV technician for help.
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
 FCC ID: 2AN4U-V2