



Destressor Body



Ear Sensor



microUSB Charging Cable

Left: wireless dongle  
Right: USB authorization key  
(only available for particular licenses)

Use wireless for connection

Use USB for connection

Find the iDestressor app in one of these locations, depending on your mobile device:

- The Apple® App Store® for iOS devices
- The Google Play™ Store for Android devices



iOS

Android

Web site

What are the LED status indicators on the Eureka Destressor?

- Red: the battery is charged, and will be off after fully charge
- Green: normal power supply
- Blinking green: the battery should be charged
- Blinking blue: wireless connecting indication  
(USB version only green available, the green light indicated power on)

Connect the ear sensor to the Destressor→




Turn on the power→


### Connect the Ear Sensor



Let's take a relaxed, comfortable posture, and keep quiet for a few minutes.

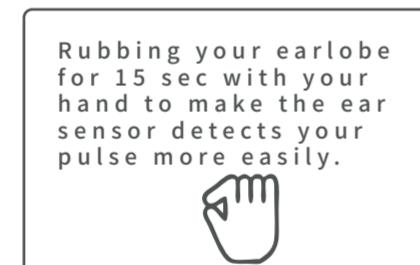

Rubbing your earlobe for 15 sec with your hand to make the ear sensor detects your pulse more easily.

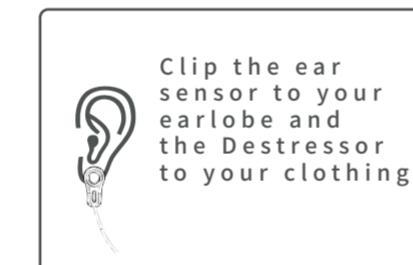

Clip the ear sensor to your earlobe and the Destressor to your clothing.

Once you've set up and started using Eureka Destressor you can choose one of the following modes for your needs



stress assessment



Breathing coach



Relaxing music

### Cautions

- Prolonged contact may contribute to skin irritation or allergies in some users. If you notice any signs of skin redness, swelling, itchiness, or other skin irritation, please discontinue. Continued use, even after symptoms subside, may result in renewed or increased irritation. If symptoms persist, consult your doctor.
- The device contains electrical equipment that could cause injury if not handled properly.
- This product is not a medical device, and is not intended to diagnose, treat, cure, or prevent any disease.
- Consult your doctor before use if you have any preexisting conditions that might be affected by your use of this Eureka Destressor product.
- Do not check call notifications or other data on the product's display while driving or in other situations where distractions could be hazardous.
- This product is not a toy. Do not allow children or pets to play with your Eureka Destressor. The product contains small components that can be a choking hazard.
- Your Eureka Destressor product is not splash and rain proof. Please keep it away from water.

### Additional Help

- Please visit our online support center for more information and to get latest news

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Trademark

©2017 Third-party trademarks mentioned are the property of their respective owners.

### statement

The contents of the manual and manual are subject to change without notice. The Company does not warrant that the contents of this manual are correct. The Company shall not be liable for any damages, omissions or differences between products and manuals that are caused directly or indirectly.

### note

Some models are sold only in some areas.

The color and appearance of your body and accessories will vary depending on the product model you buy, and do not necessarily match the figures on this manual. The screens and other images shown in this manual are for informational purposes only and may differ from actual products.

### Software product statement

The SOFTWARE PRODUCTS (hereafter referred to as "SOFTWARE PRODUCTS") installed or attached to this product is owned by Finesse Technology Co., Ltd. and / or its suppliers and can only be installed and used on this product.

Please observe the Software License Statements for the software product, the ban copy, reproduce or install the product of any software products in the product other than the device or storage medium. And may not reproduce, transmit, distribute, modify, edit, or license any software product that is not authorized to use the product in any way.

In the event of any breach of these requirements or in the case of illegal, improper or unauthorized activities of the SOFTWARE PRODUCT, the expenses incurred in the damage and expenses incurred by the Company (including the parent company of the Company and the related enterprise) You are responsible for all, and you must also bear any criminal responsibility that may be involved.