

WIRELESS CHARGING & ELECTRIC SILICONE CLEANSING INSTRUMENT

USER MANUAL



Product model may change due to improvements without notice.

PLEASE READ THIS MANUAL FOR A FEW MINUTES
BEFORE YOU START USING THIS PRODUCT
PLEASE READ ALL GUIDELINES AND USE THIS PRODUCT
ONLY FOR THE INTENDED USE IN THIS MANUAL

Start Using

Congratulations on you buy wireless electric silicone Cleansing instrument, take the first step for beauty, please read carefully this manual for a few minutes before you start using this product. Please read all the guidelines and only use this product according to the usages specified in this manual warning.

Warning: do not disassemble or modify the product.

Introduction Of Facial Cleanser

In the past two years, we have developed successfully this product on the basis of the first generation of facial cleanser through the innovation of technology of skin care. It will be clean, care, massage and other functions into one, make the skin natural, beautiful, healthy luster.

This product as part of the daily care skin, it was given a strong cleaning function at the beginning of the design, up to 9600 times per minute through waves pulsating, providing more effective cleaning effect than hands, open the pores, it will clean blackheads, acne, pore dirt more effectively, improve the

absorption of skincare products, at the same time, the body soothing massage head, using polished oxidation process. With soft sonic pulse, it will transmit gently low frequency pulsation that easy to grow wrinkles area, soothing traces of ages. Often used to can make the skin fresh and natural, wireless electric silicone cleaning instrument is suitable for neutral skin, mixed skin, sensitive and oily skin, give you meticulous and comprehensive cleaning experience. The finer and the thicker brush head are arranged in a scientific design, you can choose different intensity of sonic pulse to clean your skin according to your needs. In order to obtain more skin care effect, we suggest that every morning and evening use of three minutes.



How To Use

- Press the center button, the indicator light will be flashing light, start the cleansing instrument.
- After cleaning, press the center button to turn off the cleansing instrument.
- Cleansing instrument will be automatic shutdown after 15 minutes in the absence of any operation.
- Cleansing instrument have 10 files pulses pulsating strength, you can select different intensity through the left and right shift button.

Facial Cleaning And Care

1. Apply Facial Cleanser

At first remove facial makeup, wetting facial cleanser and face, then apply the commonly facial cleanser, and turn on the sonic pulse.



3

2. Clean The Area Below

Clean the chin and cheek in a circular motion and clean the other side in the same way.

From the middle of the forehead to each other gently stroked, from inside to outside until clean the entire forehead.

When cleaning the nose, gently scrub up and down sides of the nose with a cleanser, and then clean the other side of the nose in the same way. when cleaning the following parts of the eye, it is recommended to press the "- "button to turn down the pulsation intensity of the cleanser, and gently press the center button to turn off the cleansing instrument after cleaning for 2 minutes.



3. Rinse

After the cleaning process is completed, rinse and wipe dry face, and then to use skin care according to your need. clean model can remove 99.5% of the oil dirt, cosmetic residue and dead skin cells.



4

4. Soothing Massage

The cleansing instrument has a soothing massage function, can dilute the fine lines and wrinkles traces, compact skin, increase skin elasticity.

In the standby mode, press the middle button to turn on the pulsation, use the smooth metal part of the cleanser (soothing massage head) soothe and relax the wrinkle area, each area has a soothing time of about 30 seconds. In the process, close your eyes and relax your face, it can effectively remove the wrinkles, crow's feet caused by muscle pressure, etc.



Warning: If you have any discomfort when using the cleansing instrument, please stop using it and consult doctor immediately. After each use, please clean cleanser thoroughly, and we suggest that use warm water washing surface of the cleanser instrument in order to achieve the best results.

Caution: Do not use cleaning products with alcohol, gasoline or acetone, which may irritate the skin.

How To Charge

- Cleansing instrument will be charged via the supplied wireless charging base. it can be charged in 5 hours, and will be used about 20 times in full of electricity .
- Plug the micro connector of the micro-USB cable into the socket on the back of the charging stand and connect the USB connector to the adapter(charger,computer USB interface, or any USB interface in ($\leq 5V$ & $\leq 1A$) for the power supply.
- Place the cleansing instrument on the wireless charging base, and the LED indicator light of the cleansing instrument will keep flash, indicating that the battery is charging, LED lights will go out and charge complete after charging(about 5 hours).
- When the battery is low, the LED light is weak white.



If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement
Radiation Exposure Statement
Wireless Charging
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device has been tested for human exposure limits and found compliant at a minimum distance of 10 cm during operation.
Thus during the operation of device a distance of 10 cm must be respected in every direction.

Important Hint

- Do not use clay-based facial cleanser , lolicon-soluble of granular cleanser , exfoliating cream or scrub to use with a cleansing instrument.
- If you have any skin problem or have any medical concerns, please consult a dermatologist before use.
- If you any discomfort during the use of the cleanser, stop using it immediately and consult your doctor.
- Please be careful when you are cleaning under your eyes, do not let the product touch the eyelid or eyeball directly.
- For health reasons, we do not suggest that you share the cleansing instrument with other people.
- Avoid direct sunlight, do you put is in extreme heat or boiling water.
- Please watching carefully when the product was used or are closer to children.
- Do not use when the product or charger is damaged.
- Use only the specific use of the product in this manual

Frequently Asked Questions

- The LED light of the cleansing instrument is not flash when connected to the charger?

- The battery is full and the cleansing instrument can be use up to 20 times(10 minutes each time)
- The battery is completely empty and need take a few minutes to recognize the charge.
- The charger is not connected properly, please check the charging dock and adapter.
- The cleansing instrument doesn't turn on when press the middle button?
- The battery is empty, please charge the cleansing instrument.
- The cleansing instrument not shutdown or the interface button cann't respond.
- The microprocessor has a transient functional fault,please place the cleansing instrument on the charging base and connect the charging to restore normal function of the cleanser.
- If the silicone surface of the cleansing instrument is degraded into sticky or foamy texture, please stop using immediately, although the silicone is highly durable, it will degrade under certain conditions.

Warranty Terms And Conditions

- One year warranty
- Warranty period of one year from the date of purchase,

- any quality problems are caused by product manufacturing or material defects are covered by warranty.we will change for you of charge if the product has any such quality problems during the warranty period.
- Warranty covers including the quality of parts that affect the functionality of the product,but does include wear and tear on the appearance of the product in long-term use, or wear and tear or damage caused by wrong operation,negligence or accident. Any damage was caused by attempting to open or disassemble product(or its accessory) is mot covered by the warranty.
- Warranty claims are required to provide reasonable evidence that the product is still in the warranty period. In order to make your product warranty valid, please keep the original purchase order during the warranty period.

Disposal Method

- Waste disposal of used electronic equipment (applicable in European or other European countries with waste separation systems)
- The pattern on the trash show that the product can not be processed in accordance with household water, but should be sent to the appropriate electrical and electronic equipment recycling collection. proper handling of this product can prevent the waste product from adversely affecting the environment and human health, and material recycling also saves the use of natural resources.

9

- For more information on recycling products please contact your local household waste disposal service station or where the product is purchased.

Product Parameter

Product Material: Silicone,ABS, Aluminium

Input Power: \leq DC5V 1A

Battery Parameters: 3.7V 250mAh

Product Size: 70*130*87mm

Charging Hours: 6H

Number Of Use: 20 Times

Frequency Of Sound: 5000-9600 rpm

Noise Level: 65 dB

Operation Interface: 3 key

Disclaimer:users of the product take risks on themselves.Our company and retailer are not responsible or liable for any physical or non-physical injury or damage caused by the use of the product directly or indirectly. In addition,Our company has a right to modify this description and change the content at any time, and is not obliged to inform any individual of such changes and changes.

10