



Magnetic Wireless Charging Mount

A154-176-MAGWCH

# User Manual

## FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

E.U.T.	: Magnetic Wireless Charging Mount
Brand Name	: N/A
Model No.	: A154-176-MAGWCH
FCC ID	: 2AN72PUMMSA154
Measurement Standard	: FCC PART 15 Subpart C
Date of Receiver	: November 07, 2017
Date of Test	: November 07, 2017 to November 14, 20
Date of Report	: November 14, 2017

## Table of Contents

English (UK)	Dansk
Français	Ελληνικά
Deutsch	Slovenščina
Italiano	Slovenčina
Español	Čeština
Magyar	Türkçe
Polski	العربية
Română	فارسی
Български	Русский
Hrvatski	Українська
Srpski	Қазақ тілі
Português	English (USA)
Latviešu	Español (Castellano)
Lietuvių kalba	简体中文
Eesti	繁體中文(台灣)
Nederlands	Français (Canada)
Svenska	Português (Brasil)
Norsk	
Suomi	한국어



## Read me first

Please read this manual before using the device to ensure safe and proper use.

- Images may differ in appearance from the actual product. Content is subject to change without prior notice.
- Before using the wireless charger, make sure it is compatible with your device.

### Instructional icons



Warning: situations that could cause injury to yourself or others



Caution: situations that could cause damage to your device or other equipment



Notice: notes, usage tips, or additional information

## Package contents


Check the product box for the following items:

- Wireless charge mount
- Quick start guide



- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The supplied items are designed only for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- Use only mobile phone approved accessories. Using unapproved accessories may cause the performance problems and malfunctions that are not covered by the warranty.
- Availability of all accessories is subject to change depending entirely on manufacturing companies.

## Device layout

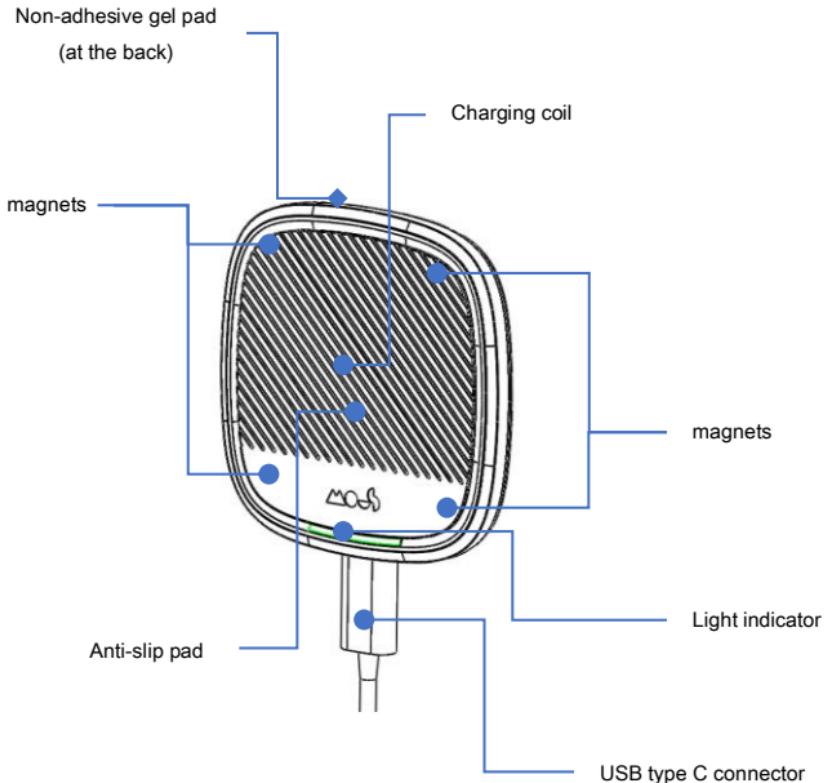


# Using the wireless charger

## Charging your mobile device

### Wireless charging

#### 1 Connect a charger to the wireless charger.

When the charger is correctly connected to the wireless charger, the indicator light flashes blue, and green and then turns off.

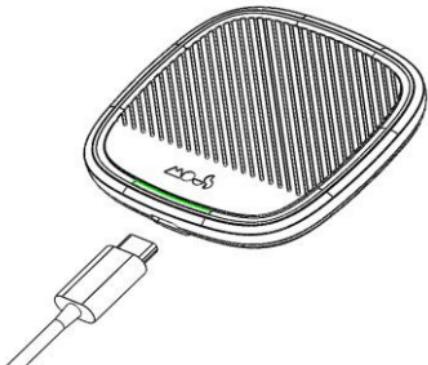


Use only mobile phone approved chargers DC 5 V/2 A

Unauthorised chargers may cause damage, or the wireless charger may malfunction. Use USB type C connector to power on the device.

## 2 Mount the PUMMS wireless charging mount

- Peel off the protective plastic film found at the back of the mount
- stick the mount on to your desired location

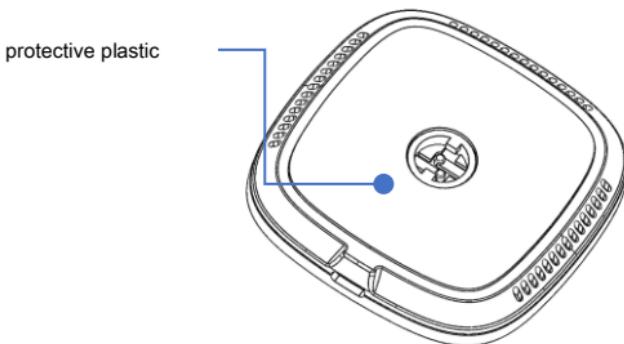


Do not stick the wireless charging device to a greasy and rough surface.

### 3 Place a supported mobile device to the mount

MOUS phone cases has compatible magnets that mates the wireless charging mount and can be oriented in landscape and portrait.

Check the charging icon displayed on the mobile device's screen for the charging status.

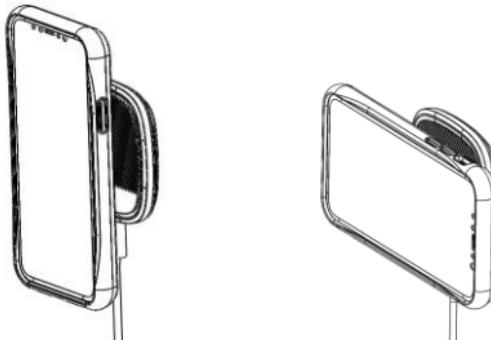

- Do not place the wireless charging cover solely on the wireless charger. Doing so may overheat the wireless charger and cause a fire. It may also result in serious burn or device malfunction.
- If you place a mobile device on the wireless charger for an extended period, the wireless charger may overheat and the fan inside it may turn on.
- Do not cover or block the wireless charger's air vent.



To charge a mobile device that does not have a built-in wireless charging coil, attach a wireless charging cover to the mobile device. Then, place the mobile device on the wireless charger.

## 4 When the mobile device is fully charged, remove it from the wireless charger.



Do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.



- You may need to purchase a charger separately depending on the wireless charger you bought.
- When the mobile device is not placed on the charging surface properly, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- Depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing your mobile device on the wireless charger.
- When a headset is connected to your mobile device, place the mobile device in a landscape position on the wireless charger. If you place the mobile device in a portrait position, it may not charge.
- If you use the wireless charger in areas with weak network signals, you may lose network reception.
- If you connect a charger to the mobile device during wireless charging, the wireless charging feature will be unavailable.
- The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.
- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and be easily accessible while charging.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

# Fast wireless charging

The wireless charger supports fast wireless charging. To begin fast wireless charging, place a mobile device that supports fast wireless charging on the wireless charger.



Use only chargers that support fast charging.

## Indicator light identification

The indicator light alerts you to the wireless charger's status.

Colour	Status
Blue → Green	When connected to a power outlet
Blue	When charging
Green	When fully charged
Flashing blue	When not charging properly due to a general error
Off	When the mobile device is removed from the wireless charger or when the wireless charger is not connected to a power outlet



- If the indicator light does not work as described, disconnect the charger from the wireless charger and reconnect it.
- The indicator light may work differently depending on the mobile device or the wireless charging cover.

## FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

## Copyright

Copyright © 2017 MOUS Products Limited, UK

This manual is protected under international copyright laws.

No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of MOUS Products Limited, UK.

## Trademarks

- MOUS Products Limited, UK and the MOUS logo are registered trademarks of MOUS Products Limited, UK.
- All other trademarks and copyrights are the property of their respective owners.