
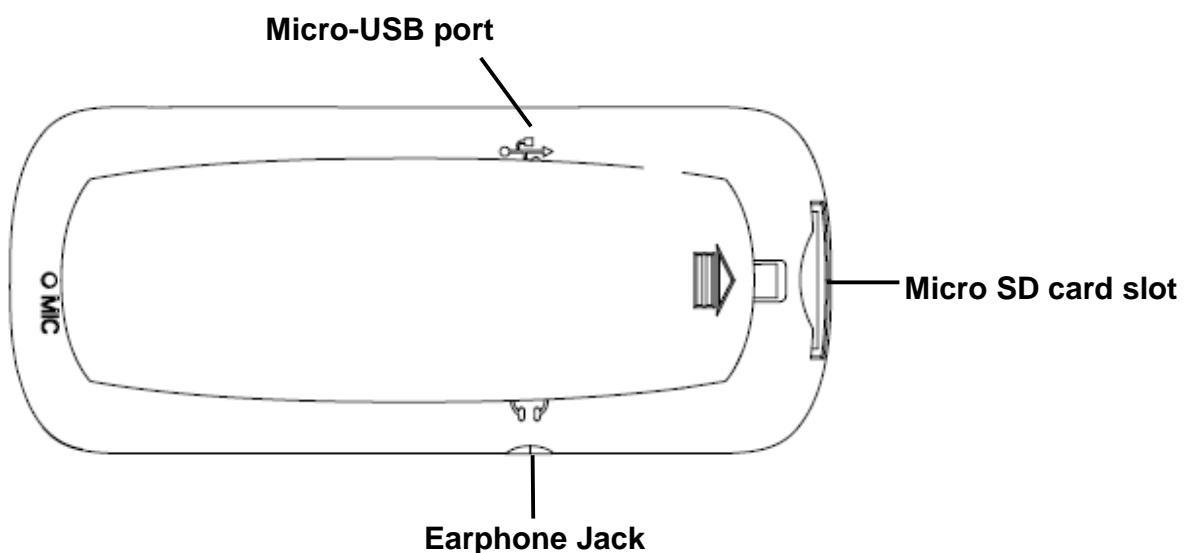


USER MANUAL

Unit overview

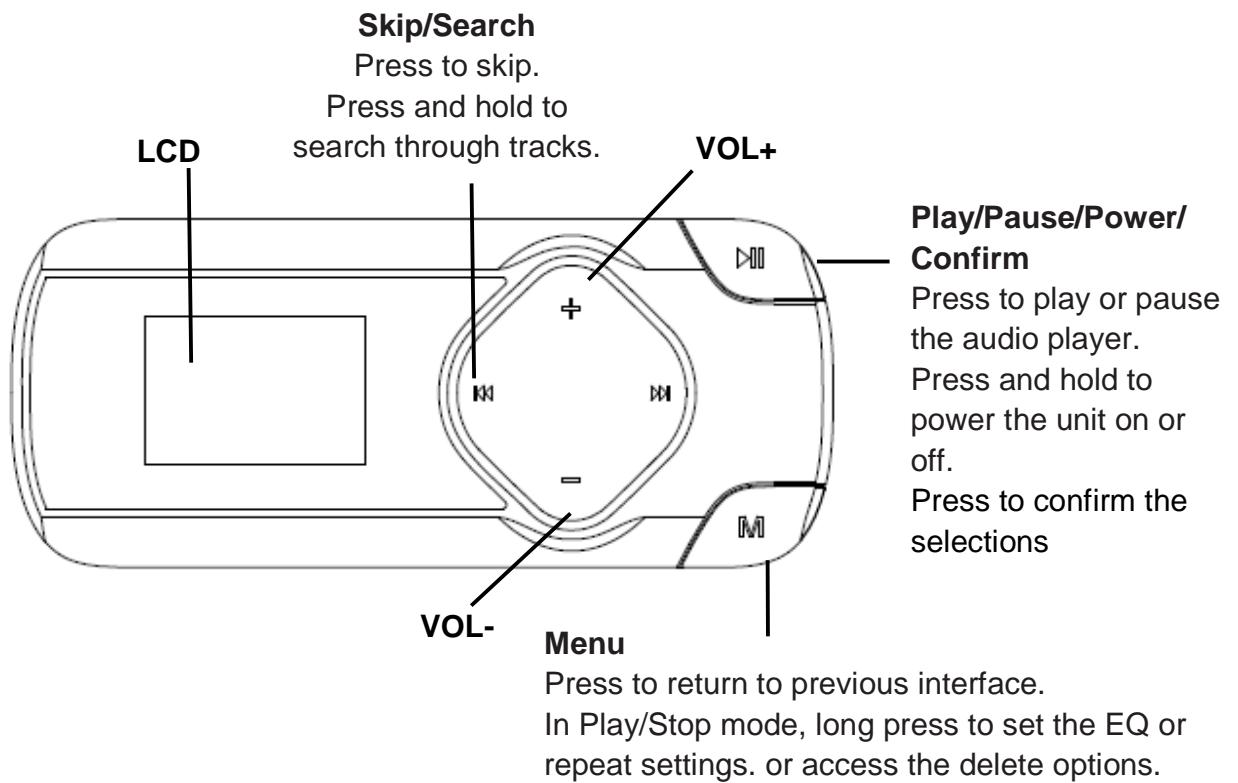

Music Mode

Loading music

1. Connect the digital audio player to a computer using the Micro-USB Port and a USB cable.
2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, memory card, you can choose charge & transfer, or charging & play.
3. Drag and drop the desired audio files into the unit's card location on the connected computer.
4. After the files are loaded onto the memory card, right-click on the drive and eject it from the computer, then disconnect the USB cable.

Playing music

1. Power the digital media player on by holding the **Play/Pause** button.
2. Navigate to the Music icon on the main menu using the **Skip/Search** buttons, and press the **Play/Pause** button to enter Music mode.
3. Press the **Play/Pause** button to begin playing music from all song folder.
4. Press the **Skip/Search** buttons to skip through tracks, or press and hold to fast forward or rewind a track.
5. Press several times **Menu** button to return to the main menu.

Record Mode

1. After entering Main menu page, press **Skip/Search** button to select Record and press **Play/Pause** button to enter Recording voice Mode sub-menu.
(You can set the record format at the submenu; see the recordings in recording library at the submenu)
2. Press **Play/Pause** button to pause or continue recording.

3. Press **Menu** button, it will appear “Save recordings, Yes or No?” appear on the display; choose Yes to save the recorded voice when you finish recording.
4. Press **Menu** button to return to the main menu.

Radio Mode

1. Press **Skip/Search** buttons to select Radio and press **Play/Pause** button to enter Radio Mode sub-menu.
2. Using **skip/search** button to scan sub-menu, and make selections (Save, Record, Delete, Delete All, Auto search, Normal band, Japan band, Exit) by **Play/Pause** button.
3. Press **Play/Pause** button to select your saved channels.

Setting Mode

1. Press **Skip/Search** buttons to select Setting Mode and press **Play/Pause** button to enter Setting Mode. it will show:
Play mode, Sound settings, Sleep timer, Display settings, Language, Information ,Format device, and Factory settings.
2. You can select anyone you would like to set.

Bluetooth

1. Bluetooth status: Enable/Disable Bluetooth.
2. Bluetooth search: Press **Play/Pause** to scan Bluetooth device.
3. Device List: All the Bluetooth devices connected.
4. All Song: All voices saved in the player.
5. Play Songs: Just play songs.

Under Bluetooth list option, press **Skip/Search** to find Bluetooth paired name, then press **Play/Pause** to connect Bluetooth device.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.