

Drawings provided 图纸提供

Tiinlab Corporation
万魔声学股份有限公司

Project Name 项目名称

DEVIALET SAPHIR

Drawing number (98 code +version) 图号 (98码 + 版本号)

V1.0

Date 设计时间

2022.08.17

Designer 设计师

zhibin.mo

Checked 审核

Eric Wei

Environmental Protection 环保要求

Materials shown must comply with TiinLab Environmental Quality Management specifications and TPCH & Halogen Free & ROHS2.0 & REACH & POPs & TSCA



CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.	CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.	CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.	CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.	CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.	CONNECT TO YOUR DEVICE Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. Pairing Open the case with your earbuds inside. Then press the button on the front of the case for 2 seconds until a blinking white light appears. TOUCH CONTROL • Press to Play or Pause. • Press and hold to switch between Active Noise Cancellation and Transparency modes. • Double-press on the left earbud for previous track or right earbud to increase volume. • Triple-press on the left earbud to decrease volume or right earbud to increase volume. • When receiving a phone call, double-press to answer or press and hold to reject. When on a phone call, double-press to hang-up.
--	--	--	--	--	--

USER MANUAL (QUICK START)
Size: 87.5 x 87.5 mm
Material: 157G COATED ART PAPER (C2S)

说明书(用户指南)
157g 哑粉, 双面耐磨哑油

Material 材质要求 157G COATED ART PAPER (C2S) 300g 黑卡
Size 尺寸 87.5 x 87.5 mm
craftsmanship 制作工艺 printing + Cutting 印刷 + 冲切

General Tolerance (Unless otherwise specified)	
1. Card Board/Plastic sheet/Film <100mm: +/- 1.0mm 101mm-300mm: +/- 1.5mm >301mm: +/- 2.0mm	3. Double wall board (AB, BC,etc) <300mm: +/- 3.0mm 301mm-600mm: +/- 4.0mm 601mm-1000mm: +/- 5.0mm >1001mm: +/- 6.0mm
2. Single wall board (C, B, E, etc) <300mm: +/- 2.0mm 301mm-500mm: +/- 2.5mm >501mm: +/- 3.0mm	4. Finished rigid box <150mm: +/- 0.5mm 151mm-300mm: +/- 1.0mm 301mm-500mm: +/- 1.5mm >501mm: +/- 2.0mm

Flute / Grain Direction	Generic Rule Legend	Length
	Cut	_____
	Crease	_____
	Generic perf	_____
	Partial cut	_____
	V groove	_____
	Generic perf in channel	_____

If there are other special requirements, please specify
如有其它特殊要求，请写明

Scale 比例: 1 : 1 Unit 单位: mm