 


尺寸： 65x90mm
材质： 128克铜版纸

*黑白印刷 风琴折

Audio Baby Monitor


User Guide

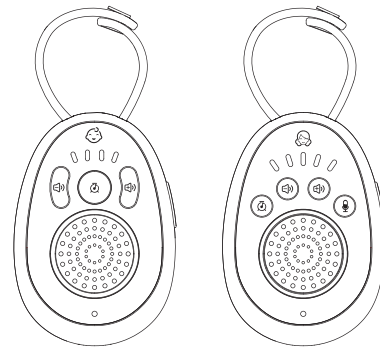


Rev_1.0

Safety Instructions

 · Keep cord out of the reach of children (more than 3ft (0.9m) away) in case of STRANGULATION.

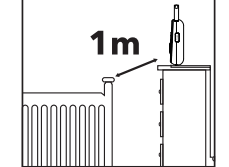

1m

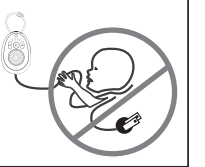 

· NEVER place the baby unit or cord in or near the crib or playpen.

· NEVER put the baby unit directly above the crib or playpen to avoid the risk of injury.

· Never use the unit near water, including near a bathtub, sink, laundry machine tub, wet basement, etc.

· Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat.

· Only use attachments and accessories specified by the manufacturer.

01

Caution

· NOT toys. Do not allow children to play with them.

· This product is NOT intended to replace the proper supervision of children. You MUST check your child's activity regularly.

· This product is not intended for use as a medical device and its use should not replace adult supervision.

· Unplug the product during lightning storms.

· Please check the operating range and condition of the device carefully at the initial installation, and on a regular basis after that.

· Check the reception regularly. Test the device before use and after changing the device's location.

· Not water-proof. For indoor use only.

· Do not block any ventilation openings.



Microphone noise feedback might occur when the parent unit is too close to the parent unit. Please keep them at least 1m /3ft apart.

02

Package Contents



 
Parent Unit



Baby Unit



User Guide





Power Cable*2

03

Product Diagram

 
 
Parent Unit

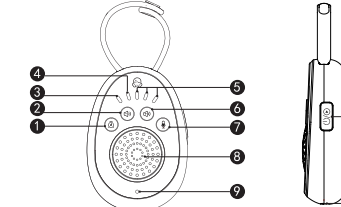

1. Lullabies/Timer: Short press to play lullabies and switch lullabies. Long press to turn on/off timer.
2. Volume down button: Press - to lower the volume.
3. Charging indicator light: red when charging, green when fully charged.
4. Working indicator light: After power on, it stays on for 5 seconds. It will keep staying on if it's in connection; it will flash rapidly if it's in disconnection.
5. Sound level LED: Indicates low/high sound detected by the baby unit. The 3rd LED indicator light flashes on low battery.
6. Volume up button: Press + to increase the volume.
7. Two-way Talk: Press and hold to talk to the baby.
8. Speaker
9. Microphone
10. Power on/off button: Long press to turn on/off the device. Short press to turn off the lullabies.
11. Type-C charging port.

04

  Baby Unit

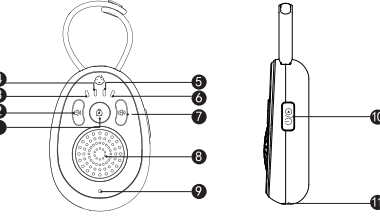

1. Lullabies/Timer: Short press to play lullabies and switch lullabies. Long press to turn on/off timer.
2. Volume down button: Press - to lower the volume.
3. Charging indicator light: red when charging, green when fully charged. It will keep staying on if it's in connection; it will flash rapidly if it's in disconnection.
4. Working indicator light: After power on, it stays on for 5 seconds. It will keep staying on if it's in connection; it will flash rapidly if it's in disconnection.
5. 30 minutes timer indicator light: Long press the music button once to turn on the 30 minutes timer. After playing for 30 minutes, the music will stop and the indicator light will turn off. The indicator light flashes on low battery.
6. 60 minutes timer indicator light: Long press the music button twice to turn on the 60 minutes timer. After playing for 60 minutes, the music will stop and the indicator light will turn off.
7. Volume up button: Press + to increase the volume.
8. Speaker
9. Microphone
10. Power on/off button: Long press to turn on/off the device. Short press to turn off the lullabies.
11. Type-C charging port.

 
05

Function and Operation

01/ Power On/Off

Parent Unit:

● Press the power button  for 3 seconds to turn on the device, and there will be an English prompt sound of "Power on". When the device is on, press the power button  for 3 seconds to turn off the device, and there will be an English prompt sound of "Power off".



06

02/ Sound Adjustment

Baby Unit

● Volume up  , increase the sound of lullabies and intercom; Volume down  , decrease the sound of lullabies and intercom; There are a total of 5 levels of volume, and there will be a prompt sound when decreasing/increasing to minimum/maximum.

Parent Unit

● Volume up  , increase the sound of lullabies and intercom; Volume down  , decrease the sound of lullabies and intercom; There are a total of 5 levels of volume, and there will be a prompt sound when decreasing/increasing to minimum/maximum.

07

03/ Lullabies

Baby Unit

● Press the music button  to start the lullaby, then press it again to switch music, switching to one song with each press; There are a total of 5 pieces of music, pressing until the 6th time 5 pieces of music will play in a loop; When playing music, short press the power button  will stop the music.

Parent Unit

● Press the music button  to start the lullaby, then press it again to switch music, switching to one song with each press; There are a total of 5 pieces of music, pressing until the 6th time 5 pieces of music will play in a loop; When playing music, short press the power button  will stop the music.

08

04/ Two-Way Talk

Baby Unit

● No need to press any button, the intercom will automatically turn on after turning on the device.

Parent Unit

● Press and hold the  button to communicate with the baby, release it to exit.

09

05/ Timer

Baby Unit

● Long press the lullaby button  for 3 seconds to activate the timer for 30 minutes, and long press it again to activate the timer for 60 minutes; Press and hold for the third time to turn off the timer.

Parent Unit

● Long press the lullaby button  for 3 seconds to activate the timer for 30 minutes, and long press it again to activate the timer for 60 minutes; Press and hold for the third time to turn off the timer.



· Timer is just the timer of lullabies; When the lullaby is not playing, turning on the timer will automatically turn on the lullaby for you.

10

FAQ

Q: Why does the device not respond normally?
A: 1. Check whether the battery is running low. 2. Re-start the device. Allow for one minute for this to take place.

Q: Why does the device produce a high-pitched noise?
A: The units may be too close to each other. Make sure the parent unit and the baby unit are more than 3 feet (1 meter) away from each other.

Q: Why is the connection lost every now and then? Why are there sound interruptions?
A: Other electronic products may cause interference with your baby device. Try installing your baby device as far away from these electronic devices as possible.

11

Warranty & Customer Service

12 months quality guarantee and life time customer service.

12

FCC Compliance

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

13

— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio / TV technician for help.

FCC 20cm Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

14

Weee Compliance

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS "  " The symbol indicates DC voltage

This product bears the selective sorting symbol for Waste Electrical and Electronic Equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

15



16