

WF

BABY MONITOR

1080P

FCC CE RoHS



MADE IN CHINA

USER GUIDE

5.5"/5"HD LCD

- 1. Monitor Part**
- 2. App Part**

Monitor Part

CONTENTS

SAFETY INSTRUCTIONS.....01

CAUTION.....01

PACKAGE CONTENTS.....02

PRODUCT DIAGRAM.....03

GETTING STARTED.....07

1. Charging & Powering Baby Monitor.....07

2. Powering Camer.....07

3. Pairing the Baby Monitor & the Camerc.....07

4. Placing the Camero.....08

5. WallMounting Camera.....08

FUNCTIONS & OPERATIONS.....09

Monitor Interface Overview.....09

Top Status Indications.....09

Bottom Menu Brief.....10

1. Digital Zoom & Circulating.....11

2. Pan-n-Tit.....11

3. Night Vision.....11

4. Talkback.....11

5. Volume/ Display Brightness Adjustment.....12

6. Camera.....12

7. VOX.....15

8. Playback / Record.....16

9. Lullabies.....17

10. Alarm.....17

11. Monitor Settings.....18

12. Temperature Alert.....18

13. Screen Auto -sleep.....19

14. Alarm Volume.....19

15. Date.....20

16. Time.....20

17. Language.....21

18. TF Card.....21


19. System Version.....2

20. Restore to factory.....2

SPECIFICATIONS.....23

SAFETY INSTRUCTIONS

·Keep cord out of the reach of children(more than 3ft/0.9m away)in case of STRANGULATION.

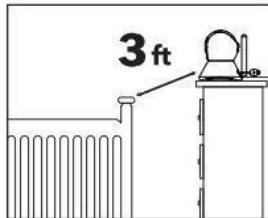

- NEVER place the camera or cord in or near the crib or playpen.
- NEVER mount the camera directly above the crib or playpen to avoid the risk of injury.
- Only use the AC adapters provided.
- Never use the unit near water,including near a bathtub,sink,laundry machine tube,wet basement,etc.
- Do not install near any heat sources such as radiators,heat registers, stoves,or other devices that produce heat.
- Only use attachments and accessories specified by the manufacturer.
- Unplug this device when unused for long periods of time.
- Do not insert anything into the upgrade pinholes.This operation is only intended for professionals.

 
CAUTION

- NOT toys.Do not allow children to play with them.
- The lens and lens hood are smallparts,keep them out of your baby's reach at alltimes.
- This product is NOT intended to replace the proper supervision of children. You MUST check your child's activity regularly.
- This product is not intended for use as a medical camera and its use should not replace adult supervision.
- Unplug the product during lightning storms.
- Please check the operating range and condition of the camera

carefully at the initial installation, and on a regular basis after that.

- Check the reception regularly.Test the camera before use and after changing the camera's location
- For indoor use only.
- Clean the camera with a dry cloth only.
- Do not block any ventilation openings.
- Microphone feedback noise might occur when the monitor is too close to the camera.Please keep them at least 1.5m/4.9ft apart.


PACKAGE CONTENTS



camera



 Monitor




(5.5")



Power Cable



 Adapter



Wall Mount Bracket

#####Q

#####

Screw





Anchor




User Guide

PRODUCT DIAGRAM


Baby Monitor

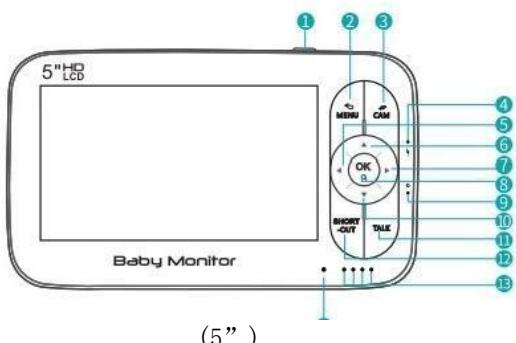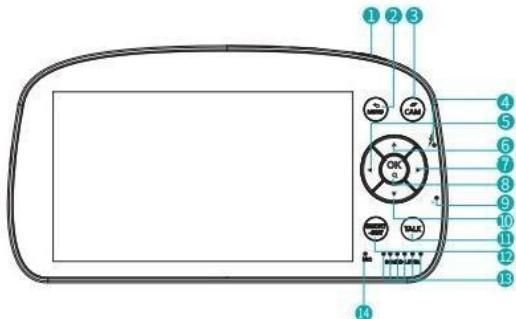

- ① Power/Screen On&Off Button: Long press to turn on/off the monitor, short press to turn on/off the screen.
- ② Menu/Back: Press to enter menu page or press as a Back button.
- ③ Camera Switch: Switch cameras if connected with 2 or more cameras.
- ④ Charging Indicator: Orange on charging, off at fully charged.
- ⑤ Left Button: Press to pan the camera leftward or to change your selection leftward.
- ⑥ Up Button: Press to tilt the camera upward or to change your selection upward.
- ⑦ Right Button: Press to pan the camera rightward or to change your selection rightward.
- ⑧ Zoom/OK Button: Press to Zoom in/out or to confirm your selection.
- ⑨ Power connected Indicator: Yellow when connected to the power adapter.
- ⑩ Down Button: Press to tilt the camera downward or to change your selection downward.
- ⑪ Talk: Press and hold to talk to your baby in the monitoring page.
- ⑫ Volume/Brightness: Press to adjust the monitor's volume or brightness in the monitoring page.
- ⑬ Sound Level LED: Quantity of lighting LEDs shows sound volume detected by the camera.
- ⑭ Microphone.

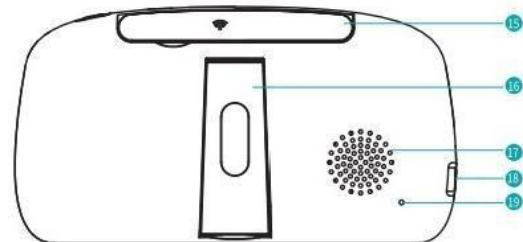

(5.5")


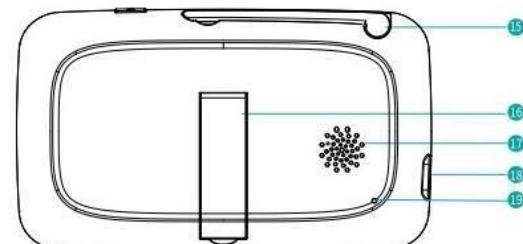


(5")

- ⑯ Antenna
- ⑯ Support Stand
- ⑯ Speaker
- ⑯ Power Input
- ⑯ Reset Hole

*Note: If you RESET with a pin, the monitor will be forced shutdown.

Camera

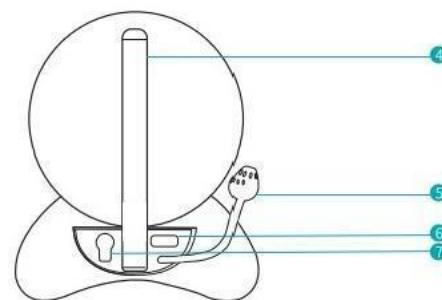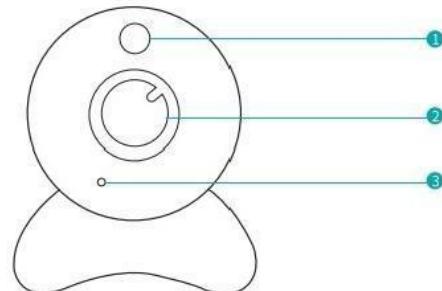

- ① Night Vision Sensor
- ② Camera Lens
- ③ Microphone
- ④ Antenna
- ⑤ Temperature Sensor
- ⑥ Power Input
- ⑦ Pair Button

GETTING STARTED

1. Charging&Powering Baby Monitor

- 1) Connect the monitor adapter to the monitor and a power socket.
- 2) Unplug the unit when its power indicator turns off,indicating a full charge.

2 Powering Camera

- 1) Connect the camera to power source via the USB type-C cable and camera adapter.

- Only use the power adapters included in the package.
- Do not place the camera and power cord within the reach of your baby.


3. Pairing the Baby Monitor & the Camera

By default,one camera has been paired with the monitor when manufactured. When you power on the monitor and camera, the two will automatically pair. To add more cameras, press the Pair Button at the bottom of the camera, press Menu button, select through $\odot->+>+$, and then the monitor will auto-pair with the new camera.

- Once they're paired successfully, the camera number with icon  1 will be shown at the top left.
- Microphone feedback noise might occur when the monitor is too close to the camera. Please keep them at least 1.5m/4.9t apart.
- It is recommended to pair in the baby's room, or wherever you intend to place the camera.


4. Placing the Camera

Place the camera 1.5-2m/4.9-6.6ft away from your baby for safety reason and for a better view in night vision mode.

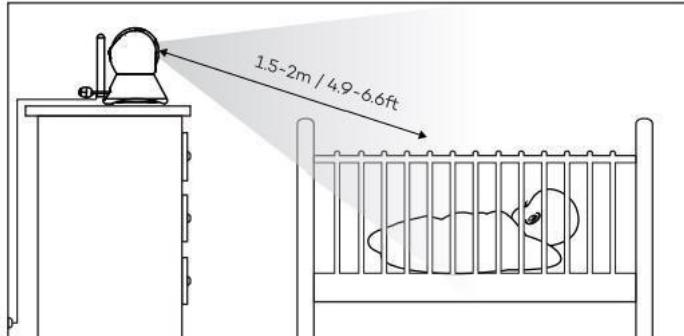

5. Wall Mounting Camera

- 1) Select the spot to mount the camera, keeping it beyond your baby's reach.
- 2) Use the screw bag to fasten the bracket on the wall, and screw the camera into the bracket.

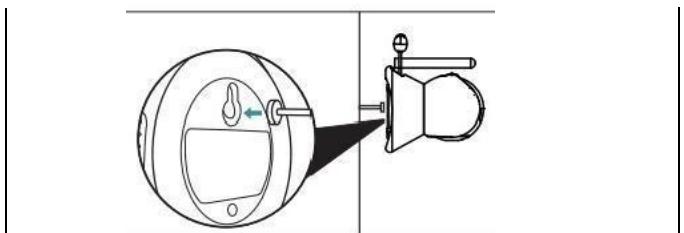

 It's strongly recommended to use a screw and screw anchor. Don't release the camera until you're sure it is firmly mounted.

FUNCTIONS & OPERATIONS

Monitor Interface Overview

◎1	Q2	2024/11/20	vox	单咖	℃	23	Ⅲ
④	⑨1	+	+	+			
C]							
◎							
立							
	◎	VOX	D	百	▶		

Top Status Indications

	Signal	5 levels
1	Current Camera	Camera1/Camera 2/Camera 3/Camera 4
Q2	Zoom	2×/4X
c	Current Temperature	C/F
	Night Vision	Auto ON in a dim environment
PM 12:08	Current Time	AM/PM
	Alarm	ON/OFF
咖	Mute	Mute sounds received on monitor
	Talk-back	ON/OFF
Ⅲ	Battery	5 levels
③	Eco mode	ON/OFF
REC	Recording	ON/OFF

Bottom Menu Brief

◎	Camera	④ Add camera
		[]Split screen
		◎ View camera
		立 Delete camera
VOX	VOx	Sound detection and cry detection
D	Record	ON/OFF
	Playback	
	Lullabies	Play 5 soothing songs
百	Feeding Alarm	Feeding regularly
Settings		Temperature scale
		3 Screen auto off setting
		Alarm volume
		茴 Date
		⑨ Time
		国 Language
		TF Card
		i Software Version
		Q Restore to factory setting

1. Digital Zoom

- 1) Press Zoom Button to zoom in to 2X/4X when viewing the camera. A third pressing of the button will restore to the original image.
- 2) Under split screen mode, press Left/Right Button->OK Button to select the camera (Camera 1 or 2) you want to view or zoom in.

The current zoom level number will be shown with the Zoom icon Q2 on the monitor

2. Pan-n-Tilt

When viewing the camera, press Left/Right/Up/Down Button to view at different angles.

3. Night Vision

The night vision is automatically activated in a dim environment.

The camera has high-intensity infrared LEDs for picking up clear images in the dark. Black and white images can be captured within 5m distance.

4. Talkback

Press and hold the Talk button to communicate with the baby, release to exit.

- When you enter the talking mode, the icon will be shown on the monitor.
- When it's mute or the speaker volume is too low, you may not be able to hear the baby.
- When you're pressing the Talk Button, the camera will not transfer the sound to the monitor. Please release the button to listen to your baby.

5. Volume/Display Brightness Adjustment

- 1) Use Shortcut Button: Press SHORTCUT Button->Left/Right Button to quickly adjust the volume with < > & > icons.
- 2) Use Shortcut Button: Press SHORTCUT Button->Up/Down Button to quickly adjust the Brightness with & icons.

- When the sound is off, you may not hear your baby

6. Camera

Add Camera



- 1) Press Menu button, select through ◎->田->+ to add a camera.

- 2) Short press the pairing button on the camera twice. The camera will emit a voice prompt of "Waiting for pairing"



 Four cameras at most can be connected to one monitor.

Split Screen

- 1) Press Menu button,select through ->

- 2) Then select two cameras(Camera 1/2/3/4)for Split screen display.



- 3) Once set,you can view two cameras at one time without delay.The sound of the two rooms will be switched every 10 seconds.



- 4) Under Split screen mode,you can also press Left/Right Button->OK Button to select one camera(Camera 1 or 2)you want to view or zoom in. Press the Menu Button to return to Split screen mode.




The split screen mode can be activated only when two or more cameras are successfully connected.

View Camera

- 1) Press Menu button,select through ->


- 2) If there are 2 or more cameras,tap C to cycle through the added cameras every 10 seconds.
- 3) Select the camera number (1/2/3/4)to view the corresponding camera.

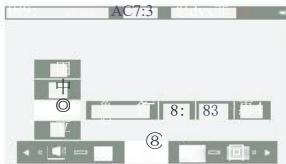

 You can switch viewing different cameras;the current camera number will be shown with the Camera icon  on the monitor.

Delete Camera

- 1) Press Menu button,select through -> to delete a camera.

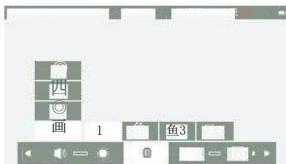

 Atleast one camera shall be added.Do not delete all the cameras. If necessary,please add a new camera before deletion.


7. VOX

Explanation:

·There are two options,namely sound detection and crying detection.

There are three levels for each option,LOW(75dB),MEDIUM(65dB)

and HIGH(60dB).LOW means the sound/crying can be detected if it reaches 75dB, and so on for MEDIUM and HIGH.

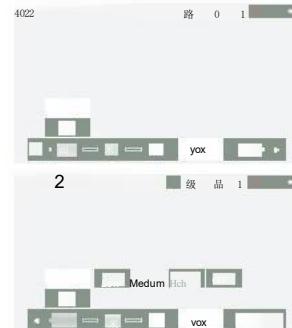

1) Press Menu button,choose **vox**

→ **OK** Button.

2) Select the option you want.Press **OK**

Button.

·There is no sound detection alarm push and the screen will not wake up automatically if VOX is turned off.

8. Playback/ Record

Explanation:

·This function is to record important moments during the baby's growth process

·Recommend to use brand TF card such as Sandisk,Kingston,Samsung,etc.


Record

1) Press Menu button,select through

D → **Record** → **OK** Button.

2) Select the option you want.Press **OK**

Button.

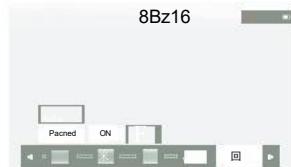

Playback

1) Press Menu button,select through

D → **Playback** → **OK** Button.

2) In the replay,press the left and

right keys to select the video you want to replay.



3) In the playback video,press the left and right buttons to fast

forward /fast rewind,press the **OK**

button to pause, and press the

menu button to ext.



9. Lullabies

Explanation:

This function is to comfort baby when needed.

1) Press Menu button,Choose

->OK Button.

2) Select the lullaby you want.Select

心 to play the lullabies in a loop.



Tip: Left/Right Button to volume down/up, and OK Button to save your settings.

10. Alarm

Explanation:

This function is to remind you of feeding your baby.

OFF means you shut down the function;2 hour means it reminds you 2

hours later and so on for the other options.



1) Press Menu button,Choose

->OK Button.

Tip: When the timer is set, the Alarm icon will be shown on the monitor.
Before setting, please check that the monitor time is your current time.

11. Monitor Settings

Explanation:

This is the sub-menu of the function page where the Temperature setting, Screen auto off setting, Alarm Volume, date and time, system language, TF Card, System Version and Restore to factory setting.

1) Press Menu button,Choose

->OK Button.

2) Select the function to be adjusted.



12. Temperature Alert


Explanation:

Set temperature alert, so that the baby monitor beeps whenever the room temperature falls outside the desired temperature range. You can also choose to display the temperature in Fahrenheit(°F) or Celsius(°C) on your monitor.

1) Choose ->OK Button.

2) Press the up and down buttons to select off and on for temperature alarm or °C and °F for temperature display.

3) Press the up and down buttons to switch between the upper and lower temperature limits that trigger the temperature alarm.

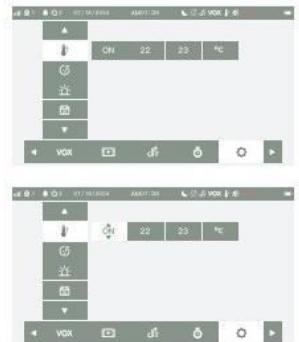

13. Screen

Auto-off

1) Choose ->OK Button.

2) Select between 1min,2min,5min, and Always ON.Press OK Button.



15. Date

1) Choose ->OK Button.

2) Set the current date by setting the year,month and day.Press OK Button.



14. Alarm Volume

This function is to adjust the alarm sound at the display.

1) Choose ->OK Button.

2) Select between Low,High, and Mute.
Press OK Button.



When Mute is selected for sound,only the alarm sound is muted instead of system sound muted.

16. Time

1) Choose ->OK Button.

2) Set the current time by setting hour, minute, and AM/PM.Press OK Button.




Press the up and down buttons to adjust the digital display.

17. Language

There are four languages built in your device you can choose your language here.

1) Choose  ->OK Button.

2) Select your language. Press OK Button.

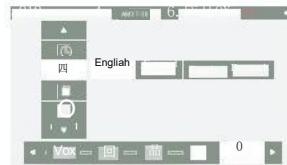

18. TF Card

1) Choose  ->OK Button.

2) View TF card storage information. Press OK Button.



3) Format TF card. Choose  ->Yes ->OK Button.



19. System Version

1) Choose  ->OK Button.


2) View display screen and camera version information.



20. Restore to factory

1) Choose  ->OK Button.

2) Confirm YES to reset. Press Menu button or confirm NO to exit.

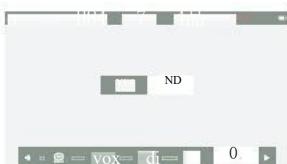

Click the "OK" button to confirm the reset operation. The system will automatically shut down and then automatically power on to complete the factory reset.

SPECIFICATIONS

Monitor

Size	5/5.5 inch
Resolution	1280×720P
Image Aspect	16:9
Image Compression	h. 264 (frame rate =15fs)
Operating Range	700m open space, 40–70m indoor
Temperature Alert	Yes
Volume Control	7levels
Brightness	8 levels
Antenna	Rotatable (max. 90 degree)
Power Input	5V/2A (USBType-C)
Zoom	Zoom In(2X) Zoom In(4X)
Two-Way Talk	Yes
Multi-Camera	Max. 4 cameras
Storage Temperature	-10°C~55°C/14° F-131° F
Operation Temperature	0°C~40°C/32° F-104° F

Camera

Resolution	1920x1080P
Connectivity	RF 24GHz
Image Compression	h. 264 (frame rate =15fs)
Power Input	5V/2A (USBType-C)
Pan-n-Tilt	Pan tilt function
Zoom	Zoom In(2X) Zoom In(4X)
Night Vision	Black&White image, up to 5m
IR LED	940nm non-visible IR LED to protect baby's eyes
Light Sensor	Yes
Two-Way Talk	Yes
Storage Temperature	-10°C~55°C/14° F-131° F
Operation Temperature	0°C~40°C/32° F-104F

APP PART


CONTENTS

1. APP DOWNLOAD AND INSTALLATION.....	26
2. ACCOUNT REGISTRATION AND LOG IN.....	26
3. ADDING CAMERA TO APP.....	27
4. SETTING.....	33
4.1 Basic Functions.....	33
4.2 IR NightVision.....	35
4.3 Detection Alarm.....	35
5. STORAGE SETTING.....	38
6. RECORDING SETTING.....	39
7. FEATURES.....	40
TROUBLESHOOTING.....	43
WARRANTY & CUSTOMER SERVICE.....	45
FCC STATEMENT.....	45
WEEE COMPLIANCE.....	46

1. APP DOWNLOAD AND INSTALLATION


Method 1: Download “Tuya Smart ” App from App Store (IOS) or Google Play (Android)

Method 2: Please scan the QR code with your mobile phone to download the APP.

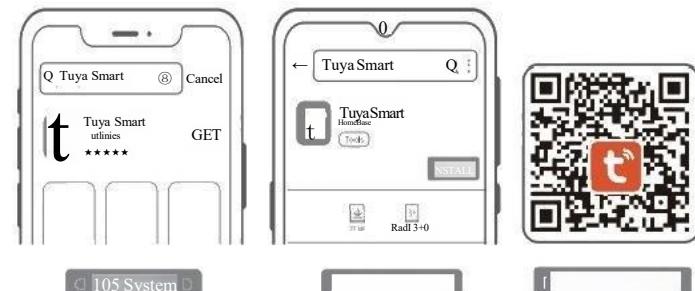

2. ACCOUNT REGISTRATION AND LOG IN

- ① If you already have a Tuya Smart account , please log in using your account and password directly.
- ② If you don't have a Tuya Smart account , please use your mobile phone number or email to register . After successful registration , log in to your account with your password.

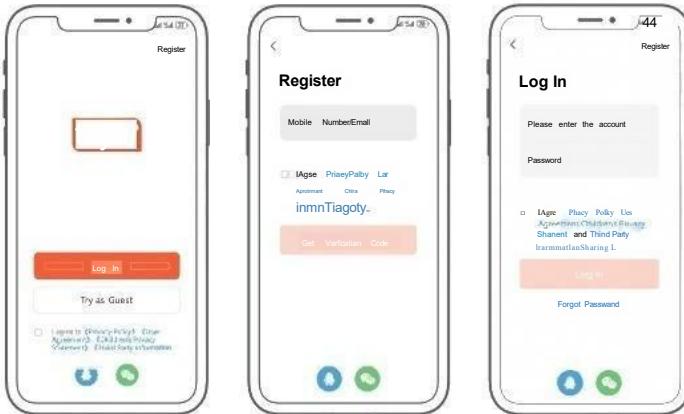


3. ADDING CAMERA TO APP

Warm reminder:



Make sure the Wi-Fi network is a 2.4 GHz network, as the camera doesn't support 5 GHz Wi-Fi. Before starting to connect the device to your phone App and WiFi, please set the relevant parameters of the router and do not include special characters like ~!@#\$%^&* etc. into WiFi password. When trying to connect the device to your App and WiFi, try to keep your phone and device as close to the router as possible to speed up device setup.

Method 1: Adding device via bluetooth (recommended)

- ① Turn on the bluetooth of your phone and connect your phone with WiFi. Use the power adapter and USB cable provided to connect the camera to the power socket, long press pairing button at the camera to enter into pairing mode.

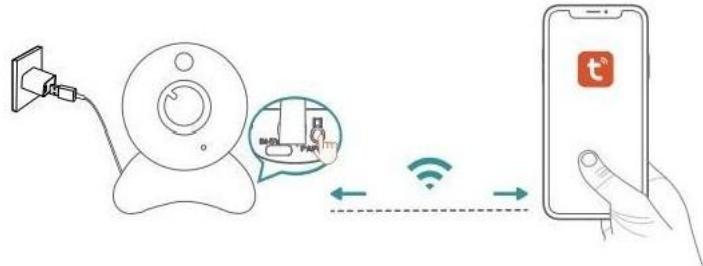


- ② Click “Add Device” or “+” at the upper right corner of the APP homepage to enter the Add Device page.
- ③ After entering the Adding interface, Click the camera icon.
- ④ Put in the WiFi password.
- ⑤ Wait for pairing.
- ⑥ After pairing finished, you can view via the camera.

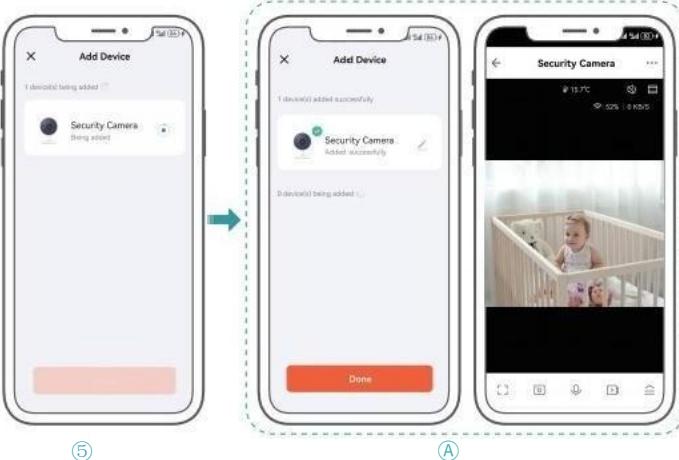
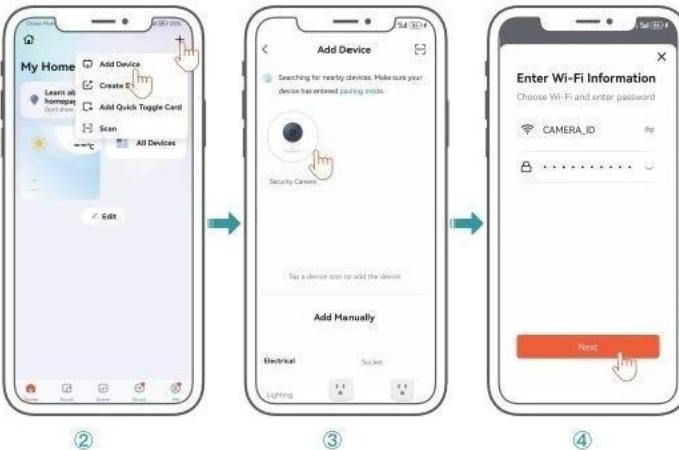


Method 2: Adding device by scanning QR code

- ① Connect your phone with WiFi. Using the power adapter and USB cable provided to connect the camera to the power socket. Long press the pairing button of the camera until you hear the prompt of "waiting for wifi connection". It indicates the startup is successful.

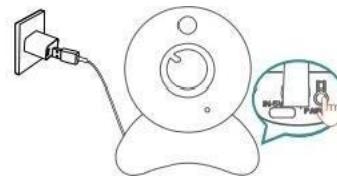


- ② Click "Add Device" or "+" at the upper right corner of the APP homepage to enter the Add Device page.
- ③ Click "Camera&Lock" → Click "Smart Camera(Wi-Fi)".
- ④ Following the step and click "Next".
- ⑤ Choose the correct WiFi network connected with your phone and enter the correct password, then click "Next" and you will see a QR code on your phone. (Note: Please choose 2.4GHz WiFi.)
- ⑥ Put your QR code on your phone in front of the camera lens at a distance of 15-20cm. You will hear the prompt tone "DI" indicating the QR code is recognized successfully. Click "I Heard a Prompt".
- ⑦ Wait for the connection. It will be finished within 2 minutes.
- ⑧ A page prompts that the adding is successful, click "Done". Then it will jump to the live streaming page automatically where you can check your baby via phone now.

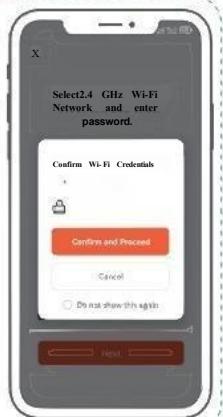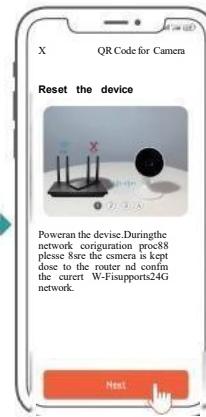

4. SETTING

On live streaming page,click the "...." at the upper right corner of the page to enter into settings.

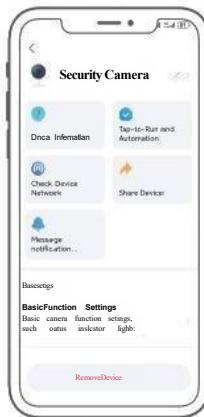


Detailed information and functions of the camera are shown on the setting page,such as basic functions,detection and alarm,infrared night vision,storage settings,video recording settings,cloud storage and other functions of the device.We can adjust the settings according to our own needs.



4.1 Basic Functions

Can manually flip the screen, set time watermark and intercom mode.

4.2 IR Night Vision (Normally on “Auto”mode)

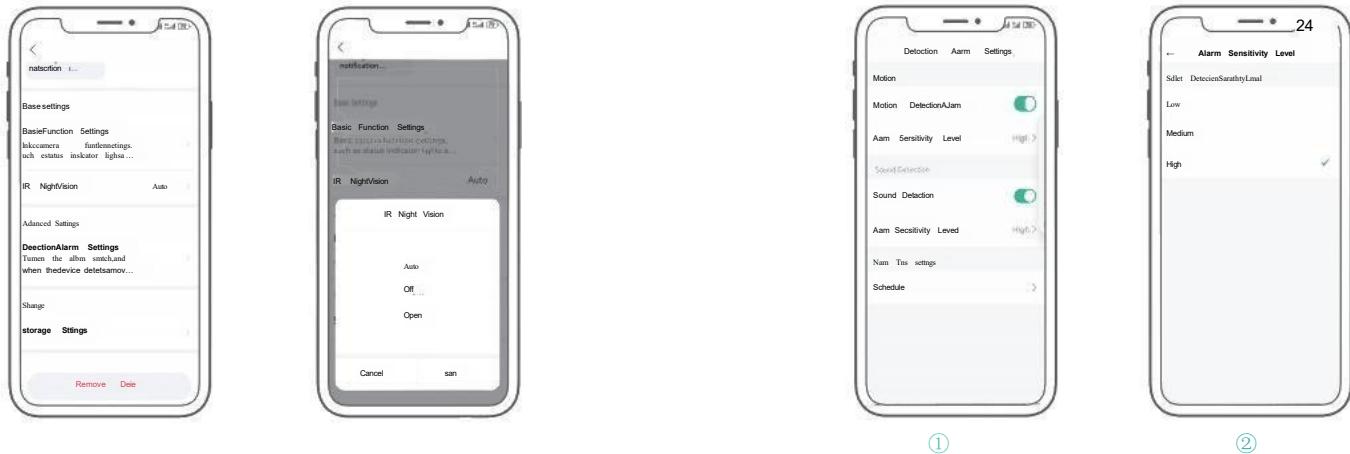


4.3 Detection Alarm

1) Motion Detection

- ① When motion detection is on, once the camera detects a moving object, it will capture a picture. The user will be able to see the picture and receive the relevant notification push on the app.
- ② Motion Alarm Sensitivity Setting: Set high/medium/low sensitivity of motion detection according to your needs

2) Sound Detection(Cry Detection)

- ① When sound detection is on, once the sound/crying detected by the camera reaches a setting volume, it will push relevant notification on the app.
- ② Sound Alarm Sensitivity Setting: Set high/low sensitivity of sound/crying according to your needs.

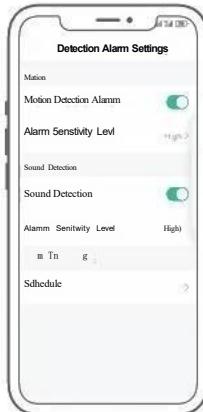

3) Schedule

- ① Select "schedule", click "Add" to enter the settings interface.
- ② Edit the desired time, select the number of days to be repeated, turn on the "notification", select the detection mode, click "Finish" and save.

5. STORAGE SETTING

Check TF card's capacity/using situation or format TF card



6. RECORDING SETTING

① Turn on/off local recording.

② **Recording mode:** choose event recording or non-stop recording.

Non-stop recording can record continuously without stops and automatically cover the earliest event. Event recording only records the detected event.

③ Schedule: Select "schedule", click "Add" to enter the interface. Edit the desired time, select the number of days to be repeated, turn on the "notification", turn on local recording, click "Finish" and save.



①



②



③

7. FEATURES

Enter the feature interface to check more features

① Playback of recorded videos

② Pictures captured and stored in the gallery

③ Change theme setting

④ Infrared night vision

⑤ Motion detection and sound/cry detection

⑥ Temperature detection and alarm setting




①



②



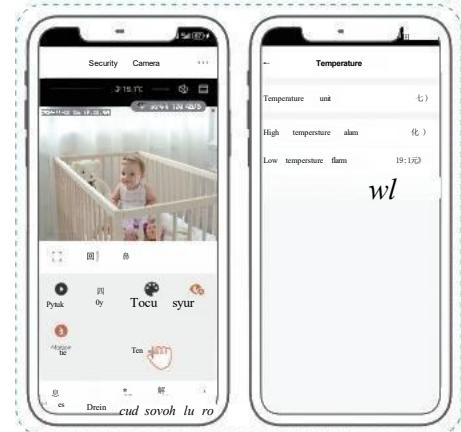

③

⑥



⑤

TROUBLESHOOTING

Product not powering on?	<ul style="list-style-type: none"> Check that the camera and monitor are turned on. Check the camera is connected to power properly (it cannot be charged; it's power off once disconnected from power). Check that the monitor is of enough battery (it'll auto shut off when battery level icon flashes red slowly on the monitor). Check the intactness of the power cable.
Baby monitor can't connect with the camera?	<ul style="list-style-type: none"> Check whether the camera is near the monitor (recommended to keep within 1.5-2m/4.9-6.6ft). Check whether the monitor is of low battery. Charge it in time to restore good connection. Check whether the camera is well connected to power. Check whether there are any large metallic objects including doors, refrigerators, mirrors, etc., are placed between the camera and monitor thus blocking the radio signals. Check whether there's any other 2.4GHz product is used nearby like WiFi routers, microwave ovens, which may interfere the connection. <p>If nothing above is involved, please retry to pair: press the Pair Button at the bottom of the camera, press Menu button, select through->+>+, and then the monitor will auto-pair with the camera.</p>
Nothing shown when I view a camera?	<ul style="list-style-type: none"> Check all connections to the camera (power cable plugging and pairing). Check whether the screen is in sleep mode. Press any button to awake it. Check whether the camera is within range of the monitor.
No sound from the monitor?	<ul style="list-style-type: none"> Check whether the system sound volume is set to "0". It'll be mute if set so.
Black and white pictures?	<ul style="list-style-type: none"> Night vision LED may be ON. Please turn on room lights to force it out of the night mode.

Choppy videos?	<p>Check whether the camera is near the monitor and that there're no obstacles between them.</p> <ul style="list-style-type: none"> Adjust the monitor antenna to vertical position for better signal transfer.
Too much noise?	<p>Volume may be set too high. Press Menu Button ->OK Button ->Left Button to volume down.</p> <ul style="list-style-type: none"> The camera and monitor may be put too close; keep them at least 1.5m/4.9ft apart.
Image becomes blur?	<ul style="list-style-type: none"> Check there's dirt or finger print on the camera lens.
App connection failure?	<ul style="list-style-type: none"> Plug out the USB-C cable from the camera and plug in again; turn off the app and turn on again. Then start the connection procedure again.
Monitor screen stuck?	<ul style="list-style-type: none"> Reset your monitor with the needle, and then long press the power button of your monitor to restart it.
No notifications from phone?	<ul style="list-style-type: none"> Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system has been opened.
How to add device?	<ul style="list-style-type: none"> The camera can be connected to both the monitor and the application. Generally, it connects to the monitor by default.
Sound detection doesn't work?	<ul style="list-style-type: none"> The sound detection interval is 1 minute, after the sound triggers the alarm, the interval is 1 minute again to avoid frequent alarms. The cry detection function can detect most babies crying. This function uses a sound filtering algorithm, so some crying may not trigger the 'cry detection' function.

WARRANTY&CUSTOMER SERVICE

12 months warranty

Lifetime customer service.



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

WEEE COMPLIANCE

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

“-“The symbol indicates DC voltage

This product bears the selective sorting symbol for Waste electrical and electronic equipment(WEEE).This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

尺寸：105x140mm

装订：胶装

材质：封面200克铜版纸，内页105克哑粉，
压边8mm