

user manual

zoom
Te Acerca

smartphone

zoom
Social PLUS

Follow us   www.zoomproducts.com.co

1 Your Phone

1.1 Keys Definition

Name	Description
Left soft key	Execute the displayed function on the left bottom line.
G/C key	In the idle, press it to enter the Recent calls list. Dial or answer a call.
Number key	Editing numbers; In the idle, press and hold 1~9 to speed dial. In the others, execute the input function.
* key	In standby mode, press and hold it to key locked.
Navigation key	In standby mode Up: press it to enter Camera Down: press it to enter Music Player. Left: press it to enter New message editing interface. Right: press it to enter Profiles In the others, press the navigation key to move the cursor.
Right soft key	Execute the displayed function on the right bottom line; In the pop-up sub menus interface, press it to close the sub menus; In the editing interface, press it to delete the latest character, press and hold it to delete all the characters; In the others, press it to exit.
OK key	Press it to confirm the settings. In standby mode, short press Center key to enter Main menu.
Music Key	Press it to enter Music Player.
End/PWR key	Press it to exit; Press and hold it to power on/off.
# key	In standby mode, press and hold # key to lock the phone; In standby mode, long press and hold it to switch General/Vibrate Only mode..

1.2 Screen Icons

Icons	Description
	Signal Indicator; More bars indicates stronger signal
	UIM/GSM card can't be identified.
	No use icon
	New message icon
	Data Service icon
	General mode

	Outdoor mode
	Headset mode
	Vibrate mode
	Silent mode
	Alarm icon
	Call icon
	T-Flash card icon
	Battery Level Indicator
	Airplane mode icon

2 Get Started

2.1 Install Battery

Using the lithium-ion battery, please use the original manufacturers or authorized batteries, and take care of the battery.



Notice:

Press and hold End key to power off, remove the battery after wait about 10 seconds avoid to damage the storage.

2.2 Battery Charging

Before Charging, you must confirm the phone adapter is original manufacturers or authorized.

You can use the original USB data cable to charge the battery.



Notice:

-) 1) Use the adapter by the original manufacturer, avoid to making a danger.
-) 2 (Do not charging the mobile phone without battery, in order to avoid damaging the phone or adapter.
-) 3 (Do not be forcibly inserted into joints to avoid damage the phone or adapter.
-) 4 (Please use the battery after it is used up completely and then charged full for the first three times, your battery will be in the best status.
-) 5 (The battery will be automatically discharge, please charging it when its not used for a long time.
-) 6 (Do not use any damage or failure of battery and adapter.
-) 7 (After charged and discharged for hundred times, it will be disabled. If the working time is shorter, please replace it.

2.3 Install UIM/GSM card

Before you use the phone, please insert an effective card.



Notice:

-) 1 (Must power off the phone and disconnect charge, and then continue to insert the UIM/GSM card.
-) 2 (Please do not touch the metal area to avoid losing and breaking the information in the UIM/GSM card. Put the UIM/GSM card far from electricity and magnetism.
-) 3 (Please put the UIM/GSM card out of the reach of the children.

2.4 Headset

This phone has a headset. After you inserted the headset, you can use it to listen to MP3 and FM radio. When you have an incoming call, press and hold the button of the headset to answer/reject the call. Using the headset to conversation, please talk with the mic to the best of your abilities.

2.5 T-FLASH card

T-Flash card is an extension memory (abbr. TF card). You can store the multimedia files in the card.



Notices:

-) 1 (Avoid to insert/remove it during reading/writing, it will lose the data in card, even damage it.
-) 2 (The T-Flash card is damaged easily, please do not bend or injury it, and put it far away from electricity, dust or water.
-) 3 (T-Flash card has many brands currently on the market, compatibility varies greatly. Suggest using the card in the package or buy the regularity brands.

3 Basic Function

3.1 Power on/Power off

Press and hold End key to power on when it has enough electricity. If you open the Phone locked, please input the code (0000) when power on. The detail of Phone locked is in [Menu/Settings/Security/Phone Lock].

When the keypad was locked, please press Left Soft key then press " * " to unlock it.

3.2 Making a Call

3.2.1 Input a Number

In the idle, press Number key to input the telephone numbers and then press Dial key to make a call, or press Left Soft key to display the sub menus: Save, Message, Hard pause, Time pause and IP call.

Save: save the edited number to the phone book.

Message: edit and send a message to the edited number.

Hard pause: hard pause the edited number

Time pause: set the pause time to the edit number..

3.2.2 Call a number from Recent Calls

In the idle, press Dial key to enter Recent calls interface. In the list interface, you can choose someone and press Dial key to dial it. The detail operation is in [Menu/Call logs].

3.2.3 Speed Dialing

In the idle, you can press and hold 1~9 to speed dialing numbers. If you do not set speed number before, the phone will prompt "Empty address". The detail is in [Menu/Contacts/Speed Dial].

3.2.4 Tri-party Conversation

During the conversation, input the third number from the phone book, or input the numbers by the keypad directly. And then create the Tri-party Conversation, press Dial key to begin it after the third one answer the call.

Notes:

Before you use the tri-party conversation, please confirm that the local network support this function and the UIM card opened this function too.

3.3 Answer a Call

When you have an incoming call, your phone rings or vibrates depending on the parameters you choose. However, if the number has been stored in the phone book, the caller's name will be displayed.

You can press Answer key to answer it, or you can answer it by other ways that you can set the answer mode in [Menu/Call Manager/Call settings/Answer Mode]; otherwise, you can press End key to reject it.

4 Main Menu

4.1 Contacts

Allow you to manage your phone book and keep records of your contacts in Phone, UIM Card and SIM Card.

4.1.1 Add New

You can store multiple contact details under a name: Group ID, Mobile Number, Office Number, Home Number, Other Number, set particular ring tone for incoming calls, E-mail address, Memo.

1. Enter a Name for the phone number.

2. Press [Down], select a desired group using [Left]/[Right].

3. Press [Down], input Mobile /Office/Home /Other numbers as required.

4. To assign Speed Dials, select the phone number, then press [Left Soft] key < Options> - < Assign >. Using number key, input speed dial or select a desired speed dial with [Navigation] key and then press [OK].

5. After selecting ringing by pressing [Down], press [Left Soft] key < Options> - < Set > select a desired ringing and press [OK].

6. After selecting E-mail by pressing [Down], inputting e-mail address.

There are some predefined domains, you may select them by [Left Soft] key < Options> - < WWW>.

7. After selecting Memo using [Down],input the memo.

8. Press [OK], then set default number you want.

USER manual

zoom

Te Acerca!



zoom
Social PLUS

Follow us www.zoomproducts.com.co

1 Your Phone

1.1 Keys Definition

Name	Description
Left soft key	Execute the displayed function on the left bottom line.
G/C key	In the idle, press it to enter the Recent calls list. Dial or answer a call.
Number key	Editing numbers; In the idle, press and hold 1~9 to speed dial. In the others, execute the input function.
* key	In standby mode, press and hold it to key locked.
Navigation key	In standby mode Up: press it to enter Camera Down: press it to enter Music Player. Left: press it to enter New message editing interface. Right: press it to enter Profiles In the others, press the navigation key to move the cursor.
Right soft key	Execute the displayed function on the right bottom line; In the pop-up sub menus interface, press it to close the sub menus; In the editing interface, press it to delete the latest character, press and hold it to delete all the characters; In the others, press it to exit.
OK key	Press it to confirm the settings. In standby mode, short press Center key to enter Main menu.
Music Key	Press it to enter Music Player.
End/PWR key	Press it to exit; Press and hold it to power on/off.
# key	In standby mode, press and hold # key to lock the phone; In standby mode, long press and hold it to switch General/Vibrate Only mode..

1.2 Screen Icons

Icons	Description
	Signal Indicator; More bars indicates stronger signal
	UIM/GSM card can't be identified.
	No use icon
	New message icon
	Data Service icon
	General mode

	Outdoor mode
	Headset mode
	Vibrate mode
	Silent mode
	Alarm icon
	Call icon
	T-Flash card icon
	Battery Level Indicator
	Airplane mode icon

2 Get Started

2.1 Install Battery

Using the lithium-ion battery, please use the original manufacturers or authorized batteries, and take care of the battery.



Notice:

Press and hold End key to power off, remove the battery after wait about 10 seconds avoid to damage the storage.

2.2 Battery Charging

Before Charging, you must confirm the phone adapter is original manufacturers or authorized.

You can use the original USB data cable to charge the battery.



Notice:

-) 1) Use the adapter by the original manufacturer, avoid to making a danger.
-) 2 (Do not charging the mobile phone without battery, in order to avoid damaging the phone or adapter.
-) 3 (Do not be forcibly inserted into joints to avoid damage the phone or adapter.
-) 4 (Please use the battery after it is used up completely and then charged full for the first three times, your battery will be in the best status.
-) 5 (The battery will be automatically discharge, please charging it when its not used for a long time.
-) 6 (Do not use any damage or failure of battery and adapter.
-) 7 (After charged and discharged for hundred times, it will be disabled. If the working time is shorter, please replace it.

2.3 Install UIM/GSM card

Before you use the phone, please insert an effective card.



Notice:

-) 1 (Must power off the phone and disconnect charge, and then continue to insert the UIM/GSM card.
-) 2 (Please do not touch the metal area to avoid losing and breaking the information in the UIM/GSM card. Put the UIM/GSM card far from electricity and magnetism.
-) 3 (Please put the UIM/GSM card out of the reach of the children.

2.4 Headset

This phone has a headset. After you inserted the headset, you can use it to listen to MP3 and FM radio. When you have an incoming call, press and hold the button of the headset to answer/reject the call. Using the headset to conversation, please talk with the mic to the best of your abilities.

2.5 T-FLASH card

T-Flash card is an extension memory (abbr. TF card). You can store the multimedia files in the card.



Notices:

-) 1 (Avoid to insert/remove it during reading/writing, it will lose the data in card, even damage it.
-) 2 (The T-Flash card is damaged easily, please do not bend or injury it, and put it far away from electricity, dust or water.
-) 3 (T-Flash card has many brands currently on the market, compatibility varies greatly. Suggest using the card in the package or buy the regularity brands.

3 Basic Function

3.1 Power on/Power off

Press and hold End key to power on when it has enough electricity. If you open the Phone locked, please input the code (0000) when power on. The detail of Phone locked is in [Menu/Settings/Security/Phone Lock].

When the keypad was locked, please press Left Soft key then press " * " to unlock it.

3.2 Making a Call

3.2.1 Input a Number

In the idle, press Number key to input the telephone numbers and then press Dial key to make a call, or press Left Soft key to display the sub menus: Save, Message, Hard pause, Time pause and IP call.

Save: save the edited number to the phone book.

Message: edit and send a message to the edited number.

Hard pause: hard pause the edited number

Time pause: set the pause time to the edit number..

3.2.2 Call a number from Recent Calls

In the idle, press Dial key to enter Recent calls interface. In the list interface, you can choose someone and press Dial key to dial it. The detail operation is in [Menu/Call logs].

3.2.3 Speed Dialing

In the idle, you can press and hold 1~9 to speed dialing numbers. If you do not set speed number before, the phone will prompt "Empty address". The detail is in [Menu/Contacts/Speed Dial].

3.2.4 Tri-party Conversation

During the conversation, input the third number from the phone book, or input the numbers by the keypad directly. And then create the Tri-party Conversation, press Dial key to begin it after the third one answer the call.

□ Notes:

Before you use the tri-party conversation, please confirm that the local network support this function and the UIM card opened this function too.

3.3 Answer a Call

When you have an incoming call, your phone rings or vibrates depending on the parameters you choose. However, if the number has been stored in the phone book, the caller's name will be displayed.

You can press Answer key to answer it, or you can answer it by other ways that you can set the answer mode in [Menu/Call Manager/Call settings/Answer Mode]; otherwise, you can press End key to reject it.

4 Main Menu

4.1 Contacts

Allow you to manage your phone book and keep records of your contacts in Phone, UIM Card and SIM Card.

4.1.1 Add New

You can store multiple contact details under a name: Group ID, Mobile Number, Office Number, Home Number, Other Number, set particular ring tone for incoming calls, E-mail address, Memo.

1. Enter a Name for the phone number.

2. Press [Down], select a desired group using [Left]/[Right].

3. Press [Down], input Mobile /Office/Home /Other numbers as required.

4. To assign Speed Dials, select the phone number, then press [Left Soft] key < Options> - < Assign >. Using number key, input speed dial or select a desired speed dial with [Navigation] key and then press [OK].

5. After selecting ringing by pressing [Down], press [Left Soft] key < Options> - < Set > select a desired ringing and press [OK].

6. After selecting E-mail by pressing [Down], inputting e-mail address.

There are some predefined domains, you may select them by [Left Soft] key < Options> - < WWW>.

7. After selecting Memo using [Down],input the memo.

8. Press [OK], then set default number you want.

FCC Caution.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 10mm from body worn. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm from body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm from body worn must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.