

Content of package



Headset the headset on

Keep the call acceptance key pressed for 3 sec; the LED starts to flash in blue and you will hear the voice message «Power On».

Headset headset off

Keep the call acceptance key pressed for 3 sec, the LED lights up once in red and you will hear the voice message «Power Off»

Charging

Connect the headset's micro-USB port to your PC or USB mains adapter with the USB lead. During charging, the LED shows constant red, once the battery is fully charged the LED changes to blue.

Connecting the headset to the telephone (pairing)

1. Make sure that the headset is switched off (see «Headset Off»). Open the Bluetooth menu on your telephone.
2. Keep the call acceptance key pressed for approx. 7 seconds until the LED flashes red and blue alternately; you will then hear the voice message «Pairing» in the headset.
3. Now select «Gym MX». If your device requests a PIN, enter «0000».

Pairing the headset with two telephones (multipoint connection)

The freeVoice Gym MX supports the multipoint function so that the headset can be connected to two telephones simultaneously.

1. Proceed in the manner described in the «Pairing» section to connect the headset to the first telephone
2. Deactivate the Bluetooth function for the first phone and switch the headset off again.
3. Now connect the second phone as described in the «Pairing» section.
4. Switch the Bluetooth function back on for the first phone and re-connect to the headset.

Accept/end a call

1. Press the call acceptance key to accept a call.

2. Press the call acceptance key again to end the call.

Connected to two telephones (multipoint)

Press the call acceptance key to accept the second call, the first call is put on hold. Redial

Press the call acceptance key twice to call the last number dialled again.

Dismissing an incoming call

Keep the call acceptance key pressed for approx. 2 seconds to dismiss an incoming call.

Press the call acceptance key to play or pause music

Skip title

Next title: press the volume «+» key for 2 seconds

Previous title: press the volume «-» key for 2 seconds

Adjust volume

Press volume «+» or «-» to adjust the volume during a telephone call/when listening to music.

Microphone muting

Press the volume «-» key for 1 second during the call to mute the microphone and later cancel muting.

Switching between microphones

Press the call acceptance key twice during the call to switch between the headset microphone and the phone's microphone.

LED status display

Headset «ON» LED flashes three times in blue

Headset «OFF» LED comes on for 1 second in red

Pairing mode active LED flashes alternately red and blue

Connected status LED flashes once every 10 seconds in blue

Not connected status LED flashes 2 times every 10 seconds in blue Charging status LED shows constant red

Fully charged status LED goes out

Low battery status LED flashes in red

Technical data

Bluetooth version V4.1

Frequency 2,402-2,480Ghz

Range Up to 10 metres

Standby time Up to 250 hours


Speech/music playback time Up to 8 hours

Battery type Lithium polymer 3.7V; 140mAh

Fully charged Approx. 2 hours

Tests FCC, CE

Product Label:

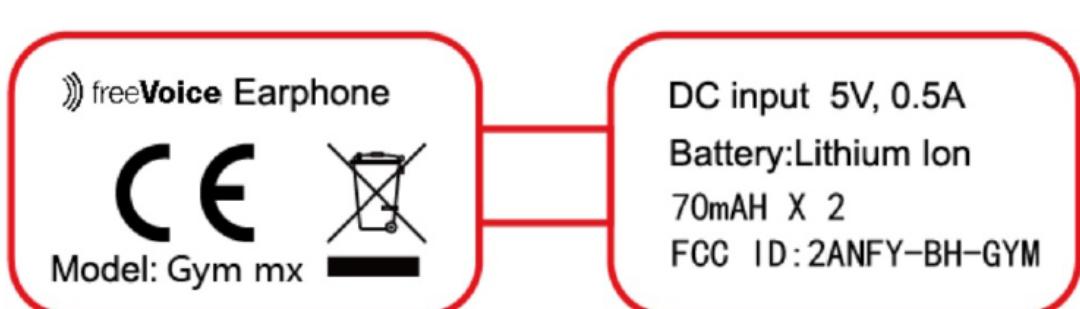

Note:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice:

- Do not allow children to play this product.
- Do not hit or beat the product.
- Do not forcibly on rotating horn head, in case of avoiding internal circuit is broken
- Please note waterproof, anti-high temperature, using in cold regions will lead to product's performance degradation.
- Do not place the product into fire.
- Please do not block the network on the speaker.
- Do not disassemble if the speaker broken down.
- For any rust, peeling and other metal surface oxidation of natural phenomena, it's not under the warranty.