 





Preparation:


1. Tear off the stickers, the transparent cover out, and the base to the left.



 
3. As shown, flip the remote control, take out the antenna.



 
4. Insert the antenna into the hole at the top of the controller, and tighten it. (2.4G remote control without rod antenna)



2. Using cross screwdriver to unscrew the screws on the base by counterclockwise, ship will be taken down from the base.

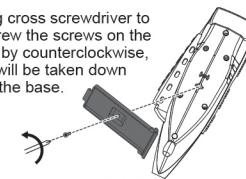

5. Use a philips screwdriver to loosen the screws on the battery cover by the counter-clockwise, insert 4X1.5V "AA" batteries with the correct polarity, replace the battery cover and tighten the screws.

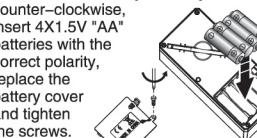


Charge

Pull the ON/OFF switch of the transmitter to "ON" position, then open the charging cover in middle of the transmitter and takeout the charging plug. Insert the charging plug (arrow facing outward) into the charging port of the frigate/aircraft carrier this time the charging indicator will be ON. It means that it is under charging. When the charging indicator is automatically OFF, it means that charging process is finished. After it is fully charged, you can play it for about 6-8 minutes.



Operation:

1. When using it, please pull the antenna of the transmitter till maximum(Pic 1); switch on the power of the transmitter, put the frigate/aircraft carrier to the water again, the frigate/aircraft carrier switches on electricity, do not place hands near the propeller and then confirm there is no obstacle around the propeller so as to prevent from being wounded by the propeller when it is rotating in high speed. (As Pic 2, When the two connecting points on the front end of the frigate/aircraft carrier is away from the water, this time the frigate/aircraft carrier will be in the state of disconnecting, the propeller will stop rotating as well.)

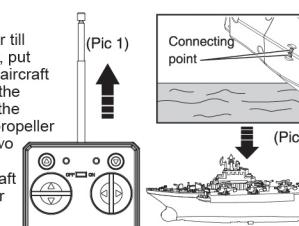

Remark: 2.4G remote control without rod antenna.


AGES UP 8+ ITEM NO. 3318/3319

(Operating instruction)

2. Function of controller button:
(1) Press the controller button, the indicator light on the controller will light up follows you pressing the controller button.(Press any button on the controller, the function indicator light on controller will light up).


(2)When pressing the forward/backward button, the frigate/aircraft carrier will go forward/backward.

(3)When pressing the forward button, and also pressing down the left/right turn button, the frigate/aircraft carrier will turn left/right.

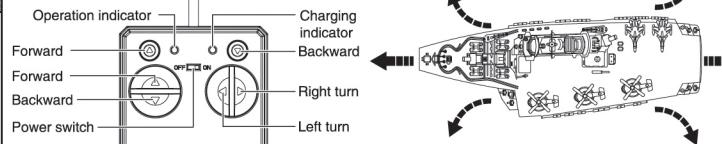

Special tips:

If it is under abnormal operation and carelessly let the water penetrate into the inner side of the boat body and cause the boat not work normally, please stop using it immediately, use screwdriver to loosen 6 pieces of screws by anticlockwise direction. Slightly separate the boat body and the boat deck, use electric blower to dry it, reload the screw and wrench it and then you can use normally.

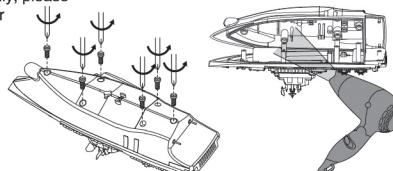

Caution:

1. Batteries should be replaced by adult.
2. Do not charge the rechargeable battery pack immediately when it exhausts, wait until it cools down before charging.
3. Only use recommended batteries.
4. Batteries should be installed with correct polarity.
5. Never mix different types of batteries, or new and used batteries.
6. Never try to recharge non-rechargeable batteries.
7. Always remove rechargeable batteries from the product before recharging them.
8. Rechargeable batteries must only be recharged under adult supervision.
9. Remove dead batteries immediately and replace them with new batteries of the same type. Put dead batteries in a recycling container.
10. Do not short-circuit the battery terminals. When charging, keep the battery and charger away from reach of children. Do not charge battery near fire, hot place, or wet place.
11. Do not touch the propellers.
12. Antenna broken, or insert other parts likely to cause bodily injury.

Please keep the instruction for future reference.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference.

(2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However,there is no guarantee that interference will not accor in a particular installation. if this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an autlet on a circuit different from that to which the receiver is connectec.
- Consult the dealer or an experienced radio/TV technician for help.