

MAXWEST

MX-BT11

BT Portable Speaker

USER GUIDE



To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

FEATURES:

- 1.2.0CH portable Bluetooth fabric speaker
- 2.Water resistant IPX6, splash-proof, rainproof, perfect for beach, poolside, boat and more outdoor activities
- 3.TWS function, achieve true wireless Bluetooth playing with double enhanced stereo sound
- 4.Optimized Google Assistant and Siri voice control
- 5.Hands-free Mic for easy picking up the call
- 6.RGB Lighting
- 7.With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- 8.Bluetooth operating range 10 meters
- 9.USB support
- 10.FM radio
- 11.Line-in function, suitable for PC, MID, TV and other audio devices
- 12.Built-in lithium rechargeable battery 3000mAh
- 13.Shoulder strap, easy to take out

 
SPECIFICATIONS:

Speaker Size: 3 inch*2
Speaker output: 7W*2, 4Ω
Battery Capacity: 3.7V, 3000mAh
Frequency Response: 100Hz-20kHz
Product size: 283(L) *123(W) * 126 (H) mm

ACCESSORIES:

Charging cable, Audio cable, User manual, Shoulder strap

PRODUCT DETAILS:

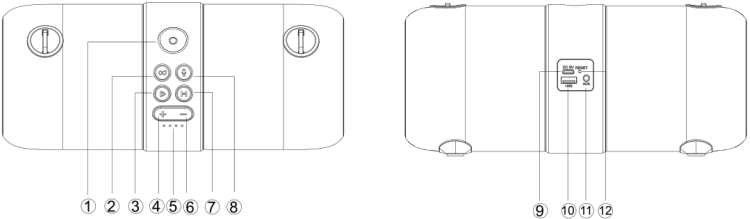

- | | | | |
|---------------------|------------------------|---------------|---------------------|
| 1.Power On/Off | 2.TWS Button | 3.Play/Pause | 4.Forward/Volume Up |
| 5.Battery Indicator | 6.Backward/Volume Down | 7.Mode Button | |
| 8.Siri Button | 9.Charging Jack | 10.USB Port | 11.AUX Port |
| | | | 12.RESET Jack |

Bluetooth:

- 1.Turn the power button to “ON”, the speaker will make a tone, the Power button turn blue and blink quickly.
- 2.The speaker enter Bluetooth mode automatically.
- 3.Activate Bluetooth of mobile phone and search for device name “MX-BT11” then connect it. The power button stop blinking and make a tone once connected.
- 4.Play the music from your mobile phone and enjoy.
- 5.Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- 6. Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones’ volume.
- 7.Short-press Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- 8.Short-press Siri button to activate voice assistant SIRI/GOOGLE ASSISTANT.

Playing music from USB disk:

- 1.Turn the Power button to “ON”.
- 2.Insert USB flash disk into slot, the speaker will play the stored music automatically.
- 3.Under playing mode, long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- 4.Short-press Play/Pause to play or pause.

Remark: Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch to play the USB disk. You can short-press the MODE button to switch to Bluetooth mode again.

FM Radio:

- 1.Turn the power button to “ON”, short-press the “MODE” button to enter radio state.
- 2.Under radio mode, Long-press “Play/Pause” button to auto search the FM Channel and store it automatically. Short-press “Play/Pause” button to mute the speaker.
- 3.Long-press Forward or Backward button to change the stored FM channel, short-press to adjust the volume up and down.

TWS Function:

- 1.Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- 2.Short-press the TWS button, speaker will make a tone and start to pair, a tone will be audible again and TWS button will keep lighting after paired successfully.
- 3.Make Bluetooth connection with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
- 4.When you want to exit the TWS mode, short-press the “TWS” button again.
- 5.Once two units paired with TWS, when they both are turned on next time within effective range, they will be automatically paired again.

Note: 1.Users need to make TWS connection first, then make Bluetooth connection with the mobile phone.
2.Under TWS mode and Bluetooth connected, when user long-press the TWS button, both the TWS connection and Bluetooth connection will be disconnected.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device, then Enjoy...
When using an external device, all functions can be controlled by the external device.

RGB Lighting

When the speaker is turned on, the RGB light is on automatically, user can long-press the Mode button to switch the RGB light on and off.

Remarks:

- 1.When Bluetooth connection with your mobile phone, there will be a battery icon indicating the speaker battery volume on your phone.
- 2.Short-press the MODE button to switch the different modes, the order is Bluetooth, USB disk, FM radio and AUX-IN.
- 3.When the speaker Bluetooth connected with one mobile device, user can long-press the TWS button to disconnect the previous device, then make Bluetooth connection with another mobile device.
- 4.Default volume is at 50% status of max volume.
- 5.Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call; When want to end a call, user can short-press Play/Pause button or operate on mobile phone to end the call. During the call, user can long-press Play/Pause button to switch to talking on the phone.
- 6.Turn the power button to “off” while without use.

How to charge:

- 1.The charger is not included in the accessories. Please use a standard 5V/2-3A charger to charge this device, and we are not responsible for any damage caused by using other charger.
- 2.Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or a charger with 5V output.
- 3.Charge time should be 3-5 hours.
- 4.The unit does not have power bank function, it is forbidden to charge other device via this unit or to connect other device via a USB cable.

IMPORTANT:

When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.

Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)this device may not cause harmful interference
- (2)this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.