

Front

LIGHT INDICATIONS

Base Station

-  Solid yellow light
The device is powered on and initializing
-  Flashing blue light
The device is connecting to the network
-  Solid blue light
The device is working properly
-  Flashing yellow & blue lights
The device is pairing with camera

Wyze Cam Outdoor

-  Solid yellow light
The device is powered on and initializing
-  Flashing blue light
The device is connecting network
-  Solid blue light
The device is working properly
-  Flashing yellow & blue lights
The device is pairing with base station

-  Flashing red light
The device is charging
-  Solid red light
The device is fully charged
-  No indicator light
The device is powered off or sleeping

Precautions:

Using the camera in the car under direct sun exposure could exceed the operating temperature of the battery, resulting in irreversible damage to the battery.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits

set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED RSS warning :

This device complies with ISED licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference,including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Radiation Exposure Statement:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établies pour un environnement non contrôlé.
Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur. Industrial cellular router doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur & votre corps.

WYZE CAM
OUTDOOR
QUICK START GUIDE

 
NEED HELP?

- Tutorial Videos**
www.youtube.com/wyzelabs
- Troubleshooting & FAQs**
support.wyze.com
- Community**
forums.wyze.com
- Contact Us**
support@wyzecam.com
1-844-WYZECAM

Back

SETUP


- 1 Download the Wyze app and create an account.






- 2 Follow the Wyze app to set up base station.



 - 3 Follow the Wyze app to set up the camera.



   
- 4 Follow the Wyze app to mount the camera.

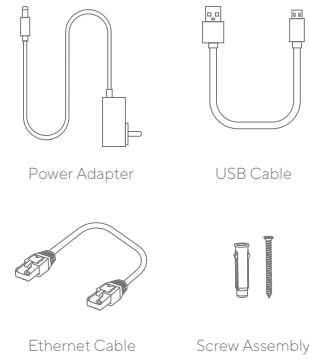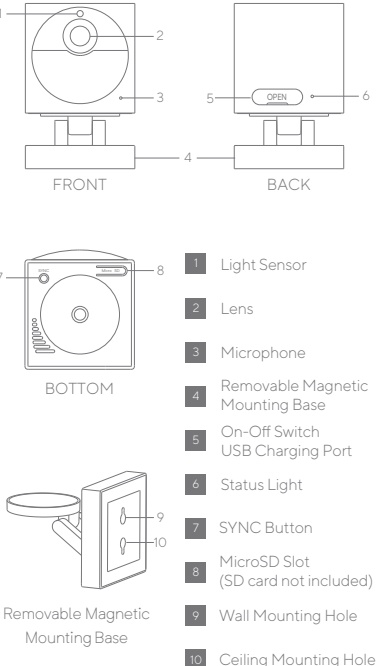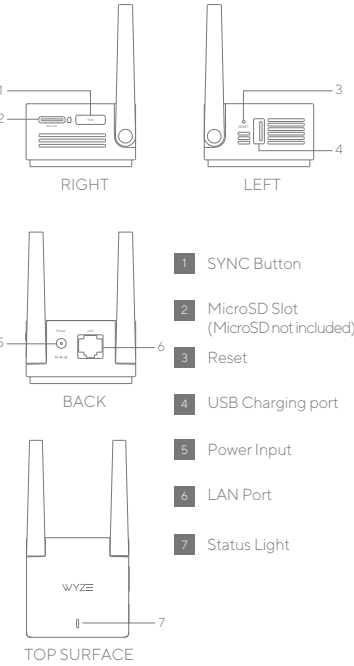

IN THE BOX

- | | |
|-----------------------------|----|
| Wyze Cam Outdoor | x1 |
| Base Station | x1 |
| Base Station Power Adapter | x1 |
| Base Station Ethernet Cable | x1 |
| Camera Charging USB Cable | x1 |
| Quick Start Guide | x1 |
| Screw Assembly | x1 |

 Wall Mounting

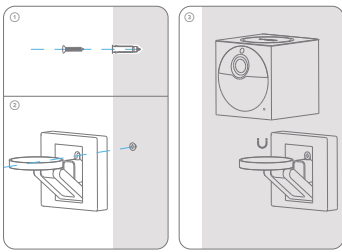

Ceiling Mounting

