



CAR CHASSIS

1.Turn the screw on counterclockwise to open the battery cover

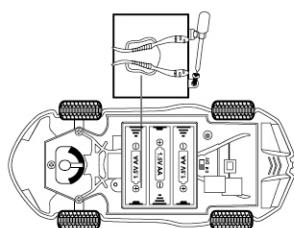


2.Load 3 'AA' batteries as prompted(not include)

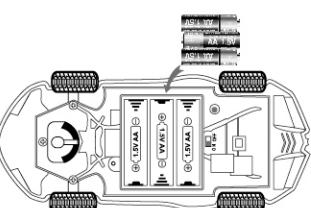


REMOTE CONTROL


3.Turn the screw on counter clockwise to open the battery cover

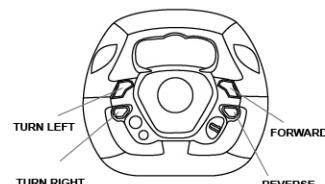

4.Load 2 'AA' batteries as prompted(not include)

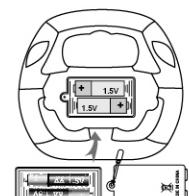


FUNCTION DISPLAY

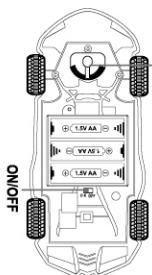


5.Turn on the switch and immediately make a sound, The window glass will give

MANIPULATION OF THE INSTRUCTIONS

6.Function: Forward , Reverse

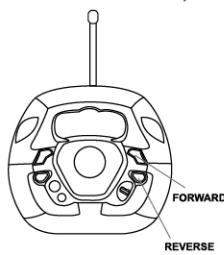

7.Function: Turn Left , Turn Right

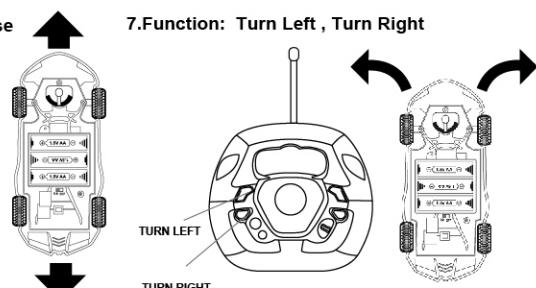

7.Function: Turn Left / Turn Right / With Light / Stop

CAUTION

BATTERY WARNING AND LABELING

Use alkaline batteries recommended.

Do not use rechargeable batteries.

Non-rechargeable batteries are not to be recharged.

Do not mix old or new batteries.

Do not mix alkaline standard(carbon-zinc) or rechargeable(nickel-cadmium)batteries.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

Please keep this information for future reference.

Remove batteries from the product before extended storage.

Please take note that the product may vary from the picture and the illustration of the package.

BATTERY INSTRUCTIONS:

only adults should replace batteries

locate the switch on the bottom of toys and make sure it is off

remove all used batteries from inside the compartment

dispose of used batteries properly

not the polarity(+/-)of the new battery and place properly inside the compartment

FCCID:2ANJM26331170

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.