

ECHO SMART

ECHOLAC SMART LUGGAGE



SMART LUGGAGE FUNTION

1

Smart lock

After binding the luggage, log in the APP home page. Click on the lock/unlock button to open/close the lock. When the lights turn red means locked, and blue means unlocked. The system would lock automatically after 30 seconds. You can use the backup keys to open the lock when the system fails.

2

Be Weighted

Click on the "weight" button, then steadily lift the connected luggage, keep it for seconds, then the APP shows stable weight data to complete weighting.

3

Distance Alarm

Open the APP, or run it in the background, the warning system will alarm when the luggage is beyond a certain distance.

QUICK START GUIDE

1. Power on

Unzip the interior lining of the rear compartment to access the power unit. Open the battery cover by turning the screw lock counterclockwise. Place(2x) AAA batteries(included) inside. The TSA lock will turn blue, indicating that the luggage has been turned on.

2. Download app

Scan the QR code below or visit the Apple store or Google Play store to search ECHOLAC to Download the app.



3. Register

Register the account by your email address, and please remember your password.


4. Binding

Open the APP and log in. Then click the button to pair with the luggage. If fail, please check if the power units are correctly installed, and make sure there's only one smart luggage around you, then try to pair again. If the luggage has already paired with other account A, pls unbind the luggage firstly by following steps. Open the APP, log in by account A, then tap the device information icon at the upper right corner of the luggage page, click the delete device, thus you unbind the luggage.

REMINDING

- 1. To Weigh more accurately, the luggage handle is special designed with hollow joint.
- 2. Please take out the batteries if the luggage is left unused for a long time.
- 3. To keep the luggage secure, the system would lock automatically after 30 seconds.
- 4. Please note the distance alarm would be affected by your surroundings.
- 5. Be sure to keep the keys carefully outside the luggage. They are the backup keys to open the lock, please make sure you have it with you always.

1

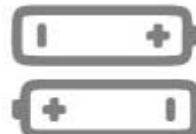

Power on

2



Download app

3



Register

4



Binding

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.