

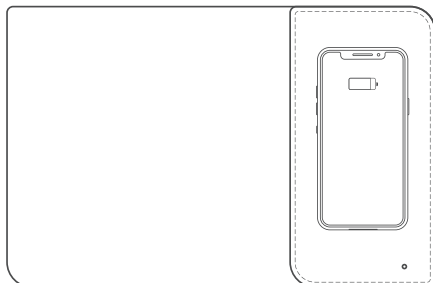 
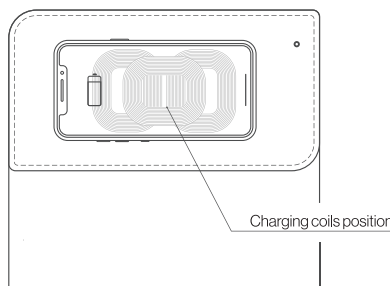 
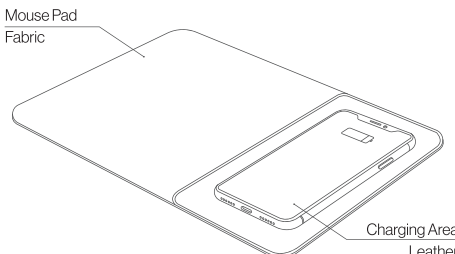 
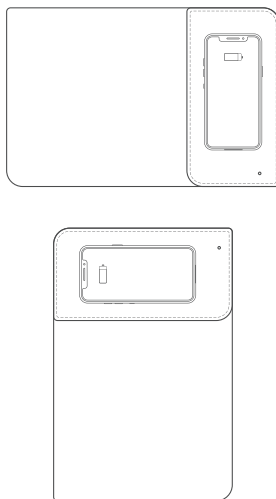 
1

8

7

6

尺寸：70*110mm
包心折，3折4页，双面印刷
128g铜版纸

EGGTRONIC Wireless Charging Mouse Pad MSBC10  Call Eggtronic customer support before returning the product to the retailer.  (844) 282-2770		CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. NOTE: This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. www.eggtronic.com		device may malfunction or may cause an electric shock or fire. ▪ Never dispose of the device in a fire. ▪ Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures may damage the charger and reduce the lifespan of the device. ▪ Do not store magnetic cards near the product. Magnetic cards, including credit cards, phone cards and boarding passes, may be damaged by magnetic fields. ▪ Do not throw away the product with the household trash. The product needs to be recycled and disposed of responsibly. Limited warranty For product warranty visit our website at the page www.eggtronic.com/support/download-area This product is meant for use only with appropriate devices. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer will not be responsible for any damages you or any third party that may suffer as a result of use, intended or unintended, or misuse of this product. You agree to indemnify Manufacturer for any resulting injury or damage if the product is used with an unintended device. Product names, logos, brands and other trademarks referred to within this product are property of their respective trademark holders. These trademark holders are not affiliated with our company, our products or our website. They do not sponsor or endorse our materials.  	
USER MANUAL		How to Use You can place your Mouse Pad horizontally or vertically. The smartphone wireless charging area will be at the side of the mouse area, or on top. The wireless logo indicates the wireless charging spot. Smarphone positioning Adjust the smartphone position to ensure proper alignment with the charging coils of the Mouse Pad. Direct Contact required for wireless charging.  LED indicators ▪ When the Wireless Charging Mouse Pad is connected to the power supply, the LED indicator will flash blue-green - light blue and turn off. ▪ When a smartphone is placed on the wireless charging spot, the LED indicator light will turn blue to indicate it is charging.			
Package Content Wireless Charging Mouse Pad USB Type-C Cable (3ft) Power Adapter User Manual Product Overview Thanks for choosing Eggtronic Wireless Charging Mouse Pad. The Wireless Charging Mouse Pad combines fast wireless charging with a top-performance mouse pad surface. Works great with all Qi-enabled smartphones. Please read the user manual before using the product.  Specifications MOUSE PAD Output: wireless fast charge (10W max) Size: 8.26 x 11.8 x 0.3 in Finish: genuine leather and fabric. POWER ADAPTER Quick Charge 3.0 UL Output: 5V 3A / 9V 2A / 12V 1.5A		Instructions 1. Connect the USB-C cable to the power adapter and the other end to the USB-C port of the Wireless Charging Mouse Pad. 2. Place your Qi enabled smartphone on the charging area to charge your phone.  NOTE Please notice that not all Qi enabled smartphones have receiving coils in the same position.			
Safety information Please read this safety information carefully before using the product. ▪ Do not damage the power cable. Doing so may cause electric shock or fire. ▪ Keep the product away from hot surfaces and sharp corners. ▪ Do not carry or drag the product by its cable. ▪ Do not use the product if one or more of its components are damaged or defective. ▪ The product contains electronic parts. Keep your device dry. Humidity and liquids may damage the electronic circuits of the device and may cause electric shock and fire. ▪ Do not place any metal object on the wireless charging power bank, as it may overheat and cause a fire. ▪ Do not place any other object between the smartphone and the wireless charger. ▪ Do not place any unplugged receiver on the wireless charger, as this can overheat the product and cause a fire. ▪ Handle the charger with care. Do not drop your device. It may get damaged or may malfunction. ▪ Do not disassemble, modify, or repair your charger. Any alteration or modification of your device may void the manufacturer's warranty. If your device needs servicing, contact the manufacturer. ▪ Do not modify the product in any way. Any modification may increase the risk of injury. ▪ Do not bite or suck on the device. Doing so may damage the device or result in an explosion or fire. ▪ Children may choke on small parts. If children use the device, make sure that they use it properly. ▪ If you notice strange smell or smoke coming from your device, stop using it immediately. Continuing to use the device may result in fire or explosion. ▪ Do not use the device for anything other than its intended use. The					
Troubleshooting If the product is not working properly, please check the troubleshooting. If your situation differs from normal conditions, please try to solve the issue or call customer service. For full troubleshooting visit our website: www.eggtronic.com/support/troubleshooting Does the power outlet work? (normal conditions: yes) Are you using the provided power adapter? (normal conditions: yes) Try charging your smartphone directly with the power adapter using your cable. Does it work? (normal conditions: yes) Is the cable correctly attached to the adapter? (normal conditions: yes) Is the USB-C cable correctly plugged into input port of the Wireless Charging Mouse Pad? (normal conditions: yes) Has the Wireless Charging Mouse Pad suffered a fall, impact or compression? (normal conditions: no) Is your smartphone officially compatible with Qi Wireless Charging or equipped with a working Qi Receiver? (normal conditions: yes) Is the smartphone correctly aligned with the coil position of the Wireless Charging Mouse Pad (as shown in the relevant section of the manual)? (normal conditions: yes) Is there any metal between your smartphone and the charger? (normal conditions: no)					

2

3

4

5