

## **Wireless Operation**

1. Activate the Wireless Remote by pressing the IN/OUT button for 3 seconds until LED lights up.
2. Press IN or OUT to operate Winch.
3. To turn off the Wireless Remote, keep pressing the IN/OUT button for 3 seconds until LED turns off. The Wireless Remote will automatically power off after 2 minutes of inactivity.

## **Wireless Operation Precautions**

1. Do not use near sources of radio interference or other remote control systems. They may interfere with operation or cause unexpected operation.
2. If Wire Rope unexpectedly moves, reverses, or stops, disconnect Battery Cable from Circuit Breaker immediately to prevent serious injury from sudden Wire Rope movement.
3. Only use Wireless Remote while Winch, Fairlead, Wire Rope, and object being winched/anchor point are all clearly in view.
4. Do not use more than one Remote Transmitter near a Receiver. Additional Transmitters should be turned off and be stored with their batteries removed to prevent accidental operation.
5. Do not use a damaged or malfunctioning Wireless Remote. If Wireless Remote does not work properly, discontinue use immediately and remove its batteries.

# Wireless Remote Control Battery Replacement

1. Remove Screw(s) and open battery compartment.
2. Insert new battery or batteries in correct polarity.
3. Close compartment and replace Screw(s).

## **FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Important Note:**

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.