

CAR Navigation&Entertainment System

User Manual

Contents

The basic operation	2
setting	4
(1)Background Wallpaper	4
(2)Boot logo	5
(3)General settings	5
(4)Display settings	6
(5)Sound option	6
(6)Video Option	7
(7)Bluetooth option	7
(8)Navigation options	9
(9)Language settings	10
(10)steering wheel to learn	10
(11)Date and Time	10
Radio operation	11
GPS navigation operation	12
DVD Player operation	13
Advanced media playback operation	13
Data CD player operation	16
U disk playback operation	16
SD card playback operation	16
AV IN playback operation	16
Bluetooth hands-free system operation	17
Clock interface	18
Calendar Operation	19
Other applications operating	19

Basic operation

Power on/off the unit

In shutdown mode, press the power button on the front panel or remote control to turn on the unit; Insert the CD disc also can turn on the unit; when working, long press the power button on the front panel or remote control will turn off the unit.

Volume Adjustment

Turn volume knob on the front panel (some models volume control keys is VOL + / - button on the front panel) or press the volume control VOL + / - key on the remote control to adjust the volume of the machine.

Mute switch

Press the MUTE key on panel or the remote control to enable the system mute, press it again or adjust the volume, you can restore the sound.

Backlight switch

Press the backlight switch (LIGHT) on key panel or the remote control can turn on/off the display backlight.

Remote control function

Users dial this remote control function can set the remote control function keys used in the main unit or the back screen .

Playback source selection

Press SRC button on the front panel or HOME button on the remote control can switch main page and current mode.Under radio,bluetooth,AV1,AV2,mobile TV,SD card playback,USB,Disk Playback or CDC disk changer,Press () button to return to main page. Under Home interface,touch different function icons choose the appropriate interface, Please check the detailed operation of each function in later chapters. slide touch Home page can switch different home page.

Press "mode" button on the remote control can switch radio, disc player, USB playback, SD playback, mobile TV, CDC changer,AV1 or AV2 mode.



Playback position memory


when you reboot the unit from shutdown, the system will continue to play from interrupted the location.

- When you press the "SRC" button in the main panel or "Home" key on the remote control change to other modes, and then return to the CD or other media player mode, the system will continue play from the interrupted position.

Press  button will shutdown current mode and return to primary mode.


SETTING

Click  icon on the main interface "to enter the system setting interface, click the corresponding option to enter the corresponding settings option, drag the options to find the desired settings.

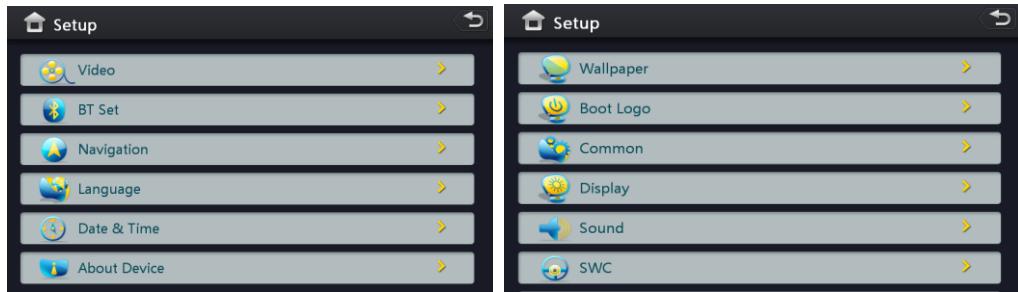

Note

 Description of switch slider in the Setting



1. Background Wallpapers

1-1、background selection

Click on the background wallpaper option enter the background settings interface, see below



Click on the middle of the preview area to set up the photo as the background

1-2、Custom background

The machine support user set their own photos as the background.

Click on Custom to enter custom background interface, the system will automatically search JPG and JPEG format images with width between 800 to 1000 pixels and height of 480 pixels in navigation card, click the Update button to set the currently selected image as the background

Note: please resize the photo in your computer at first, stored in the navigation SD card, then operation.

2. Start-up Boot logo

Click boot logo, enter the password (9981), enter the boot screen setting options



Choose the boot logo you like, click Update to set selected picture as the boot screen

3. General setting

3-1、button Beep

turn on/off the key Beep sound.

3-2、USB storage

Please select the front USB if USB interface on the front panel F

If USB interface in the glove box or other location, Please select back USB B

Please follow your own models to select the correct USB position, the location of your choice and the connection location does not comply may cause the USB device does not readable and affect use.

3-3、Reversing mute

Click on the switch option to choose whether to mute the music when reversing, for your safety recommend Mute.

3-5、Restore factory settings


Click restore factory settings option will pop up a confirmation screen, click OK, the system will restore to factory condition when the machine restart again, your settings will be cleared.

3-6、Touch calibration

Click the touch calibration button, the system will enter the touch calibration status, According to hint, touch the tip 5 "+" center to complete the calibration of the touch screen.

Note: If the touch screen bias is large can not enter into touch-screen calibration interface, you can long press the NAVI or the MENU button on the panel more than 4 seconds to enter the touch screen calibration mode.

4. Display setting

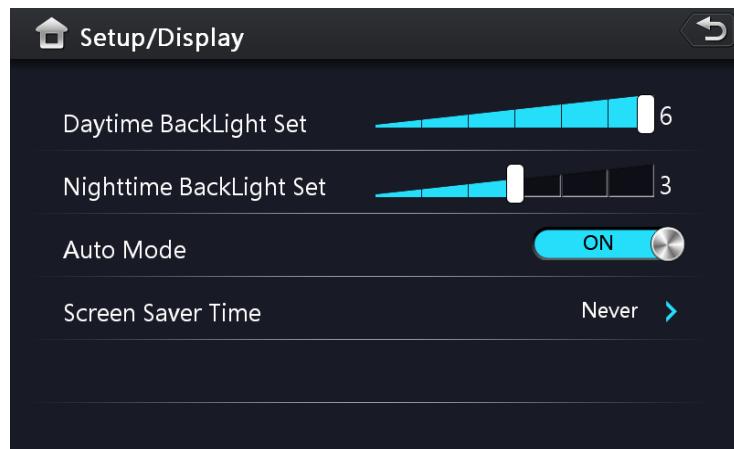

4-1、daytime brightness

Drag the right slider to select the daytime screen brightness value.

4-2、nighttime brightness

Drag the right slider to select the nighttime screen brightness value.

4-3、instrument light detection

Click the switch button on the right side to turn on/off the automatic detection mode of the instrument lights.

If Instrument lights automatically detection turn on, system will switch between day and night mode according to the current state of the instrument lights, The instrument light turns on it will choose the night brightness mode,if the instrument lights off, select the brightness of the daytime mode.

4-5、The time of the screen saver

Click the arrow at the right of the option to choose the time of the screen saver , Click on the box in front of the corresponding time to select the screen saver time.

Note: System does not enter the screen saver state when playing the video and pictures.

5.Sound options


5-1、Sound settings

By clicking on the audio option button at setting interface, Click the sound button in each mode or press the audio buttons shortly on the panel etc, You can enter the sound settings interface.



5-2、Balance setting

Click the balance setting icon  of Audio interface enter the balance setting interface.

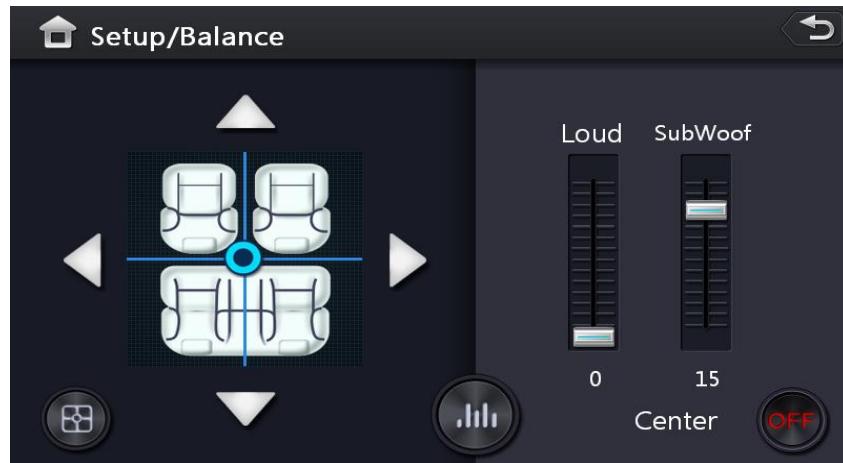

5-2-1、Loud setting

Sliding the left side of the loudness slider to change the current system value of loudness.

5-2-2、Balance setting

Click four arrows to adjust the 4 speaker volume value to control the sound effect, You can also click the middle of the area to set the clicked location as the best listening position.

Click the  icon Located in the lower right corner to return to the default value.


6. Video Options

6-1、No Video while driving


Click the switch button on the right to turn on/off this function
Note: For your safety ,It's recommended that you turn on this setting

6-2、Color temperature

Click the arrow button on the right of color temperature to enter the color temperature selection, Choose a different color temperature will change the color mode video playback.

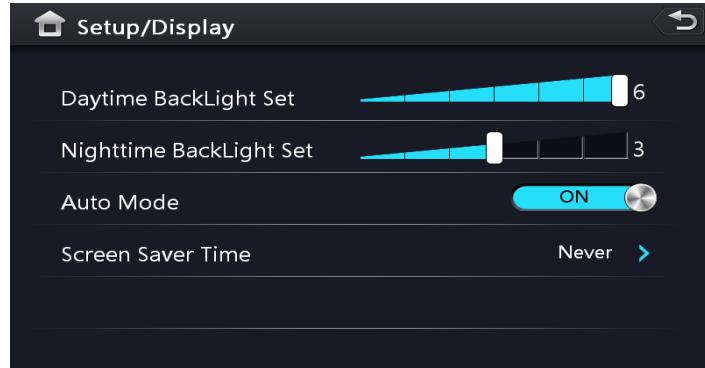

7. Bluetooth option

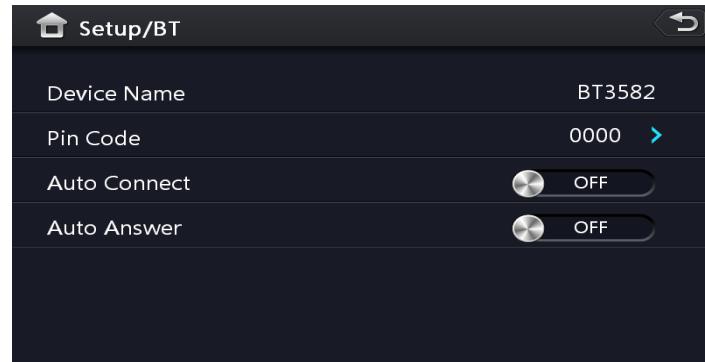

7-1、Device name

Display the current Bluetooth device name

7-2、Pin code

Displays the current Bluetooth pairing password.

Click the figure or arrow on the right side to enter the change password mode, Enter any 4 numbers to modify the connection password of your device.

7-3、Automatically connection

Click the switch icon on the right side to choose whether to automatically connect to the last connected device

7-4、Automatically Answer

Click the switch on the right side to select whether to automatically answer a Bluetooth calls

7-5Phone book



The system support bluetooth phone book.

8. Navigation options

8-1、Navigation audio gain

Slide the right slider to fine-tune the volume of the navigation voice.

8-2、Navigation background sound

In order to help you hear the navigation voice clearly, This equipment will reduce the the volume of the current music,Slide the right slider to set the music volume proportion of reduction.

8-3、Navigation listening

By clicking the switch on the right side to turn on/off the navigation listen.
Navigation listener is on, regardless of the screen display or not the navigation will play navigation voice automatically.
Navigation listener is turned off, only the screen display the navigation interface It will play navigation voice.

8-4、Boot automatically into the navigation mode

Click the right button to select whether to boot automatically into the navigation mode


8-5、Navigation path

The user can select the navigation program in the navigation SD card.

8-5-1、Navigation path selection

The system will automatically find all the exe files in the navigation card, You only need to click the correct navigation path,Then you can set the current path to the startup path.

9. Language settings

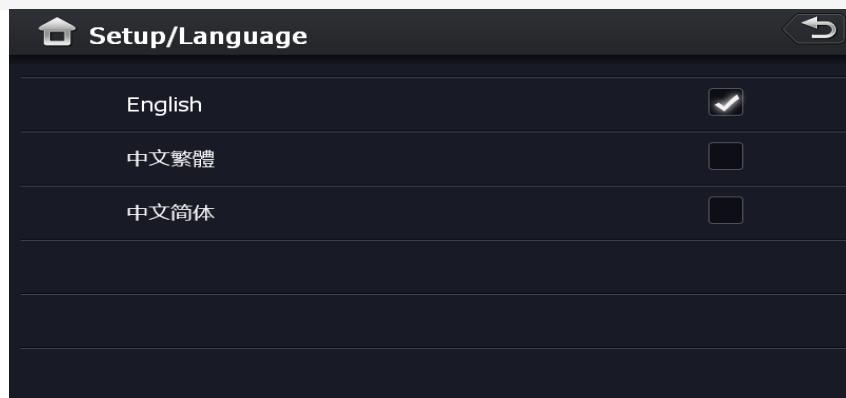

Sliding language options to find the desired language, Then click on the right side of the language option to complete the language settings.

10. Steering wheel learning



Follow these steps to set up your steering wheel audio buttons function.

- 1 Click "Clear all"
- 2 Click on the corresponding function button you want to set, the button will change to flashing
- 3 During the button flashes, press the button on the steering wheel you want to set this feature
- 4 When the BEEP sound from time to time means this button setting is OK, the button change to green
- 5 Repeat 2-4 step to complete all key learning

11. Date and time



In this interface you can drag through the roller to choose corresponding time ,year, month, day, and minutes,click the ok button to set the system time. You can also choose the GPS time as the system time.

Note: In order to help you to use, GPS time is correct to seconds. Suggest you choose GPS time to adjust the system time.

RADIO OPERATION

Enter & eject the Radio mode.

Press the Band key in the main board or touch the icon can enter the radio mode. see below picture, click to exit to the main interface.



Band selection

User can press or icon to choose different band.

Manual search band

Press / icon, The system will search band channel from low band to high band in the smallest unit step, Until find the radio you like. (note: If there is TUNER button, user can tune this button to find the radio.)

Automatic search & save

click the icon. The system will automatic search the radio from low band to the high band. In the process of radio search, press icon it will stop searching. When received an effective radio, the system will stop automatically search and play the radio program.

Automatic search&save.

Each band can store six radio channel. This system can store 24 (18 FM, 6 AM radio) channel.

Press the  icon shortly, the system will automatically preview the stored FM/AM band program in turn.

In preset corresponding AM band channel. Tune in next time, just click on the radio interface button (1-6) or number (1-6) in the remote control can access the corresponding radio, no need to search again. After setting automatically store the preset radio, It will cover the previous stored radio channel.

Manual store radio

select a band (if necessary) first.

According to above operation search a radio channel manually or automatically.

Long press the 1-6 store radio button, It will save the current radio in the Preset radio channel and cover the previously stored stations.

Stereo / mono switch

In city, the signal of the FM radio is strong, user can receive it as stereo. However in the remote area, the signal is unstable, you should switch to mono mode to improve signal reception. In the FM radio, click the  icon to turn on/off the stereo. (note: stereo closed means mono mode.)

Local/remote radio conversion

In the city, FM radio signal is strong, generally receiving locally, however if in the remote location the radio signal is unstable, it's should switch to remote mode to improve reception. This system can automatically switch to local/remote radio receiving mode according to the strength of current radio signal.

GPS NAVIGATION OPERATION

Enter the navigation mode

Users can insert the pre-installed navigation software card into the GPS navigation map card slot on the front panel of this machine.

Then press NAVI button on the panel or click  icon on the main interface (navigation) to enter the satellite navigation mode.

The specific operation of the navigation function, Please check the GPS navigation instructions.

Note:

- a. only install a GPS navigation module, this function is effective.
- b. this navigation system, satellite positioning and navigation functions into electronic map navigation software accomplished through SD card, map card, do not plug in use!

DVD PLAYER OPERATION

Enter / exit the media player mode

- 1) when power on, the user insert CD, U disk, SD Card in the system, click "DVD" button directly enter the media playback mode.
- 2) Press the SRC key to enter the main interface, then touch the disc play in the main interface, U-disk "or" SD Card "icon to enter the corresponding multimedia mode.
- 3) during the CD/MP3 disc, U disk, SD card playback, the screen will appear the media player control interface, as shown below, then Touch the bottom button at the media player control interface to achieve the corresponding functions (see below).
- 4) If you want to exit the multimedia mode, you can touch the upper left corner  icon to return to the main interface



Note

If you can't play a disk of a certin area,Please remove it and try to play another disc, some discs may not play.

enter/eject disc

Put a disc in the slot,The system will inhale the disc after detects a disc,after a few seconds, the system will automatically play the CD.

play/pause

Press to pause,press to recover normally play.

selection

press / to choose next or previously music.

fast forward, rewind functions with speed

In media play mode, Long press / icon at the bottom of media player control interface to fast forward/rewind at the 2x, 4x, 8x, 20 times speed. press to recover normally play. you also can click the progress bar to select the time progress.

Repeat Playback

You can choose whole disc repeat play, single repeat, and directory repeat playback by press button.This function have different mode according to different disc.

Random playback

Click the icon at media player control interface can realize random play mode. Turn off the random play mode, the audio / video files on the media will be play normally.

Zoom function

When play a video or image, It can zoom in/out the video/image .Press button or ZOOM key on the remote control can zoom in/out on the screen according to percentages. In the picture playback mode, press the icon at the bottom of media player control interface to rotate the picture.



playback by number selection

This feature can quickly select and play the chapter on the current disc or track (file). In the state of CD/MP3/VCD/DVD disc playback, press number keys (0-9) on the remote control to select the corresponding track, chapter or title. and then press the Enter key on the remote (ENTER) or wait a few seconds, the selected chapter or track will begin to play

Browse mode

Browse pictures can manually browse or slideshow. You also can press button to set slideshow speed.

Playback info

This function can show disc playback info.

time display

It can show the Elapsed playing time.

screen proportion key

Users can set the screen aspect ratio according to the type of connected monitor, Press **16:9** button to switch the output aspect ratio between 4:3 and 16:9. However, some discs, the picture may not be able to set to the following screen ratio size.

video (brightness / contrast) settings key

User can set the brightness/contrast during play video.

Audio settings button

User can set the audio during play video.

DATA DISC PLAYBACK OPERATION

when you Insert a data CD includes audio (MP3), video (MPEG4), pictures (JPEG) file format, You can see the media playing interface on the screen as below.



Click the  button in media interface, then you can choose audio files, imagine files or video file. users can choose a desired file or folder just by clicking or pressing their corresponding name directly.

U DISK PLAYBACK OPERATION

Enter/Eject U disk

Connect the u disk to the mini usb port through usb cable. When insert U disk, the system will detect automatically and then enter the U disk playing mode. If in other playing mode, please touch U disk in system interface or press the "Mode" button of remote control switch to U disk playing mode. when U disk is playing, please don't extract U disk directly, you should exit U disk playing mode firstly.

SD CARD PLAYBACK OPERATION

Connect the SD card to the sd card slot. When insert SD card, the system will detect automatically and then enter into SD card playing mode . If in other playing mode , please touch SD Card in system interface or press the "Mode" button of remote control switch to SD card playing mode. when SD card is playing, please don't extract SD card directly, you should exit SD card playing mode firstly.

AV IN PLAYBACK OPERATION

Connect an external audio / video system to AV input line of the machine.
Press  icon in the main page interface to switch to av in playback mode.

BLUETOOTH HANDS-FREE SYSTEM OPERATION

This car DVD player supports Bluetooth hands-free communication functions, Connecting a mobile phone with the system, the user can accomplish dial-up, answer, Bluetooth music player and other functions through the machine.

Enter/Eject bluetooth mode

Press SRC button on the machine to enter the main interface of the system.
And then touch  icon (Bluetooth hands-free) in the main interface to enter the Bluetooth mode.
Click  icon in the main interface to exit to the main interface.

Bluetooth pairing and connection

Open the Bluetooth feature and turn on the Bluetooth device search function, when systems and mobile phones to obtain a signal contact, the phone will display the name of the device, the phone will prompt password for connection, user input "0000" and confirm.
after pairing successful, there is a Bluetooth logo appears at the top of the interface, otherwise, the Bluetooth logo will disappear. Click "Connect" button at the bottom of the touch screen to enter the Bluetooth paired connection mode.



Pairing:


Enter pairing mode or exit the pairing mode: when mobile search device, click the "pairing" button to enter/exit the pairing between the system and the Bluetooth phone.

Disconnect: disconnect or connect the Bluetooth between the system and the mobile phone, click the "Disconnect" button can be disconnected. If you want to recover the Bluetooth connection, press the phone name just connecting with the system.

Delete: delete the Bluetooth device, click this button, Bluetooth devices can be cleared.

dial

After connection, users can dial phone directly, or touch screen number keys to enter the phone number. Or press  icon in Bluetooth interface to enter dial-up interface as shown below

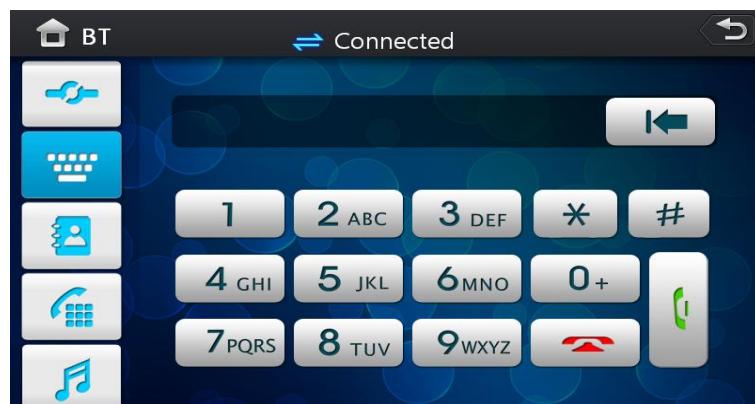

It will display the number you input. If the entered phone number is wrong, can touch the  icon to delete bit by bit.

Delete all entered characters by press the  icon.

Enter the phone number, touch the  icon to make a phone calls.


Answer / hang up / end call

When a phone call comes in, in any mode, the system will automatically switch to a Bluetooth hands-free interface, it will play a ringtones instead of original sound mode, and the screen will display the Caller number. Touch the  icon in touch screen to answer the incoming call; touch  icon in the touch-screen to hang up the phone. During a call, you can touch the  icon in the touch screen to terminate the call

Voice switch

During the call, touch the  icon in the screen enables call voice switch between car speakers and cell phone.

Bluetooth music play(A2DP)

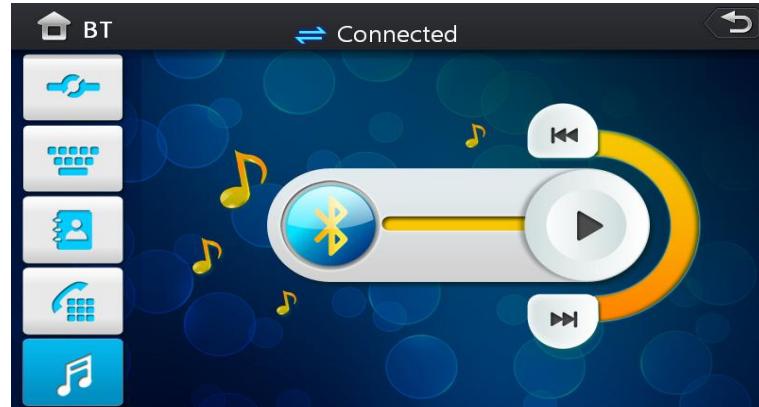

If the phone supports Bluetooth music playback, you can transmit the audio of the mobile phone to the car speaker system.

After pairing successful, open the stereo and music player in the phone and connect to the player.

Call Log

Touch icon in Bluetooth interface to enter the call log interface. The system can store the last six missed, received and dialed numbers. If the user wants to delete call log, then select the desired call number, Press the "delete" button on right side of the interface.

CLOCK INTERFACE



Click the clock icon on the main interface to enter the clock interface. There are many different styles of clock face, customers can choose what he want.

CALENDAR OPERATION




Click the "Calendar" in the main interface to enter the calendar settings interface. The user can individually adjust this display date (month, day) through click the button on both sides of date figures.

OTHER OPERATION



Click  in the main interface enter the calculator interface.

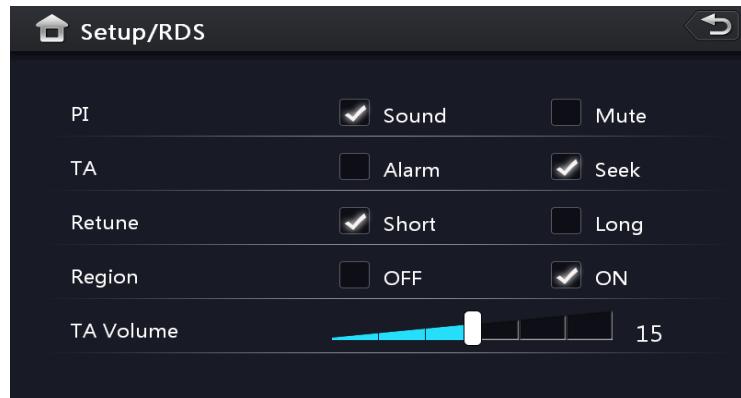

GAME INTERFACE OPERATION

There are many specialty games in system, It will enhance in-car entertainment.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.