



15 FOOT RC RANGE INDOOR/OUTDOOR EXPERIENCE LEVEL

## HOVERBOARD HEROES INSTRUCTION MANUAL



Odyssey  
\*toys\*

# Batteries and Chargers



## REMOTE BATTERIES

Use 2 x "AAA 1.5V" Batteries  
(not included)



## HOVERBOARD CHARGING

The charging port for the hoverboard is located on the back. To charge, connect the provided USB charging cable either to a USB port on a computer or to a 5V 1A Class 2 USB power adapter.

## BATTERY SAFETY

- The placement or replacement of batteries is to be performed by an adult.
- Batteries must be inserted with the correct polarity +/-.
- Non chargeable batteries shall not be recharged.
- Do not short-circuit the batteries.
- Do not mix batteries from different producers or new and old batteries.
- You should only use batteries of the same or equivalent types as recommended.
- Check the batteries on a regular basis to avoid leakage.
- If the product will be stored and unused for an extended period, please remove the replaceable/non-rechargeable batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-sinc), or rechargeable batteries.
- Never throw the batteries into fire to avoid explosion or leakage.
- Hoverboard has an internal rechargeable battery, use USB changing lead provided to recharge.

# Operating The Product



## REMOTE CONTROL

The hoverboard is operated via a remote control, allowing users to navigate it forwards, backwards, left, and right with ease.

## CHARACTER ATTACHMENT

The plastic characters effortlessly slide onto and off of the hoverboard, allowing for easy customization and interchangeability.

**Music Playback:** Each character is equipped with a built-in speaker that plays a unique tune while on. Each character has its own melody.

## MULTIPLAYER FUN

To connect multiple boards for multiplayer fun, simply turn on a hoverboard, and the corresponding RC to connect. Then follow that sequence for all other hoverboards after each hoverboard has connected to an RC.

## OPERATING CAUTIONS

- When the toy is in motion, do not touch the wheels by hand to avoid damages or injury.
- Do not play in a place with puddles, mud or sand.
- Do not play on the roads or in any other dangerous places to avoid accidents.

## FCC STATEMENT:

FCC ID : 2ANSF-HH

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

## **Please do not return this product to the store.**

For Customer Service please email: [Care@OdysseyToys.com](mailto:Care@OdysseyToys.com)

Please note the units model number and name in your email:

Model no. ODY-101HH• Mosh Pit Mustang

Model no. ODY-102HH• Hip Hop Hippo

Model no. ODY-103HH• Techno Tiger

[www.odysseytoys.com/support](http://www.odysseytoys.com/support)

1-(305)-933-4480

Hours of operation: 10:00am - 5:00pm EST

## **CAUTIONS AND WARNINGS**

- Suitable for ages 5+. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away when powered on.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.
- Keep this manual for future reference as it contains important information about this product.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

## **60 DAY LIMITED WARRANTY**

Odyssey Marketing / Odyssey Toys warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy.

ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number, you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

\*\* THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.\*\*

©2024 Odyssey Marketing LLC



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction