


SMART REMOTE

FOR GoPro

USER GUIDE

LAYOUT

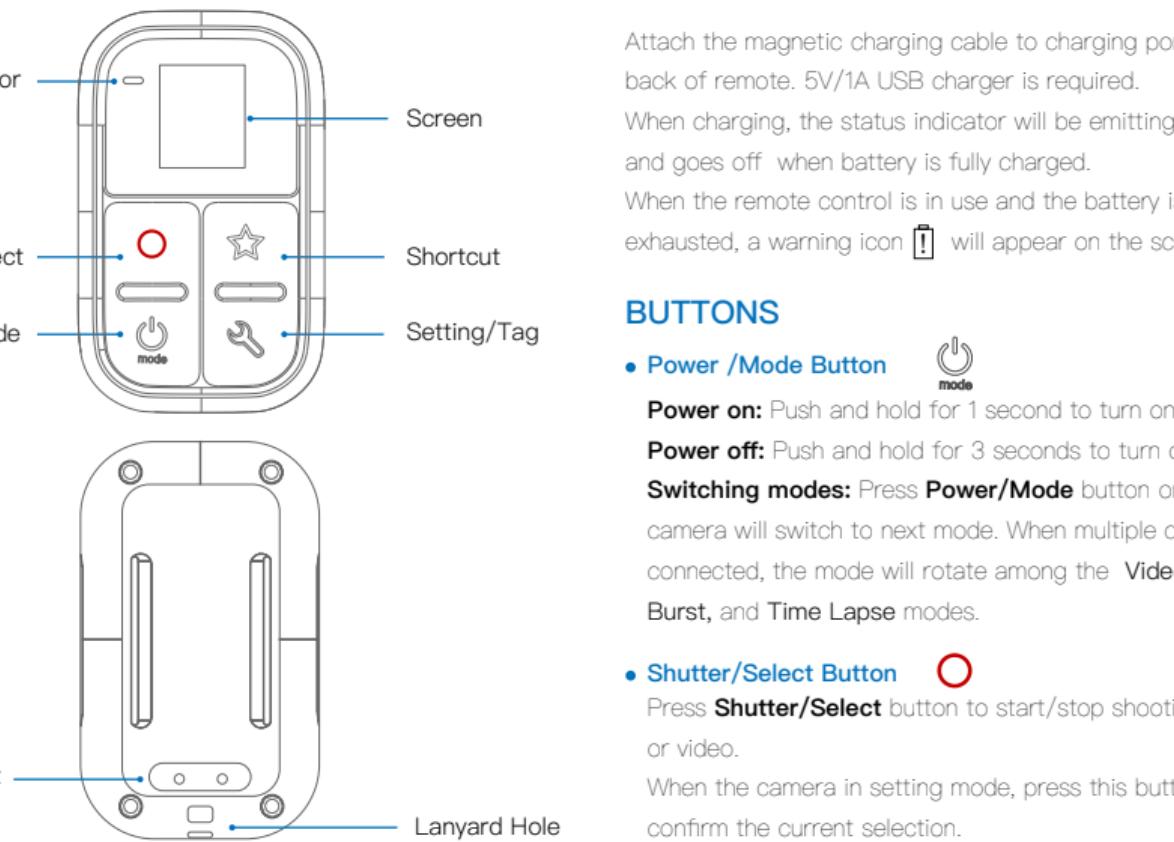

CHARGING

Attach the magnetic charging cable to charging port on the back of remote. 5V/1A USB charger is required.

When charging, the status indicator will be emitting red light, and goes off when battery is fully charged.

When the remote control is in use and the battery is almost exhausted, a warning icon will appear on the screen.

BUTTONS

• Power /Mode Button

Power on: Push and hold for 1 second to turn on

Power off: Push and hold for 3 seconds to turn off

Switching modes: Press **Power/Mode** button one time, the camera will switch to next mode. When multiple cameras are connected, the mode will rotate among the **Video**, **Photo**, **Burst**, and **Time Lapse** modes.

• Shutter>Select Button

Press **Shutter>Select** button to start/stop shooting a picture or video.

When the camera in setting mode, press this button to confirm the current selection.

PAIRING CAMERA

- Please power on the remote and camera.
- Press and hold **Setting/Tag** Button for 3 seconds to enter the pairing mode
- Set the camera to pair mode: **Connections>Connect Device>Smart Remote**

• Shortcut Button

Do the same operation to other cameras if you are going to pair multiple cameras.

- Wait for the pairing success notification on the screen, press the **Setting/Tag** Button to exit pairing mode and ready to go.
- If the pairing failed, select **Reset Connections** in camera's settings and do the above operation again.
- The paired camera and remote will connect automatically when they are powered on. Make sure the camera's **Wireless Connections** is turned on, they will connect promptly.

FIRMWARE UPDATE

- When new model camera come to market, there will be update accordingly. Please visit www.yoctop.com/remote to download firmware.
- Press and hold **Setting/Tag** Button for 3 seconds to enter the pairing mode.
- Connect the Wi-Fi hotspot **SSID: HERO-RC-XXXXXX** with your computer or smart phone.
- Open <http://10.71.79.1> in your web browser.
- Click **Update Firmware** to select the Firmware file.
- Click **Update** button and wait remote to finish update, you can check the remote screen for notification.

YOCOTP

More information:
www.yoctop.com
or send email to
customerservice@yoctop.com

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.