

KOLAV-F1201

DT Portable speaker with Microphone



MADE IN CHINA

INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- Place the unit on a stable surface, to prevent it from being fall down.
- The speaker should be connected to a power supply only of the type described in the operating instructions.
- The user should not attempt to repair the speaker. if you are not professional.
- Disconnect the power cable from the outlet & switch off before cleaning the unit. Only use soft cloth, no harsh abrasives or chemicals to clean, as it will damage the surface finishing.
- The power cable of the speaker should be unplugged from the outlet and Power switch should be off when left unused for a long period of time.

PACKAGING LIST

1. Speaker.....1pc
2. User Manual.....1pc
3. USB Charging Cable.1pc
4. REMOTE CONTROL.....1pc



1



2



 
 
3



4

-2-

-3-

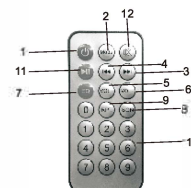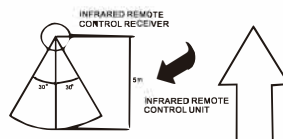

REMOTE CONTROL OPERATION:

If the remote control interferes with other electronic devices, the remote operation can be affected. Do not simultaneously press buttons on the unit and the remote control. Avoid using two remote controls at the same time as this will cause a malfunction. Use only "CR2025" size batteries. Do not mix old batteries with new ones. If the batteries leak, clean thoroughly before replacing with new ones. Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

Remote Control

1. POWER key: This button is used to power on/off the speaker.
2. MODE key: Use this button to toggle between radiomode/AUX mode/DT/USB/TF mode.
3. NEXT key: In Mp3 mode short press to play the next track; long press to fast forward. In radio mode , short press to save the channel, long press to search FM channels.
4. PREV key: In Mp3 mode, short press to play the previous track and long press to advance backwards.
5. VOL- key: This button is to reduce the volume.
6. VOL+ key: This button is to increase the volume.
7. EQ key: Helps you to choose between Jazz, Rock, Bass, Normal an Class mode.
8. SCN key: This button is to choose between USB or TF(SD) card.
9. Repeat key: Press "repeat" once to repeat the song and twice to repeat the entered playlist.
10. "0-9" numbers:
 - In radio mode, it refers to FM channel number. (only automatic preset)
 - In Mp3 mode, it refers to the track number. (only automatic track songs)
 - NOTE: cannot manually preset stations or set track numbers. Only Automatically preset.
11. Play/pause Key : In USB/TF (Micro SD) /DT mode this button has the play/pause function; In FM mode: the speaker will start scanning the store automatically found radio stations
12. MUTE key : mutes the sound, press again to restore the sound

True Wireless Stereo(TWS) Function

TWS allows you to connect 2 speakers Via DT with TWS technology so they can play at the same time and you can double your audio output.

Long press(3 seconds) "TWS" key in DT MODE then turn on TWS function, Long press again (3 seconds) "TWS" key to turn off TWS function

Specification

Outer put:10W
Frequency:2402-2480M
Driveunit: 12"
S/N: ≥70db
Power supply: ~5V-USB 3.5 ster head. TF FM
Lithium battery 2400 mAh

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

 
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

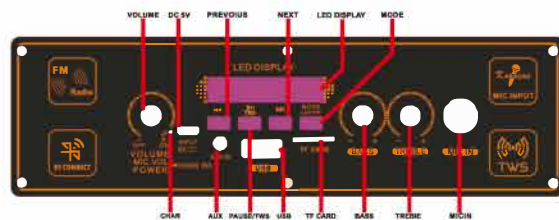

-4-

5

-6-