



NOTE: Battery: 2 x AAA 1.5V not included
 Battery installation
 Place two AAA batteries inside the remote control according to the diagram on the right side

Connection Guide

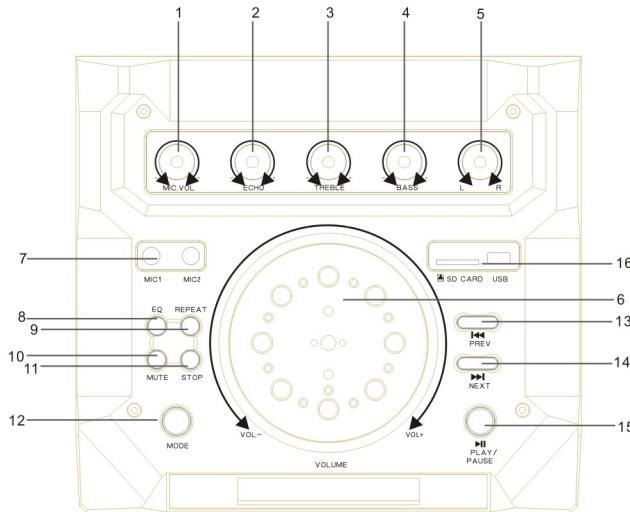

1. MIC VOL knob: this knob can be use to regulate the microphone volume level.
2. ECHO knob: this knob can be use to regulate the microphone echo level.
3. TREBLE knob: this knob can be use to regulate the treble volume level.
4. BASS knob: this knob can be use to regulate the bass volume level.
5. L/R knob: when turn to L or R position, it can help switch woofer above or below working; when turn to middle position, both woofers work together
6. VOLUME knob: this knob can be use to regulate the volume level.
7. MIC1/MIC2: microphone input sockets
8. EQ: helps you to choose between Jazz, Rock, Bass, Normal an Class mode.
9. REPEAT: Press once to repeat the song and twice to repeat the entered playlist.
10. MUTE: MUTE mode.
11. STOP: press to stop
12. MODE: Use this button to toggle between radio mode/AUX mode/BT /USB/TF mode
13. : This button permits you to move backwards in the playlist or to reduce the volume by keeping this button pressed for a few seconds.
14. : This button permits you to move forward in the playlist or to increase the volume with a long press.
15. PLAY/PAUSE: Use this button to start/stop reproduction.
16. SD/USB sockets

1. LED POWER switch: turn on/off light
2. AUDIO INPUT: DVD/VCD/CD/TAPE/MP3 player etc. 2.0CH audio signal input socket
3. FM antenna
4. POWER switch: turn on/off speaker
5. AC plug socket

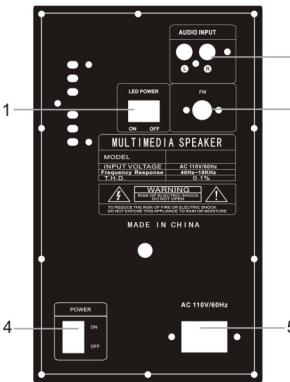

HOW TO USE

1. Switch ON/OFF button to ON position.
2. Press MODE button to select FM radio/AUX/Blueconnect.
3. In radio mode press PLAY button . The speaker will start scan and automatic storage of radio channels. After all station are searched, the radio will play the first preset channel. For optimum reception it is advisable to pull out the external antenna. Press NEXT button to listen to the next channel.
4. Press MODE button and it will enter AUX mode. Use the audio cable (included) to connect the speaker to reproduce music from other devices.
5. Press Mode button change to Bluetooth mode on your device, turn on bluetooth and scan for devices. When "BT name" appears on device list, select and should pair successful. The speaker is ready to play music.
6. Press "Mode" on remote or "MODE" on control panel to switch to Micro SD card Mode or just insert a Micro SD card. SD mode will start automatically. Press "PLAY/PAUSE" to continue play/pause music. Press "NEXT" button to goto next song. Press "PREVIOUS" to go back to previous song. Press "REPEAT" to replay same song.
7. Insert the microphone output terminal into the MIC INPUT port of the machine. "MIC VOL" is the microphone volume control knob, and "ECHO" is the echo control knob. Please adjust the two knobs patiently to achieve the best singing effect.

TROUBLE SHOOTING

If you experience difficulties in the use of this music system, please check the following or call for Customer Service

Fault	Possible Cause	Solution
No sound	1. No input sound source 2. Volume is too low	1. Use a better music signal 2. Turn up the volume
Distortion of sound	1. Volume is too high 2. Speaker might be damaged	1. Turn down the volume 2. If speaker is damaged, repair or replace it
Karaoke does not work	1. Microphone plug is not fully inserted 2. Microphone switch is not on 3. Microphone volume is too low	1. Plug in the microphone properly to the Mic input socket 2. Switch on the microphone 3. Turn up the microphone volume
Mp3 does not work	1. The song format in the USB stick or Micro SD card is incorrect 2. Improper operation has caused a process disorder 3. USB stick/Micro SD card is disconnected	1. Change song format into Mp3 2. Reboot the speaker 3. Insert USB stick Micro SD card properly

SAFETY INSTRUCTIONS

- 1.The speaker should be situated away from heat sources such as radiators and not exposed to moisture or water.
- 2.Place the unit on a stable surface in order to avoid accidents and breakage.
- 3.The speaker should be connected to a power supply only of the type described in the instruction manual.
- 4.Do not dismount or open the unit.
- 5.Disconnect the power cable from the outlet & switch off before cleaning the unit. Only use a soft cloth and avoid harsh abrasives or chemicals to clean it.
- 6.Disconnect the unit if you it will be used for a long period of time.

FCC STATEMENT :

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

AiLiang®

MODEL:UF-1052-DT

USER MANUAL


Getting Started

Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Includes:

Speaker
Remote control
Power cable
Audio cable
Instruction manual

Remote Control Guide

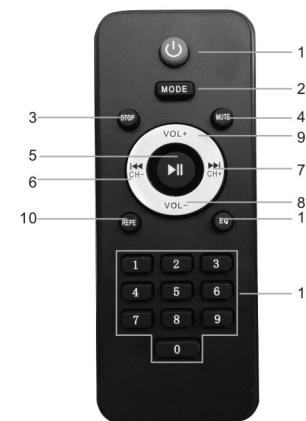

1. @ :power on/off
2. MODE key: Use this button to toggle between radio mode/AUX mode/BT/USB/SD mode
3. STOP: press to stop
4. MUTE: MUTE mode.
5. ► key: press to stop; long press to search FM channels.
6. ▲: In Mp3 mode short press to play the next track
7. ▼: In Mp3 mode, short press to play the previous track
8. VOL- key: This button is to reduce the volume.
9. VOL+ key: this button is to increase the volume.
10. REPE: Press once to repeat the song and twice to repeat the entered playlist.
11. EQ helps you to choose between Jazz, Rock, Bass, Normal and Class mode.
12. "0-9" numbers:
In radio mode, it refers to FM channel number.
In Mp3 mode, it refers to the track number.