

WHAT'S IN THE BOX?

1 x Receiver 1 x Microphone
1 x User manual

Contact Us

Get Social:  [Facebook page](http://bit.ly/FifinePage)

Contact Info:  Tech support:web@fifine.cc

Email: service@fifinemic.com

Company Website:<https://fifinemic.com>

Operation video:<http://bit.ly/fifinemic025>

WARRANTY

2-year extended warranty with online registration

1. Input the link : <https://fifinemic.com/>

2. Please roll down to the bottom of the page, fill in E-mail address and submit it .

Get promo info & two-year warranty for product you bought.

Your email address

SUBMIT

3. Check you spam box to confirm subscription.

1

4. After click the button "Manage your preferences", you will come to the next page "update preferences". The specific microphone promotion information that you need would be forward according your submission. Meanwhile 2-year warranty series code is sent as well.


PRODUCT DISPLAY

1. Microphone



- ① LED Screen
- ② On-off button
- ③ Battery Compartment
- ④ Channel Button

2. Receiver

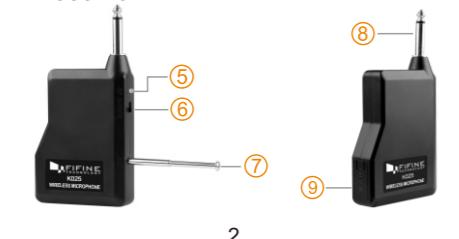

2

⑤ Signal Indicator(The indicator is green when paring with transmitter. It turns RED when paired successfully)

⑥ On-off Button


⑦ Antenna (Pull it out to extend the range of signal transmission and get better connection with transmitter.)

⑧ Quarter Inch Jack-plug(6.35mm)

⑨ Battery Compartment

QUICK START

1. Install the AA and AAA battery correctly.

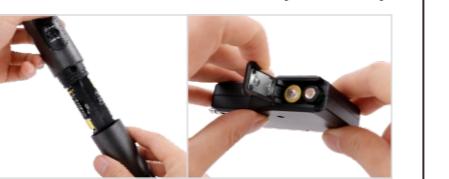

2. Plug the receiver which's in off state into the speakers, mixers, wireless mic systems that is compatible with 1/4" (6.35mm) microphone input.

3



3. Turn the microphone and receiver on. When the light on receiver turn from green to RED, they successfully paired. The light stay on RED when it is functioning.



4. Extend the antenna of receiver to increase the transmission distance if you need.

BATTERY INSTALLATION GUIDE

1. Install the 2AA batteries to microphone. (Insert batteries confirming to "+" and "-")

4



2. 2 x AAA batteries for receiver battery compartment.



WARNING OF LOW BATTERY POWER

1. Please change microphone battery when the led screen flashes.



2. The battery of receiver need to be changed when the indicator blink green.



3. To save power, please turn off the microphone and the receiver after use. Remove the batteries if you don't use the them very often.

5

TROUBLESHOOTING

PROBLEM	INDICATOR STATUS	SOLUTION
No sound	The screen is not bright.	Make sure battery is inserted properly. Observing battery("+-").If battery is inserted properly,replace with fresh battery.
No sound	The receiver indicator blink green	Make sure battery is inserted properly. Observing battery("+-").If battery is inserted properly,replace with fresh AAA battery.
No sound	Receiver signal Indicators red lights glowing	Turn up speaker volume. Confirm that the output connections from the receiver to the external equipment are secure.
No sound	Receiver signal Indicator green light glowing. The microphone screen is glowing	Confirm transmitter's and receiver's frequencies match. Move transmitter closer to receiver
Distortion level increases gradually	Receiver Signal Indicators lights glowing red But the microphone screen flashing	Replace microphone battery
Bursts of noise or other audible radio signals present.	Signal Indicators red lights on	Identify potential sources of interference and turn off, remove or use a wireless system operating on a different frequency.
Momentary loss of sound as transmitter is moved around performing area.	Receiver signal indicators lights on green when sound is lost	Reposition receiver and perform walk-through test again. If audio dropouts persist.mark"dead" spots and avoid them during performance.

6

7

MULTIPLE MICROPHONES USED SIMULTANEOUSLY

When multiple microphones used simultaneously or if there is any interference in your location, please try other available channels by the below procedure:

1. Both mic and receiver are on.
2. Unscrew the mic's battery cover, One click on its channel button and the led screen flash once, but the figures on led display will not be changed.


3. The light on the receiver flash from green to RED at the same time.
4. The indicator light stay on red when paired successfully.



WIRELESS FREQUENCY AND CHANNEL GUIDE

The are 20 frequency of K025-TX for your choice ,you can one click channel button to change. But the alteration would not display on the led screen.

565.000 566.000 567.000 568.000
569.000 570.000 571.000 572.000
573.000 574.000 575.000 576.000
577.000 578.000 579.000 580.000
581.000 582.000 583.000 584.000

RESET MODE

Before enter reset mode,please make sure you've done all the below steps:

1. You have changed with new batteries and you still suffer from interference and disconnection.


3. In reset mode,The Led screen is flashing but the figures on Led display will not be changed.

9

2. You have change the frequency by one click the channel button on the top of receiver, and they doesn't pair with the each other successfully whatsoever.

3. If you have multiple K025-TX and both of microphone set doesn't work.

Please enter the reset mode with caution, follow steps as following:

1. Both microphone and receiver should be off in the first place

2. Turn the microphone on,unscrew the microphone battery cover, hold down the channel button for three seconds until the led flashing. Now you are in reset mode.


3. In reset mode,The Led screen is flashing but the figures on Led display will not be changed.

10



3. Turn the receiver on while the screen is flashing . The receiver indicator will flash green and red alternately and then turn green again.



3. Click microphone's channel to confirm when receiver is on green light. The microphone's screen stop flashing. The indicator of receiver turn green to red and stay red when successfully paired.



11

FCC Warning

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

The device complies with RF specifications when the device used at 0mm from your body.



IMPORTANT NOTICE

1. Signal can be blocked by body.If there are many people in the event,you'd better position your speaker at 1m high from the ground to have better reception of the mic.
2. Do not hold the bottom of the mic where the antenna is positioned, otherwise the signal will be interfered.
3. Do not point the mic at the speakers, otherwise it will cause feedback noise.
4. Take out the batteries from the mic and receiver after use.
5. When use the mic outdoors, we suggest to keep out from the rain and keep it dry.
6. Not compatible with phones, computers, cameras, tablets, Apple products and all the line in /aux in jacks.



USER'S GUIDE

Wireless microphone transmitter

K025-TX



Version:04-14-2018