
A839使用说明书

A839 USER MANUAL

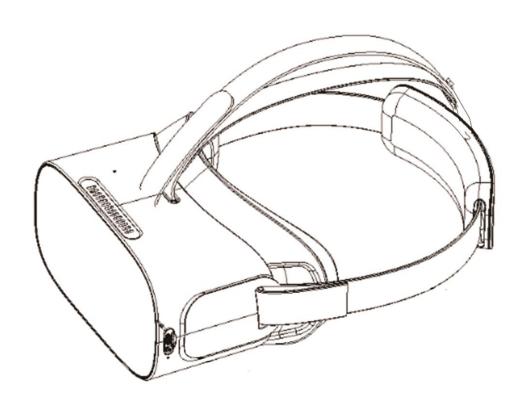

EmdoorVR

User manual

Dear Customers

Thank you for choosing and using EmdoorVR products.

For better usage, please read the manual carefully, and follow the operation steps. If you have any questions, please contact us in reference to the phone number and address listed in the warranty card, we'll be at your service.

EmdoorVR—sincerity always for you!

Directory


| 1, | NOTICE: | 4 |
|----|--|------------|
| 2、 | OPERATION GUIDELINE | 4 |
| | 2.1 Function keys instruction | |
| | 2.2 HOME PAGE | 8 |
| | 2.3 SETTINGS | 9 |
| | 2.3.1 Wireless network | 9 |
| | 2.3.2 Bluetooth | 10 |
| | 2.3.3 General | 10 |
| | 2.3.4 System | 11 |
| | 2.4Media player | 11 |
| | 2.4.1 Media player palyback | 11 |
| | 2.4.2 File management video play | 12 |
| | 2.5APPLICATION STORE | 13 |
| | 2.6ALL APPLICATIONS | 13 |
| 3、 | CAUTIONS | 14 |
| 4、 | FAQ AND SOLUTIONS | 14 |
| 5、 | DECLARATION OF HAZARDOUS SUBSTANCES IN ELECTRONIC IS | NFORMATION |
| PR | RODUCTS | 15 |


1. Notice:


- A. Please do not use the all-in-one machine where wireless devices are prohibited.
- B. Please use original accessories applied. (ie.: power adapter)
- C. Please keep the machine dry
- D. If you encounter software problems such as machine jam, press and hold the power button for 10 seconds to restart
- E. When charging, the yellow light bar on the shell lights up, and when the battery is fully charged, the green light is on;
- F. For better charging efficiency, please keep the machine in sleep/shutdown mode while charging.
- G. When the battery status is lower than 5%, please charge up the machine in time. If the battery is used up completely, please better turn the machine on after it has been charged for 10 minutes.
- H. Use the USB cable to connect the device to your computer, then search for the storage disk for data transfer.
- I. Insert the TF card into the slot, insert the metal interface face down ,and then the device will identify the TF card.
- J. Default speaker can work during audio output, Insert 3.5mm standard headphone connector into the target interface for audio output, and the volume can be adjusted adaptively.
- K. Do not use the device under the sunshine, to prevent screen damaged from lens amplification. Notice Emdoor not responsible for the defective caused by this reason.

2. Operation guideline

2.1 Function keys instruction

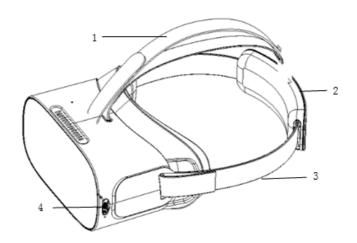

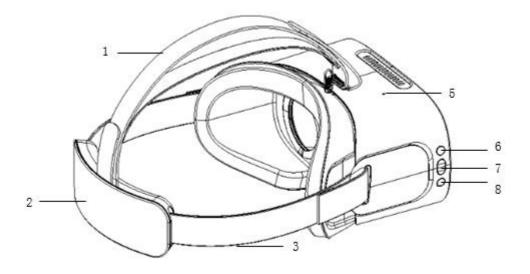

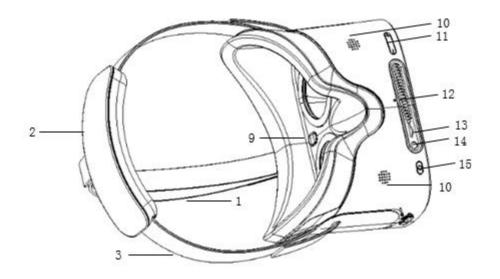


- 1. Battery and host cable
- 2. Battery (Non-removable)
- 3. Side belt
- 4. Charging and data transmission port
- 5. Microphone
- 6. Menu (N) button
- 7. OK button
- 8. Back Button


- 9. Proximity sensor
- 10. Horn hole
- 11. Volume button
- 12. Microphone
- 13. Memory card slot
- 14. Headphone plug
- 15. Power button

2.2 Steps for usage:


1. Take out the machine

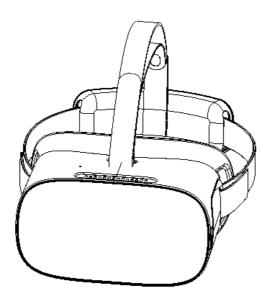

2. Long press the power button

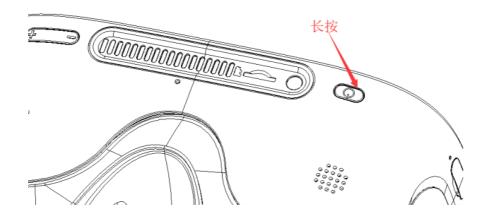


3. Adjust the tightness of the strap

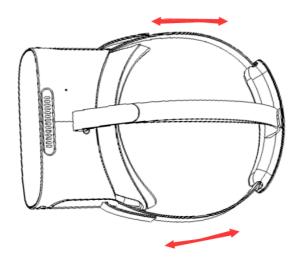

4.Bend the back ropeupwards , at the same time put on the machine and adjust the rear support to the proper position.



5. After adjusting to the proper position, alignment of the angle of view to the all-in-one device, and the picture is clearly displayed.

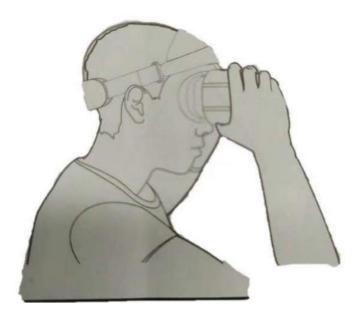


2.2 Home page



The home page includes local players, photo albums, games, browsers, online cinema, panoramic OL, panoramic roaming, VR live broadcast, file management, Settings, and can also check the status of power, time, access device and wireless network.

2.3 Setting

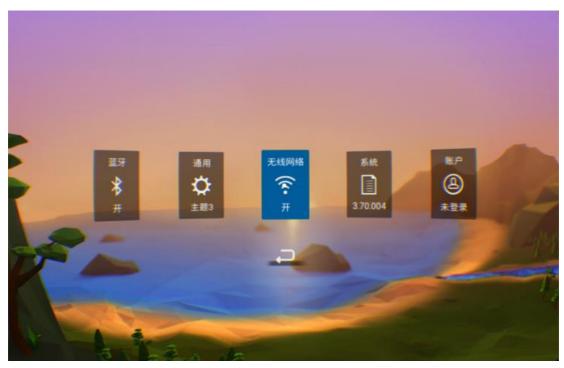

Setting options include Wi-Fi, Bluetooth, General, System and account.

2.3.1 Wireless network



Scan the available wireless network and enter the corresponding wireless network password to connect .Select the corresponding wireless network can delete the password for connecting and connecting to the network.

2.3.2 Bluetooth



When the Bluetooth is turned on, then it will automatically search for devices and come up a list of devices which can be connected. Users can choose to connect as needed.

Notice: When the paired devices cannot be connected, cancel it and try again.

2.3.3 General

The general settings allow you to adjust the screen brightness, volume level, select language, select a theme, sleep time, and change the time zone.



第 10 页 共 17 页

2.3.4 System

With the system option, you can update the system, restore the factory settings, and update the device with the following three methods:

- a. Online update, if there is a new version available online, then it can be downloaded and updated directly.
- b. Transfer the downloaded software into local file, and then update it manually.

About devices: User can check the system version, machine hardware/software parameters.



2.4 Media player

2.4.1 Media player playback



Player includes Media player and file management video play

Select the video: Using paired remote control or buttons to select the video that you want to play

Play video: After the video is selected, press the OK button to play

Pause video: Press the OK button to pause when the video is playing

Volume adjustment: Press up/down button to adjust the volume

Fast forward/fast backward: Move the cursor, and then press OK button

Exit play mode: Press the Back button

Remarks: If the dual screen mode appeared when the video starts to play, please exit the play

mode and start again.

2.4.2 File management video play



Player includes Media player and File management video player.

Select the video: Using paired remote control or buttons to select the video that you want to play;

Play video: After the video is selected, press the OK button to play;

Pause video: Press the OK button to pause when the video is playing;


Volume adjustment: Press up/down button to adjust the volume;

Fast forward/fast backward: Move the cursor, and then press OK button;

Exit play mode: Press the Back button;


Remarks: If the dual screen mode appeared when the video starts to play, please exit the play mode and start again.

2.5 Application store

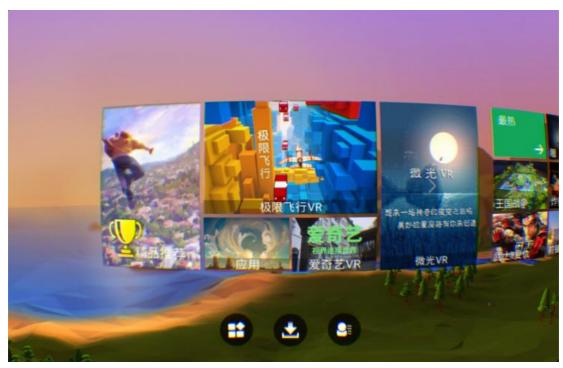

Select the Application store from the Application menu,user can download and install games and normal app from app market via Wi-Fi.

2.6 All applications

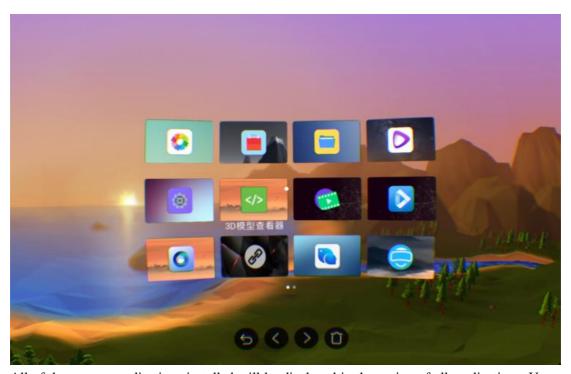

All of the games, applications installed will be displayed in the option of all applications. Users can manage these installed applications. Click on the icon of delete down on the right, and then the selected application can be uninstalled.

3. Cautions

- 1. The younger than 16 years old should use it with caution;
- 2. It is recommended that people with abnormal physical condition (including but not limited to pregnant women, the elderly, binocular vision abnormalities, mental patients, and poor heart condition) do not use this device;
- 3. If you feel any physical discomfort during use, stop using it immediately;
- 4. Do not use the all-in-one PC when charging;
- 5. The equipment shall not be exposed to such conditions as sunshine, fire or similar overheating.
- 6. When wearing the all-in-one PC, please ensure the safety of the surrounding environment (recommended indoors) in order to avoid bumping into injuries;
- 7. It is recommended to take a proper rest every 30 minutes to reduce visual fatigue;
- 8. It is recommended to use or place the integrated machine in an environment with a temperature between 5 °C and 45 °C and a humidity less than or equal to 93%;
- 9. It is forbidden to direct sunlight and other high-intensity light directly into the lens of the machine, otherwise there is a safety risk such as fire;
- 10. The battery or battery pack must not be used in an overheated environment;
- 11. Do not pull or cut the connection line between the battery and the main unit;
- 12. Please use original accessories, such as chargers;

4, FAQ and solutions:

- 1) The device cannot be powered on: Check if you press and hold the power button for more than 3 seconds, and check if the battery is exhausted, please charge it in time;
- 2) The splash screen happens once the application is entered: back to the previous directory and try again.
- 3) Three patterns are available in VR video: 2D、3D、pano360, you can click the menu option down on the right and then switch the patterns.

Packing List

| No. | Name | Quantity |
|-----|---------------|----------|
| 1 | VR All-in-one | 1 |
| 2 | Power adaptor | 1 |
| 3 | Type cable | 1 |
| 4 | User manual | 1 |

Warranty Card Notifications:

- 1. Welcome and thank you for choosing Emdoor VR All-in-one, If the product is faulty or damaged due to quality problems, please send it back to the specified maintenance office or the sales agency in time. In 7 days from the date of purchase, the device can be returned, in 15 days, the device can be exchanged for a new one and the warranty will be limited within 1 year.
- 2. Improper use or disassembling which cause malfunction are not included in free maintenance.
- 3. Please save the warranty card properly and apply for maintenance with it, and do not alter the terms state.

| Customer name | |
|----------------------|--|
| Contact | |
| Address | |
| Product model | |
| Purchase date | |
| Invoice number | |
| Sales agency name | |
| Sales agency address | |
| Zip code | |

5. Declaration of hazardous substances in electronic information products

| | Toxic and harmful substances or elements | | | | | |
|-----------|--|---------|---------|-------------|----------------|-----------------|
| | | | | | | Polybrominated |
| Part name | Plumbum | Mercury | Cadmium | Chromium | Polybrominated | Diphenyl Ethers |
| | (Pb) | (Hg) | (Cd) | VI (Cr(VI)) | Biphenyls | (PBDE) |
| | | | | | (PBB) | |
| Shell | 0 | 0 | 0 | 0 | 0 | 0 |
| | | | | | | |
| PCBA | * | 0 | 0 | 0 | 0 | 0 |
| Accessory | 0 | 0 | 0 | 0 | 0 | 0 |
| Battery | × | 0 | 0 | 0 | 0 | 0 |

- O :Indicates that the content of toxic and hazardous substances in all homogeneous materials of this part is below the limit requirement specified in SJ/T11363-2006
- Indicates that the content of toxic and hazardous substances in at least one of the homogeneous materials of the part exceeds the limit requirement of SJ/T11363-2006, but the item is only used in small quantities in stock or processed products, and is proceeding as planned Environmental protection switching, will meet the above requirements after switching.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5cm between the radiator and your body.

Caution:

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.