

2.4" LCD Color Video Monitor

User Guide



- Please read the following instructions and safety warnings before you install the Video Monitor.
- Please retain these instructions for future reference
- Tool needed: Screwdriver (not included) for mounting the camera on the wall if needed
- Additional camera(s) (sold separately).

3. Getting Started-

Camera

- Connect Camera to AC outlet
- Camera works automatically.
- Disconnect the power from the camera, camera automatically switch off.

Put the camera on a flat area or hang it on the wall, see the Demo.

Camera paired (Default)

The baby monitor is already paired as default, you do not need to pair the camera and the monitor unless you reset your camera. For pairing each other please long press the button on the Monitor, or take a reference from UI definition, Camera page.

Power Indicator

Working- Green Light on;
Pairing- Green light flash .

Important Safety Warnings

⚠️ WARNING!

Strangulation Hazard - Children have STRANGLED in cords.
Keep this cord out of the reach of children
(more than 3 feet (0.9 m) away).

To prevent cord entanglement and strangulations:

- Do not place the Camera or AC adaptor cord within reach of children.
- Do not place the Camera or AC adaptor cord in, or attach it to, a crib or playpen.
- Always fasten the AC adaptor cord of the Camera on the wall with the security clips provided.
- Never use extension cords with AC adaptors. Use only AC adaptors.

Important Safety Instructions:

- Adult assembly is required. Keep small parts away from child's reach.
- This product is not a toy. Do not allow children to play with it.
- This Video Monitor is not a substitute for responsible adult supervision.
- Test the Video Monitor and all its functions so that you are familiar with it prior to actual use.
- When the power adaptor is plugged into an electrical outlet, do not touch the exposed end.

Caution - risk of heat generation, fire or explosion.

- Li-ion battery is built into the product.
- Charge the product by the designated charging method.
- Do not place the product in or near fire, or put the product in a microwave.
- Do not expose the product to high temperatures above 140 F.
- Do not disassemble the product.
- Do not expose the product to excessive shock such as dropping from a high place.
- Keep the product dry.

Dispose of the product appropriately.

1. Using your Video Monitor-

Auto View Orientation – Portrait to Landscape

Your Video Monitor is able to switch from Portrait to Landscape view, simply place the Monitor in the upright position for Portrait View and lay it on its side for Landscape View. Note: There is a one second delay when switching views, this is a normal function.

Night Vision Mode

The Camera features 6 Infrared LEDs around the lens designed to capture clear images in dark environments or at night. When the Light Sensor detects low light levels, the Night Vision Mode will automatically activate and the video shown in the Monitor will display in black and white.

Charging the Battery

Your Video Monitor has an internal, replaceable, 2300mah lithium-ion rechargeable battery. Charge the battery by connecting the Monitor to a power outlet using the power cord provided.

Video ON/OFF

This feature allows you to turn the video screen OFF while maintaining the audio monitor ON. Simply press the Video ON/OFF key to turn the video screen ON or OFF.

IMPORTANT:

When the Monitor is on power save mode, the Video Screen will automatically turn OFF after 30s, 60s, 90s depends on VOX setup.
This sleep mode helps conserve battery power. To turn video back ON, simply press the Video ON/OFF button.

2. Package included-



1 X camera



1 X monitor with 2300mAh rechargeable Li-battery



2 X switch power adaptors



1 X user manual


02

03


04

3. Getting Started-

Camera

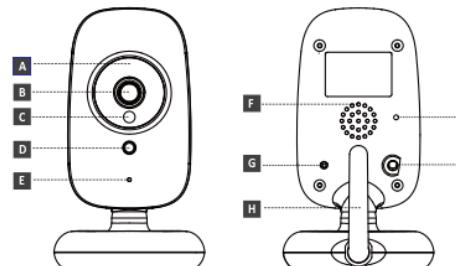

A Infrared LED lights
B Camera Lens
C Light sensor
D Power Indicator
E Microphone
F Speaker
G Temperature sensor
H Antenna
I Pair/Reset
J AC Adapter Jack
K Wall Mount

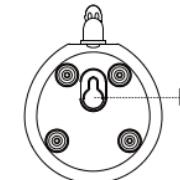

Monitor



- Connect Monitor to AC outlet.
- Long press the 'Return/Power' key , the monitor turns to start to work.
- The Monitor and Camera are turned on, video captured by the Baby unit will appear on the video screen.
- While Pressing 'OK/Talk' key to have talk back to the camera, release 'OK/Talk' key to hear the baby voice.
- Power Indicator:**
Charging - Red light on;
Full- Green light on;
Battery short capacity- Red light slow flash
- Signal Indicator:**
Working- Green Light on;
Out of range - Red light on;
Pairing- Green light flash .


05

06

07

08

Monitor

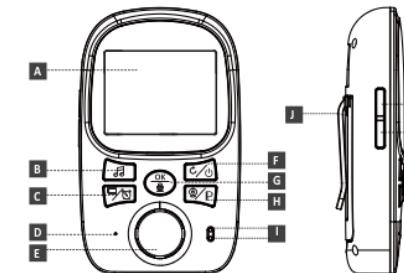

A 2.4 Inch Full view LCD display
B Lullaby on/off
C LCD/Alarm key
D Microphone
E Speaker
F Return/Power key
G OK/Talk key
H Camera/Pair key
I Power Indicator
Signal Indicator
J Belt Clip
K Volume Up
L Volume Down
M AC Adapter Jack



4. Menu Options-

1. Monitor showing opening image.
2. If the monitor does not pair, the monitor will enter into Pairing mode
3.  Lullaby
When playing Lullaby, press '+' or '-' to adjust Lullaby Volume.
4.  LCD / Alarm
Short press for opening LCD (LCD on/off)
Press it 4 seconds enter into Alarm setting
5.  OK / Talk back
In menu operation, short press refers to confirm options
In video mode Hold on OK button refers to talk back
6.  Return / Power
In menu operation, Return icon refers to Return
Press it 4 seconds to turn on/off
7.  Camera / Pair
In video mode, short press refers to camera switch
Long press refers to pair.

Memo: Multi camera pairing must go to the Setting mode;
short way pairing does not work for 2nd camera pairing.

09

 Brightness	Press 'UP/Down' to adjust the brightness, press 'OK' button to confirm and get into last MENU Press 'RETURN' button back to Last Menu without changes
 Vox	Four Options: 30S.60S.90S.NEVER Press 'UP/Down' to choose the options, press 'OK' button to confirm and get into last MENU Press 'RETURN' button back to Last Menu without changes.
 Alarm	Four Alarm Options Press 'UP/Down' to adjust alarm Hour/Minute, press 'OK' button to shift to Hour/Minute, Press 'RETURN' button get into last MENU. When choose 'XX: XX', Press 'OK' button, Alarm shut off, and return to last Menu No matter Hour or Minute is in 'XX', the other jumps into 'XX' status
 Zoom	Press 'UP/Down' to adjust, press 'OK' to confirm and back to Video Press 'RETURN' button back to last Menu without any changes
 Camera	In camera mode, press 'UP/Down' choose the needed camera (4), press 'OK' to confirm to next Sub-menu In camera Sub-menu, press 'OK' to pair; after pairing showing video or pairing fail. Press 'RETURN' button back to last Menu without any changes
 Setting	 TEMP Press 'UP/Down' to choose Temperature unit, press 'OK' to confirm and back to last Menu Press 'RETURN' button back to last Menu without any changes
	 Time Press 'UP/Down' to setup H/M, Press 'OK' to shift 'H/M', Press 'RETURN' button to confirm and back to last Menu.
	 Date Press 'UP/Down' to setup Y/M/D, Press 'OK' to shift 'Y/M/D', Press 'RETURN' button to confirm and back to last Menu.
 Lullaby	1,2,3 Loop Option. Press 'UP/Down' to choose, press 'OK' to confirm and back to last Menu Press 'RETURN' button back to last Menu without any changes.

11

6. FCC and IC Regulations-

FCC Notices

Note: This equipment has been tested and found to comply with the rules for white space devices, pursuant to part 15 of the FCC rules. These rules are designed to provide reasonable protection against harmful interference. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer, dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

13

14

5. Troubleshooting-

No video display on screen

- Are the Monitor and Camera plugged in to a working electrical outlet?
 - Make certain any light switches that control power to the wall outlet are ON.
 - Check for pinched power cords.
- Are the Monitor and Camera turned ON?
 - To turn Monitor ON.
 - To connect the camera into the wall plug
- Is the Monitor in sleep mode?
 - Press the Video ON/OFF key to turn the display ON.

Monitor lost signal, "Out of Range"

- If there is no connection, the words "Out of Range" will be shown on the video display.
- Make certain that the Camera is turned ON, the green LED Power On indicator should be lit.
- The Monitor may be too far away from the Camera, bring the Monitor closer to the Camera.
- The Camera could have lost its connection to the Monitor. Pair the units by following the "Pair" a Camera instructions.

12

7. Cleaning and Care-

To clean your Video Monitor, disconnect all cables and turn OFF. Use a soft, lint-free cloth. Avoid getting moisture in openings. Maintain your Video Monitor away from direct sunlight, hot or humid areas. Do not let product get wet.

15

16