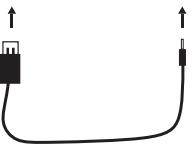


Manual Size: 196.5 x 80mm

Front

 <p>Instruction Manual</p> 	<h3>Introduction</h3> <p>This manual will help you operate the wireless speaker. You should first familiarize yourself with the Bluetooth functionality of your cell phone or other devices before using the wireless speaker.</p> <h3>Safty Rules</h3> <ol style="list-style-type: none">1. Please follow the rules depicted in this manual closely to ensure your safty. Before using this wireless speaker, we would strongly encourage you to read through this user manual2. Be wary of any edges, uneven surfaces, metal parts, accessories and its packing so as to prevent any possible injury or damage.3. Do not modify, repair or dismantle this wireless speaker. Doing so may result in fires, electric shocks, complete breakdown of this wireless speaker, etc. All of which, are not covered under warranty.4. Do not use the wireless speaker in a hazardous location.	<h3>Diagram</h3>  <p>Multi-Function Button -Answer Phone Call -Play / Pause Music -Power ON/OFF</p> <p>USB Charge Port</p> <p>Microphone</p> <p>Led Indicator</p> <h3>General Functions</h3> <table border="1"><thead><tr><th>Desired Result</th><th>Required Action</th></tr></thead><tbody><tr><td>Turn on & Enter pairing mode</td><td>Long press the button for 3 seconds</td></tr><tr><td>Pairing</td><td>You should use a Bluetooth function cell phone or other Bluetooth device and to perform pairing action</td></tr><tr><td>Turn off</td><td>Long press the button for 3 seconds</td></tr><tr><td>Charging</td><td>Plug the Micro USB cable to charging port of the device</td></tr><tr><td>Handsfree Calling</td><td>Answer the phone call by click the button when there is a phone call</td></tr></tbody></table>	Desired Result	Required Action	Turn on & Enter pairing mode	Long press the button for 3 seconds	Pairing	You should use a Bluetooth function cell phone or other Bluetooth device and to perform pairing action	Turn off	Long press the button for 3 seconds	Charging	Plug the Micro USB cable to charging port of the device	Handsfree Calling	Answer the phone call by click the button when there is a phone call
Desired Result	Required Action													
Turn on & Enter pairing mode	Long press the button for 3 seconds													
Pairing	You should use a Bluetooth function cell phone or other Bluetooth device and to perform pairing action													
Turn off	Long press the button for 3 seconds													
Charging	Plug the Micro USB cable to charging port of the device													
Handsfree Calling	Answer the phone call by click the button when there is a phone call													

Back

<h3>Pairing to cell phone or other device</h3> <p>To use your Wireless Earphone, you must first pair your earphone with a phone or a computer. Once your earphone is paired to a specific cell phone, they will remain paired and automatically recognize each other whenever they are within range.</p> <h3>Pairing to a phone and entertainment:</h3> <ul style="list-style-type: none">- Turn on your phone and ensure its Bluetooth function is activated- Turn on the earphone and go to the pairing mode- Search your Wireless devices on your phone by following the phone's user manual for more information.- After a few second the phone will list the "S530" as a discover device.- Select it and follow your phone instruction to select this pairing.- Your phone will confirm the pairing, and then press Yes/OK- Finally, select to connect with the earphone from your phone.	<h3>Charge your Earphone</h3> <p>Connect the earphone to USB Charger with the cable included. Red color LED indicator is ON when charge. The red color LED indicator turns blue when full charged. Make sure that your earphone is fully charged for at least 3 hours before initial use.</p> <p>Connect to USB charger Connect to the Charging port on speaker</p>  <p>Warning: You must select a qualified charger from a regular Manufacturer. You must charge the earphone if it has been not used for more than 1 month.</p>
--	--

Product Specification

Parameter	Value
Bluetooth Range	30 feet
Battery Capacity	50mAh
Charge Time	1 hour
Playing Time	3 hours



WWW.SOUNDBYVIBES.COM

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- -

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.