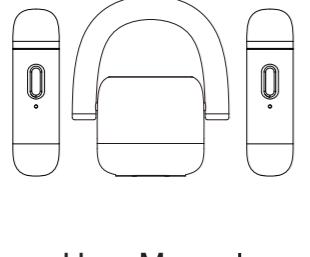
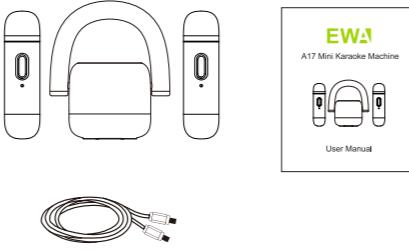
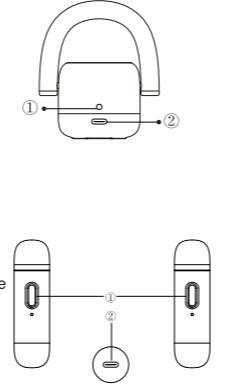
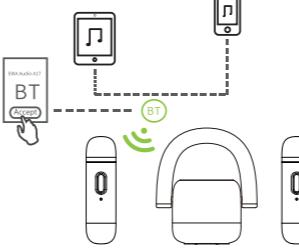


<p><b>EWA</b> A17 Mini Karaoke Machine</p>  <p>User Manual</p>	<p><b>Packaging</b></p> <p>Please make sure all the following parts are inside when unboxing.</p> <ul style="list-style-type: none"> <li>- EWA A17 Karaoke Speaker*1</li> <li>- Wireless Microphones*2</li> <li>- Charging Cable*1</li> <li>- User Manual*1</li> </ul> 	<p><b>Button / Interface</b></p> <p><b>Speaker</b></p> <p>① Control Button On/ Off: Press 3s to turn On/Off Play / Pause: Press once Next Song: Press twice Previous Song: Press three times</p> <p>② Charging Port</p> <p><b>Mic</b></p> <p>① Control Button On/ Off: Press 3s to turn On/Off Play / Pause: Press once Switch Sound Modes: Press Twice</p> <p>Switch sound effects by pressing the mic button (Mode 1 to Mode 5):</p> <ul style="list-style-type: none"> <li>• Shouting/Broadcast Mode</li> <li>• Male to Female Voice</li> <li>• Female to Male Voice</li> <li>• Monster Voice Mode</li> <li>• Baby Voice Mode</li> </ul> <p>② Charging Port</p> 	<p><b>Connect</b></p>  <p>Step 1: Connect the microphone to the speaker Turn on the mic, blue light blinks and automatically connects the speaker, the speaker emits beeping sound to indicate the connection is done, blue light is constantly on.</p> <p>Step 2: Connect the speaker to the device 1. Turn on the speaker. 2. Enable the Wireless Connection on your device. 3. Search and find "EWA Audio A17"</p> <p><b>Note:</b> Please remove the cap before using the microphone and keep it in a safe place to prevent children from swallowing it.</p>	<p><b>LED Indicator Guide</b></p> <ol style="list-style-type: none"> <li>1. Pairing Mode: Fast flashing blue</li> <li>2. Connect to a device: Steady blue</li> <li>3. Playing Mode: Slow flashing blue</li> <li>4. Charging: Red on</li> <li>5. Fully Charged: Red off</li> </ol> <p><b>Warm reminder:</b> Low battery: The speaker will make a "beep" sound every a few seconds. Please charge it.</p>
---	---	--	--	---

<p><b>Specifications</b></p> <p><b>Speaker Specifications</b></p> <p>Product Model: A17 Wireless Name: EWA Audio A17 Wireless version: 5.4 Wireless Distance: Around 10m Audio output: 5W Weight: 204g Dimensions: L81*W56*H94mm Charging Port: USB-C Charging Input: 5V=500mA Charging Time: Around 2.5h Battery Capacity: 1200mAh Playback Time: Around 4h (70% volume) Frequency: 100Hz-18kHz Protocols: HS/HF,A2DP,AVRCP,OPP</p> <p><b>Mic Specifications</b></p> <p>Wireless Distance: Around 10m Weight: 21g Dimensions: Φ24*H86.5mm Charging Input: 5V=200mA Usage Time: Around 4h Battery Capacity: 230mAh Charging Time: Around 1.5h Charging Port: USB-C</p>	<p><b>Troubleshooting</b></p> <ol style="list-style-type: none"> <li>1. The speaker is unable to be paired with the phone. Confirm if the speaker is in pairing mode, and if the Bluetooth on your phone is turned on. Then delete the product in the list, pair it with your phone again according to the User Manual.</li> <li>2. The speaker is unable to be turned on. Confirm the battery level. Charge the speaker if it is needed.</li> <li>3. Can the battery of the speaker be replaced? No, this is lithium polymer battery, which is irreplaceable.</li> <li>4. Can I use the speaker at a high volume for a long time? To extend the lifespan of the speaker, it is not recommended to play it at a high volume for a long time.</li> <li>5. The link between the speaker and the phone has been disconnected within 10 meters. Wireless is very sensitive to objects between the speaker and the connected device. Check if there are any metal or other objects that may affect connection within the effective distance.</li> <li>6. Cannot hear audio playing when the speaker is connected to the phone. Check whether the phone is already connected to wireless device. Make sure the volume is up on your phone.</li> </ol>	<p><b>Notice</b></p> <p>In order to use the speaker correctly and extend the life of the speaker, please read and observe carefully:</p> <ol style="list-style-type: none"> <li>1. Discarded packaging, batteries, old electronic products, please sort them and dispose of them properly.</li> <li>2. Do not put the product close to open-flames, such as lighted candles.</li> <li>3. Please keep away from strong magnetic and electric fields.</li> <li>4. Do not touch chemicals such as benzene, thinner, etc.</li> <li>5. Do not disassemble, repair, or modify by yourself.</li> <li>6. Do not hit the speaker severely.</li> <li>7. Do not use the product in extreme temperatures.</li> <li>8. Do not trample or squeeze the charging cable.</li> <li>9. When not in use for a prolonged period, please charge the speakers every 3 months to extend the life of battery.</li> </ol> <p><b>Warning:</b> This product contains small parts and is not suitable for children under 3 years old. Please be careful not to swallow.</p>	<p><b>FCC</b></p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>NOTE 1:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>- Reorient or relocate the receiving antenna.</li> <li>- Increase the separation between the equipment and receiver.</li> <li>- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p><b>NOTE 2:</b> Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	<p><b>J.Y.M. Electronics Co.,Ltd.</b> Shajing, Bao'an, Shenzhen 518000 info@ewacn.com www.ewacn.com +86-755-29918835</p> 
--	---	--	--	--

尺寸: 单页: 70\*85mm

材质: 105g铜版纸

颜色: 绿色专色号Pantone375C

扇形折