


# jamjar™

## Instruction Manual

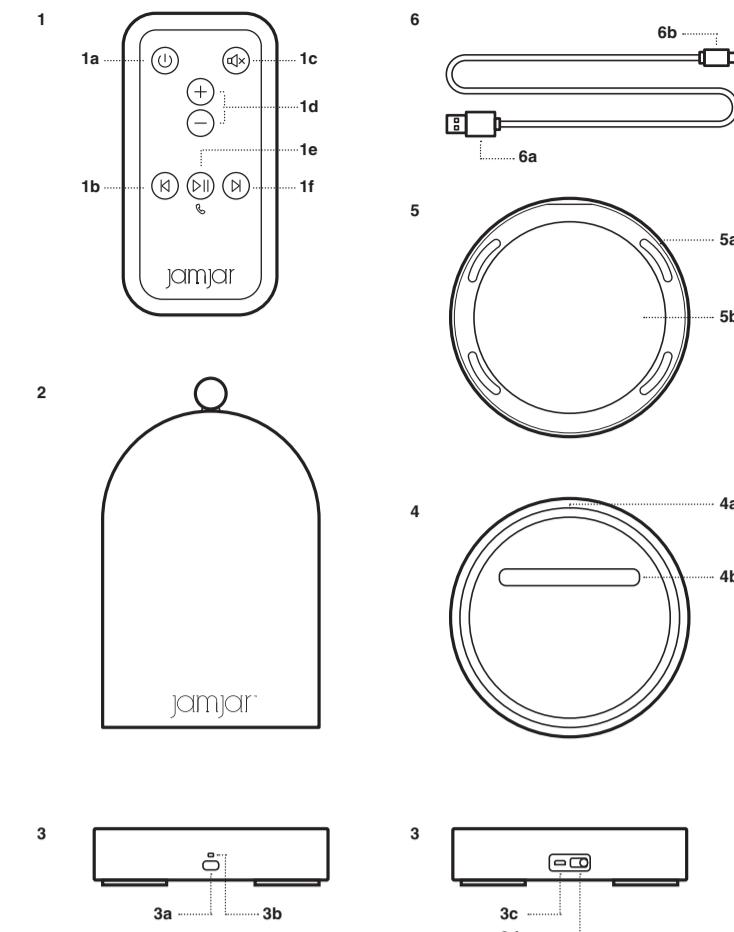

EN

### Set-up

1. Remove glass cover (2) carefully from packaging and place gently on a flat-surface.
2. Next, unbox the base unit (3), remote (1) and USB cable (6).
3. Place base unit (3) speaker-side (5b) down, ensuring the feet (5a) are placed on a flat-surface.
4. After connecting to Bluetooth (See: connecting to Bluetooth™), place smartphone in the holder insert (4b) on the top of the base unit (3).
5. Place glass cover (2) on top of the base unit (3), ensuring the cover fits into the grooves (4a) securely.
6. Jam Jar is now ready to use. Follow connection steps to discover how to get started playing music and audio files.

### Charging device

1. Connect the micro-USB (6b) to the base unit (3c).
2. Connect the USB (6a) to a computer or USB plug adaptor to charge.
3. Indicator light (3a) will flash red to indicate the device is charging.
4. Once fully-charged, the light (3a) will turn to a steady green color.
5. Disconnect the cable (6) once device is fully-charged.

### Connecting to Bluetooth™

1. Turn-on base unit (3) via ON/OFF switch (3d).
2. Front indicator light (3a) will flash to show Bluetooth™ is searching for devices to connect to.
3. Enable your device's Bluetooth™ and begin scanning process to find connectable devices.
4. Select JAMJAR from available devices to connect. Indicator light (3a) will turn from flashing to steady to indicate the device is connected. Jam Jar will emit an up-tone sound to confirm connection.
5. Jam Jar is now ready to play music or audio from your connected device.

### Disconnecting Bluetooth™

1. To disconnect from Jam Jar simply turn-off the device via the base unit switch (3d).
2. In order for other users to connect to Jam Jar, go to Bluetooth™ settings on the connected device and forget or turn-off Bluetooth™ manually from said device. A down-tone will be heard to confirm Bluetooth™ is disconnected. New users can connect via steps found in Connecting to Bluetooth™.

### Remote playback

1. If remote (1) is not working - check the batteries slot on the back of the remote (requires CR2025 3V battery) and replace if not operational.
2. Make sure to point the remote at the base unit (3) for best response.
3. To turn ON/OFF Jam Jar via the remote, press down on the power button (1a). Ensure the switch (3d) on the base unit (3) is set to the ON position for this function to work via the remote.
4. To turn the volume up or down, use the volume controls (1d).
5. Skip tracks using arrow indicators on the remote to go backwards (1b) or forwards (1f) to play different audio files.
6. Control the volume of the audio via the volume controls (1d); '+' increases volume and '-' decreases audio volume.
7. Mute tracks by pressing (1c) the mute icon in the top-right corner of the remote.

### Answering Calls

1. Using the remote control (1) it's possible to answer and disconnect calls made to the device whilst connected.
2. Press the play/pause button (1e) to answer an incoming call. Make sure to direct speaking towards the in-built microphone (3b) for best results.
3. To disconnect the call, simply press the play/pause button (1e) again. Be aware all calls will be played-back on loud speaker.

### ATTENTION:

- Jam Jar should be used in an indoor environment.
- Product features a large glass component (2) - be careful when handling and place it down on a flat and even surface when placing down.

### WARNING:

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;
- Rating plate information is located on bottom enclosure of the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

This is not a toy. Not suitable for children under 14. Keep item and cables out of reach of children at all times. Never charge longer than required. When charge light glows green, product is fully charged. Unplug immediately. Do not leave permanently on charge. For volume control, use phone controls. Use only the USB charging cable provided. Not for outdoor use. Dispose of with care! Correct disposal will ensure environmental protection and prevent any potentially harmful impact on people and the environment. Adhere to relevant legal requirements when disposing of this item. Do not attempt to de-construct speaker - electrical contents can be dangerous. Retain these instructions for reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Sound effects provided by: freesounds.org (Andy Rhode)

JAM JAR™  
LUKJU  
Luckles of London  
Unit 24/25 The Tay Building  
2a Westminister Avenue  
London NW10 3HA



# jamjar™

## Manual de Instrucciones

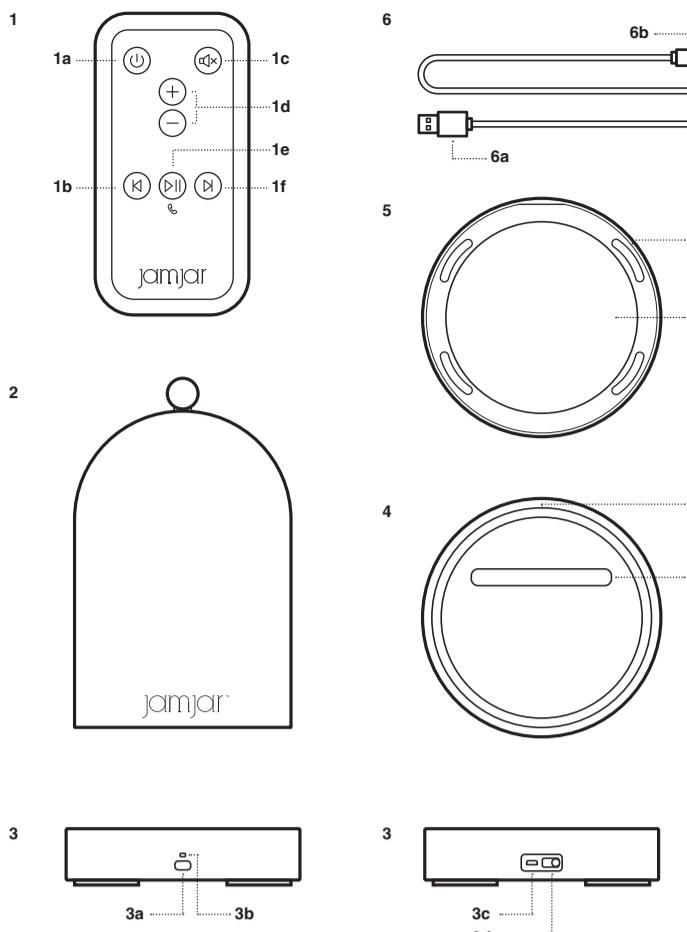

ES

### Set-up

1. Remove glass cover (2) carefully from packaging and place gently on a flat-surface.
2. Next, unbox the base unit (3), remote (1) and USB cable (6).
3. Place base unit (3) speaker-side (5b) down, ensuring the feet (5a) are placed on a flat-surface.
4. After connecting to Bluetooth (See: connecting to Bluetooth™), place smartphone in the holder insert (4b) on the top of the base unit (3).
5. Place glass cover (2) on top of the base unit (3), ensuring the cover fits into the grooves (4a) securely.
6. Jam Jar is now ready to use. Follow connection steps to discover how to get started playing music and audio files.

### Charging device

1. Connect the micro-USB (6b) to the base unit (3c).
2. Connect the USB (6a) to a computer or USB plug adaptor to charge.
3. Indicator light (3a) will flash red to indicate the device is charging.
4. Once fully-charged, the light (3a) will turn to a steady green color.
5. Disconnect the cable (6) once device is fully-charged.

### Connecting to Bluetooth™

1. Turn-on base unit (3) via ON/OFF switch (3d).
2. Front indicator light (3a) will flash to show Bluetooth™ is searching for devices to connect to.
3. Enable your device's Bluetooth™ and begin scanning process to find connectable devices.
4. Select JAMJAR from available devices to connect. Indicator light (3a) will turn from flashing to steady to indicate the device is connected. Jam Jar will emit an up-tone sound to confirm connection.
5. Jam Jar is now ready to play music or audio from your connected device.

### Disconnecting Bluetooth™

1. To disconnect from Jam Jar simply turn-off the device via the base unit switch (3d).
2. In order for other users to connect to Jam Jar, go to Bluetooth™ settings on the connected device and forget or turn-off Bluetooth™ manually from said device. A down-tone will be heard to confirm Bluetooth™ is disconnected. New users can connect via steps found in Connecting to Bluetooth™.

### Remote playback

1. If remote (1) is not working - check the batteries slot on the back of the remote (requires CR2025 3V battery) and replace if not operational.
2. Make sure to point the remote at the base unit (3) for best response.
3. To turn ON/OFF Jam Jar via the remote, press down on the power button (1a). Ensure the switch (3d) on the base unit (3) is set to the ON position for this function to work via the remote.
4. To turn the volume up or down, use the volume controls (1d).
5. Skip tracks using arrow indicators on the remote to go backwards (1b) or forwards (1f) to play different audio files.
6. Control the volume of the audio via the volume controls (1d); '+' increases volume and '-' decreases audio volume.
7. Mute tracks by pressing (1c) the mute icon in the top-right corner of the remote.

### Answering Calls

1. Using the remote control (1) it's possible to answer and disconnect calls made to the device whilst connected.
2. Press the play/pause button (1e) to answer an incoming call. Make sure to direct speaking towards the in-built microphone (3b) for best results.
3. To disconnect the call, simply press the play/pause button (1e) again. Be aware all calls will be played-back on loud speaker.

### ATTENTION:

- Jam Jar should be used in an indoor environment.
- Product features a large glass component (2) - be careful when handling and place it down on a flat and even surface when placing down.

### WARNING:

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;
- Rating plate information is located on bottom enclosure of the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

This is not a toy. Not suitable for children under 14. Keep item and cables out of reach of children at all times. Never charge longer than required. When charge light glows green, product is fully charged. Unplug immediately. Do not leave permanently on charge. For volume control, use phone controls. Use only the USB charging cable provided. Not for outdoor use. Dispose of with care! Correct disposal will ensure environmental protection and prevent any potentially harmful impact on people and the environment. Adhere to relevant legal requirements when disposing of this item. Do not attempt to de-construct speaker - electrical contents can be dangerous. Retain these instructions for reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Sound effects provided by: freesounds.org (Andy Rhode)

JAM JAR™  
LUKJU  
Luckles of London  
Unit 24/25 The Tay Building  
2a Westminister Avenue  
London NW10 3HA

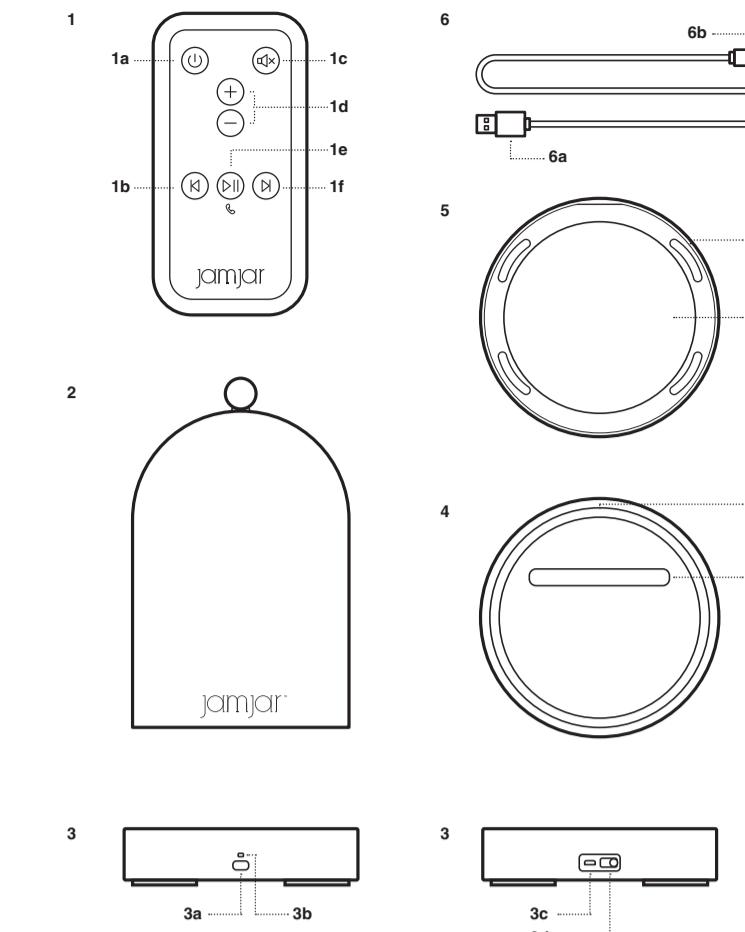

FR

### Set-up

1. Remove glass cover (2) carefully from packaging and place gently on a flat-surface.
2. Next, unbox the base unit (3), remote (1) and USB cable (6).
3. Place base unit (3) speaker-side (5b) down, ensuring the feet (5a) are placed on a flat-surface.
4. After connecting to Bluetooth (See: connecting to Bluetooth™), place smartphone in the holder insert (4b) on the top of the base unit (3).
5. Place glass cover (2) on top of the base unit (3), ensuring the cover fits into the grooves (4a) securely.
6. Jam Jar is now ready to use. Follow connection steps to discover how to get started playing music and audio files.

### Charging device

1. Connect the micro-USB (6b) to the base unit (3c).
2. Connect the USB (6a) to a computer or USB plug adaptor to charge.
3. Indicator light (3a) will flash red to indicate the device is charging.
4. Once fully-charged, the light (3a) will turn to a steady green color.
5. Disconnect the cable (6) once device is fully-charged.

### Connecting to Bluetooth™

1. Turn-on base unit (3) via ON/OFF switch (3d).
2. Front indicator light (3a) will flash to show Bluetooth™ is searching for devices to connect to.
3. Enable your device's Bluetooth™ and begin scanning process to find connectable devices.
4. Select JAMJAR from available devices to connect. Indicator light (3a) will turn from flashing to steady to indicate the device is connected. Jam Jar will emit an up-tone sound to confirm connection.
5. Jam Jar is now ready to play music or audio from your connected device.

### Disconnecting Bluetooth™

1. To disconnect from Jam Jar simply turn-off the device via the base unit switch (3d).
2. In order for other users to connect to Jam Jar, go to Bluetooth™ settings on the connected device and forget or turn-off Bluetooth™ manually from said device. A down-tone will be heard to confirm Bluetooth™ is disconnected. New users can connect via steps found in Connecting to Bluetooth™.

### Remote playback

1. If remote (1) is not working - check the batteries slot on the back of the remote (requires CR2025 3V battery) and replace if not operational.
2. Make sure to point the remote at the base unit (3) for best response.
3. To turn ON/OFF Jam Jar via the remote, press down on the power button (1a). Ensure the switch (3d) on the base unit (3) is set to the ON position for this function to work via the remote.
4. To turn the volume up or down, use the volume controls (1d).
5. Skip tracks using arrow indicators on the remote to go backwards (1b) or forwards (1f) to play different audio files.
6. Control the volume of the audio via the volume controls (1d); '+' increases volume and '-' decreases audio volume.
7. Mute tracks by pressing (1c) the mute icon in the top-right corner of the remote.

### Answering Calls

1. Using the remote control (1) it's possible to answer and disconnect calls made to the device whilst connected.
2. Press the play/pause button (1e) to answer an incoming call. Make sure to direct speaking towards the in-built microphone (3b) for best results.
3. To disconnect the call, simply press the play/pause button (1e) again. Be aware all calls will be played-back on loud speaker.

### ATTENTION:

- Jam Jar should be used in an indoor environment.
- Product features a large glass component (2) - be careful when handling and place it down on a flat and even surface when placing down.

### WARNING:

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;
- Rating plate information is located on bottom enclosure of the apparatus.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

This is not a toy. Not suitable for children under 14. Keep item and cables out of reach of children at all times. Never charge longer than required. When charge light glows green, product is fully charged. Unplug immediately. Do not leave permanently on charge. For volume control, use phone controls. Use only the USB charging cable provided. Not for outdoor use. Dispose of with care! Correct disposal will ensure environmental protection and prevent any potentially harmful impact on people and the environment. Adhere to relevant legal requirements when disposing of this item. Do not attempt to de-construct speaker - electrical contents can be dangerous. Retain these instructions for reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with