

# USER MANUAL

Model: S9N29R

**Read all instructions carefully before using your device.**

**KEEP THIS MANUAL FOR FUTURE REFERENCE.**

## SPECIFICATIONS

Model:	S9N29R
Rated voltage:	120V~, 60Hz
Rated input power:	1050W
Rated output power:	700W
Oven capacity:	0.7 ft <sup>3</sup>
Turntable diameter:	10 in
External dimensions:	17.3 in x 14.1 in x 10.1 in
Net weight:	21.8 pounds

## IMPORTANT SAFETY INSTRUCTIONS

 **WARNING:** FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, BURNS, ELECTRIC SHOCK, AND OTHER INJURY, OR DAMAGE.

- A) Read all instructions carefully before attempting to use the device.
- B) This device must be grounded—only connect it to a properly grounded outlet. For guidance, follow the GROUNDING INSTRUCTIONS.
- C) Install this appliance in a location based on the provided installation instructions.
- D) Use this device only for its intended use, as described in the manual.
- E) Do not operate this device if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. Be careful using the power cord and plug. To reduce the risk of fire, electric shock, or harm when using the power cord, follow these instructions:
  - Do not force the plug into a power outlet.
  - Do not expose the plug or cord to liquids.
  - The power cord could present a strangulation hazard. Keep out of reach of young children.
- F) This device should be serviced only by qualified service personnel. If your device needs service, please contact Customer Support.
- G) Do not cover or block any openings on the device.
- H) Do not store this device outdoors. Do not use this product near water—for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- I) Similarly, do not immerse the power cord or plug in water.
- J) Keep the device, its power cord, and plug in a well-ventilated area, away from heat sources and heated surfaces—especially when in use.

## SAVE THESE INSTRUCTIONS

 **WARNING:** CHOKING HAZARD—SMALL PARTS CONTAINED IN THE DEVICE OR PACKAGING MAY PRESENT A CHOKING HAZARD TO SMALL CHILDREN. KEEP OUT OF REACH OF CHILDREN.

## GROUNDING INSTRUCTIONS

This device must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This device is equipped with a cord featuring a grounding wire and plug. The grounding plug must be connected to an outlet that is properly installed and grounded.

**WARNING:** Improper use of grounding can result in risk of electric shock. Consult a qualified electrician or serviceperson if you do not completely understand these grounding instructions or if you are unsure if the appliance is properly grounded.

If an extension cord is necessary, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the device. The marked rating of the extension cord must be equal to or greater than the device's electrical rating.

### Countertop installation

Remove all packing material and accessories. Examine the device for any damage, such as dents or scratches. Do not install the device if it is damaged.

Ø Select a stable and level surface that provides enough open space for the intake and/or outlet vents.

- The minimum installation height is 34 in (86 cm).
- The back of the device should be placed against a wall, allowing for any necessary clearance. Leave a minimum clearance of 12 in (30 cm) above the device. A minimum clearance of 8 in (20 cm) is required between the device and any adjacent walls.
- Do not remove the legs from the bottom of the device.
- Blocking the intake and/or outlet openings may damage the device.
- Place the device as far as possible from all radios, TVs, and smart devices as possible. Operation of this device may cause interference to radio or TV reception.

✗ Plug your device into a standard grounded household outlet. Make sure the voltage and frequency are the same as the voltage and frequency on the rating label.

Ø Place your compatible Wi-Fi voice control device at least 12 in (30 cm) away from the device


**WARNING:** (A) Do not install the device over a heat-producing appliance. Installation near or over a heat source could damage the device and void its warranty. (B) Do not place the device near combustible materials or in an area where heat, moisture, or high humidity are produced. (C) Do not operate the device without placing the glass tray and turntable ring in their proper positions. (D) Make sure that the power supply cord is not damaged and that it doesn't run under the device or over any hot or sharp surfaces. (E) The outlet must be readily accessible so that it can be easily unplugged in the case of an emergency. (F) If the power cord is too short, contact a qualified electrician or service technician to install an outlet near the device. (G) Do not let the power cord hang over the edge of your counter or other surface. (H) For best operation, plug this device into its own electrical outlet to prevent any lights from flickering, blowing a fuse, or tripping the circuit breaker.

- I) A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- J) Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- K) If a long cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The extension cord must be a grounding-type 3-wire cord; and
  - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### Setting up Voice Control on your device

Your device can be controlled with voice command by using a Wi-Fi-enabled voice control device. To control your device using, you'll need to set up your device and connect to the Wi-Fi-enabled voice control device. To do so:

1. Download the latest version of the device app from the app store.
2. Plug the device into a power outlet that is grounded.
3. Open the device app, tap the Devices icon in the lower right. Follow the on-screen instructions to set up your device.

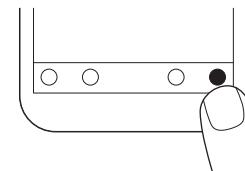

Once your device is set up, the device will beep and the LED will show the Wi-Fi icon (Wi-Fi signal icon) and display the local time in your location.

Once setup is complete, you can access the device Settings page through the Devices section of the app.

**Note:** It may take a few minutes for the LED to display the correct local time.

## OPERATION

1. Press and hold the **5** button on the device keypad for 4 seconds. The LED will display 00:00.
2. Enter the desired time in 12-hour format (example, **1 2 2 4** for 12:24 AM/PM).
3. Press the **START +30 SEC** button. The display will show the time.
4. To cancel the process at any time, press the **PAUSE Stop** button.
5. Repeat these steps to reset the clock.

**NOTE:** If the device is connected to the internet, time cannot be set using the keypad—the device will override manually set time.

### Care and maintenance

Make sure to unplug your device oven before cleaning.

- A) Clean the inside of the device after use with a slightly damp cloth.
- B) Remove the glass tray and the turntable shaft from inside the device and clean them in warm, soapy water.
- C) Carefully clean the doorframe, seal, and neighboring parts with a damp cloth.
- D) Do not use abrasive cleaners or sharp metal scrapers to clean the device door—they may scratch or shatter the glass.
- E) Clean the outside surfaces of the device with a damp cloth, making sure that water does not seep into the vents.

## TROUBLESHOOTING

<b>Interference</b>	Radio and TV may experience interference when the device is operating. This is normal and similar to the interference you may notice from small electrical appliances like mixers, vacuum cleaners, and electric fans. Refer to the FCC Statements section for actions to reduce interference.	
<b>Hot air coming out of the vents or steam on the door</b>	While cooking/reheating, food may steam. Most of it will dissipate from the vents, but some may accumulate on a cool surface such as the device door. This is normal.	
<b>Device won't start</b>	A) The power cord is not plugged in tightly	Unplug the cord, then plug it back in again after waiting 10 seconds.
	B) A fuse has blown or the circuit breaker has tripped	Replace the fuse or reset the circuit breaker (device repair should only be done by professionals).
	C) Trouble with the outlet	Test the outlet with other electrical appliances or call an authorized serviceperson for repair.
<b>Device does not heat</b>	The door is not closed properly	Close the door properly.
<b>Glass turntable makes noise when the device is operating</b>	The roller rest and/or bottom of the device may be dirty	Clean your device according to the provided cleaning instructions.
<b>Voice functionality is not working</b>	A) Voice control has not been setup	Refer to page 6 for instructions to setup voice control.
	B) Wi-Fi is not working	Check that your router is working or contact your internet service provider.
	D) Wi-Fi password has changed	Reset the device and set it up again.
	E) Wi-Fi access point or router has changed	Reset the device and set it up again.
	If the device does not display the correct time zone after setting it up for voice control, go to the device Settings page in the app to set the desired time zone for the device clock.	

# LEGAL & COMPLIANCE

## COMPLIANCE MARKINGS ON DEVICE

Certification and other device compliance markings are located on the housing of the device.

## FCC STATEMENTS

This device generates and uses radio frequencies applicable to industrial, scientific and medical equipment (ISM) under the rules of the Federal Communications Commission (FCC). If this appliance is not installed or used properly, and strictly in accordance with the manufacturer's instructions, it may cause interference to radio and television reception. This appliance complies with Part 18 of FCC rules.

The device and its plug comply with part 15 of the FCC rules. Operation of each of these is subject to the following two conditions: (1) it may not cause harmful interference and (2) it must accept any interference received, including interference that may cause undesired operation.

**Note:** This device and its plug have been tested and found to comply with the limits for a Class B digital device or external switching power supply, pursuant to part 15 of the FCC rules.

The requirements of Part 15 and Part 18 of the FCC rules are designed to provide reasonable protection against harmful interference in a residential installation. The appliance and its plug generate, use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off, the user is encouraged to try to correct the interference by one or more of the following measures:

- A) Reorient or relocate the receiving antenna of the radio or television.
- B) Increase the separation between the appliance, its plug, and the receiver of the radio or television.
- C) Connect the equipment/plug into an outlet on a circuit different from that to which the receiver of the radio or television is connected.
- D) Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to a product by the user that are not expressly approved by the party responsible for compliance could make the product no longer comply with the FCC Rules.

### Information regarding exposure to radio frequency energy

The output power of the radio technology used in the appliance and its plug is below the radio frequency exposure limits set by the FCC. This appliance and its plug should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

The appliance and the cord meet the FCC Radio Frequency Emission Guidelines and are certified with the FCC. Information on these products is on file with the FCC and can be found by inputting such product's FCC ID (which can be found on the regulatory label of the appliance) into the FCC ID Search form available at [transition.fcc.gov/oet/ea/fccid](http://transition.fcc.gov/oet/ea/fccid).

Please follow all applicable e-waste laws for the disposal of your device.