



MUSIC PUBLIC
K I N G D O M



INSTRUCTION MANUAL

WARNINGS

- This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non domestic use or in a commercial environment.

Ventilation

Allow at least a 10 cm gap all around the product.

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- This apparatus is not suitable for use in a tropical climate.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- To protect the environment, use local recycling facilities for battery disposal.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

SYMBOL






This mark is applied to show the equipment conforms to the US electromagnetic compatibility directives.

BEFORE USE

- Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.
- Avoid locations subject to vibrations, excessive dust, cold or moisture.
- Do not open the cabinet as this may result in electrical shock.
- When removing the power plug from the wall outlet, pull directly on the plug, NOT the cord.

PARTS & FEATURES

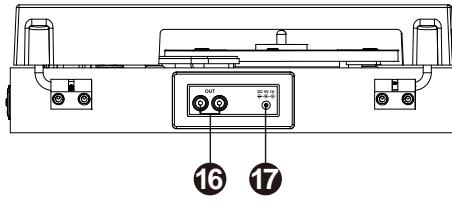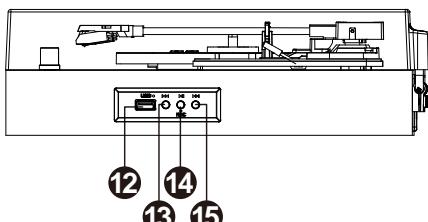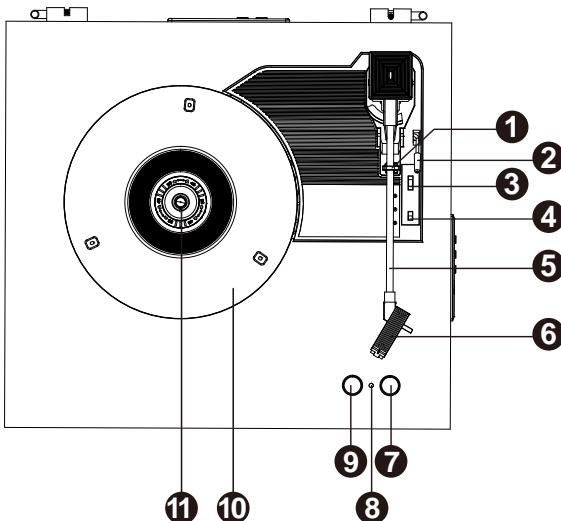

1. Tone arm clip
2. Lift lever
3. 33/45/78 RPM switch – This switch controls the RPM of the turntable platter.
4. AUTO STOP ON/OFF switch
5. Tone arm – The turntable comes with a ready to use pre-balanced tone arm and cartridge. The tone arm can be raised and lowered by hand, or by using the raise / lower lever. Please note that the tone arm needs to be moved away from resting position (on the arm clip) for the turntable motor to activate if auto stop is activated.
6. Cartridge
7. Mode selection knob – RCA Output / BT Output
8. LED Indicator
9. Power switch
10. Platter – Place your record here
11. 45 RPM adapter holder – Turn right to move 45 rpm adaptor up for playing 45 rpm vinyl. Turn left to move adaptor down to play 33 rpm vinyl
12. USB port
13. < button
14. REC / / REC button
15. / SPLIT button
16. RCA output jack to connect external speakers
17. DC port – Used to connect power adapter



To prevent possible hearing damage, do not listen at high volume levels for long periods.

CONNECTION

This unit can connect your speaker by AUDIO OUTPUT OR BT OUTPUT.estic use or in a commercial environment.

AUDIO OUTPUT



Plug the red and white connectors on one end of the supplied RCA cable into the corresponding Left/Right OUT jacks on the rear of the unit and other end of the cable to the RCA IN or AUX IN jacks of your other audio device.

1. Turn on your audio device.

2. Operate your audio device as usual, you can hear the sound from the unit.

BT OUTPUT MODE

Pairing with a BT speaker or BT headphones via BT connection:

When playing the record, rotate the knob to the BT out mode. The LED indicator will flash in blue color. Then, turn on the BT speaker or BT headphones and start pairing. If the connection is successful, the indicator light will stop flashing. Now, vinyl music will be transmitted to the speaker or headphones. Adjust the volume of the speaker or headphones.

PHONO MODE

1. Connect the power adapter to the unit and mains socket.
2. Turn the power knob to ON (right side)
3. Make sure connected Audio Output or BT Output to your speakers
4. Lift the buckle on the front of the turntable and open the lid.
5. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record.
 - **NOTE:** when playing a 45 rpm record, turn the 45 rpm adaptor up.
6. Open the tone arm clip to release the tone arm. Push the lift lever backward to raise the tone arm and gently move the tone arm to the desired position over the record. You can turn the pitch control knob to adjust the speed of the platter.
- The turntable will begin to spin when the arm is moved toward the record.
- Push the lift lever forward to lower the tone arm slowly onto the desired position on the record.
7. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished (For some vinyl records, it will stop when it does not come to the end OR it will not stop when it comes to the end.). If Auto Stop Control is turned OFF, record will NOT stop automatically when finished.

USB RECORDING MODE

Plug your USB stick into the USB port. During the music playback, long press the REC button and the indicator light will flash red and blue alternately. The vinyl recording starts.

- During recording, press the SPLIT button to separate the tracks.
- Long press the button REC to stop the recording.
- During recording, the folder ALBUM will be created and the recorded files will be REC_001.MP3REC_999.MP3.
- After recording, press once ►|| button to return phono mode.

P.S. USB recording can be available only when connecting speakers by RCA jack.

USB MODE

1. Plug your USB stick into the USB port.
- The indicator light will flash red.
- ►|| Press to play or pause.
- ↪◀ Press to play the previous track.
- ↪▶ Press to play the next track.

P.S. USB playback can be available only when connecting speakers by RCA jack.

REPLACING THE TURNTABLE STYLUS (NEEDLE)

Replacement Stylus

The stylus may become worn out, damaged or dirty depending on your use case. In such condition, replace the stylus.


For replacement stylus, you may purchase Crosley accessories model NP6 or NP10 from the market.

Removing the Stylus from the Cartridge

1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
2. Remove the stylus out of the guide pin.

Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
2. Push the stylus upward as in direction "C" until the stylus properly inserted into the guide pin.

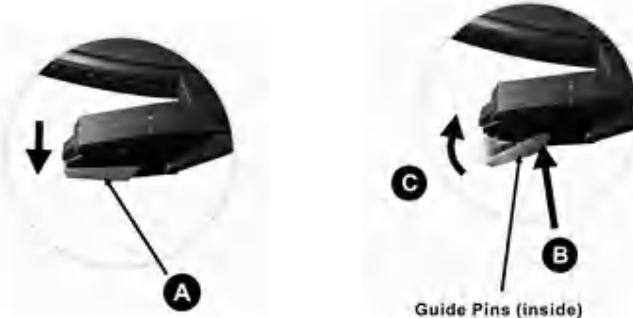

TIPS FOR BETTER TURNTABLE PERFORMANCE

- When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
- Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
- Frequently clean the needle tip by using a soft brush in back-to-front motion only.
- If you must use a needle cleaning fluid, use very sparingly.
- Gently wipe the turntable cover and housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable.
- Never apply harsh chemicals or solvents to any part of the turntable system.

SPECIFICATION

DC 5V=1A 

= :Direct Current

Frequency range: 2402MHz - 2480MHz

The period after which the equipment reaches automatically off mode: 15 minutes.

Á

Á

External power supply

Information published	Value and precision	Unit
Manufacturer's name or trade mark, commercial registration number and address	N/A	
Model identifier	N/A	
Input voltage	100-240	V
Input AC frequency	50/60	Hz
Output voltage	DC 5.0	V
Output current	1.0	A
Output power	5.0	W
Average active efficiency	5.0	%
Efficiency at low load (10 %)	64.10	%
No-load power consumption	0.07	W

	The device meets US national safety standards
	For indoor use only
	Alternating current
	Direct current

DISPOSAL



As a responsible retailer we care about the environment. As such we urge you to follow the correct disposal procedure for the product, packaging materials. This will help conserve natural resources and ensure that the materials are recycled in a manner that protects health and the environment.

You must follow laws and regulations about disposal. Waste electrical products must be disposed of separately from household waste when the product reaches the end of its life.

Contact the store where you bought the product and your local authority to learn about disposal and recycling.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.